Real Time DVR

SHR-2160/2162/2080/2082 User's Manual

Contents

ii **Safety Regulations**

iii **Before we start**

Standards Approvals

1 **Chapter 1 Overview**

1-1 1. Introduction

1-2 2. Features

1-3 3. Part Names and Functions

2 **Chapter 2 Installation**

2-1 1. Installation Environment Setup

2-2 2. Checking Product & Accessory

2-3 3. HDD Addition

3 **Chapter 3 Connecting with Other device**

3-1 1. Connecting Video, Audio, & Monitor

3-3 2. Connecting the Network

3-5 3. Connecting the USB

3-6 4. Connecting the Alarm Input/Output

3-9 5. Connecting the RS-485 Device

4 **Chapter 4 Live**

4-1 1. System Operation

4-2 2. Live Screen Mode

4-5 3. Live Channel Selection and Audio On/Off Setup

4-6 4. Freeze and Zoom

4-7 5. Event Monitoring

4-8 6. Spot-out Monitoring

5 **Chapter 5 Menu Setup**

5-1 Before Use

5-2 1. System

5-12 2. Camera

5-16 3. Monitoring

5-18 4. Recording Mode

5-20 5. Event Record Mode

5-25 6. Record Schedule

5-27 7. Backup

5-28 8. Network

5-32 9. Network Setup

6 **Chapter 6 PTZ Camera Control**

6-1 1. PTZ camera Control Mode

6-3 2. Basic Operation of PAN, TILT, & ZOOM

6-4 3. Preset Setup

6-6 4. Camera Menu Setup

6-7 5. Preset View

6-8 6. Other View

7 **Chapter 7 Recording**

7-1 1. REC (Normal Recording)

7-2 2. Schedule Recording

7-3 3. Event Recording

8 **Chapter 8 Search and Play**

8-1 Before Use

8-2 1. Calendar Search

8-3 2. Event Search

8-4 3. Date/Time Search

8-5 4. Go to First Search

8-6 5. Go to Last Search

8-7 6. Backup

8-8 7. Playback

9 **Chapter 9 Smart Viewer**

9-1 1. Introduction
9-2 2. Feature
9-3 3. PC Specification(Recommendation)
9-4 4. Smart Viewer Installation
9-7 5. Smart Viewer Program Execution
9-8 6. Smart Viewer Initial Screen
9-9 7. Setup Mode
9-39 8. Monitoring Mode
9-53 9. Search Mode

10 **Appendix**

10-1 1. Product Specification
10-4 2. The specification of HDD and peripheral device
10-5 3. Outline Drawings
10-7 4. Factory Default
10-9 5. SHR-2160/2162/2080/2082 Smart Viewer Frame Specification for the Playback
10-11 6. Troubleshooting(FAQ)

Safety Regulations

Please be sure to keep the following in mind for the right use of the product to pre-vent proprietary risk or damage.

- **Do not use multiple plugs at once.**
  - This may cause abnormal heat generation or fire
- **Do not put a vase, flowerpot, cup, cosmetics, medicine, or vessel with water around you.**
  - This may cause fire.
- **Do not bend the power cord forcibly nor put a heavy material on it.**
  - This may cause fire.
- **Do not touch the power plug with wet hands.**
  - This may cause electric shock.
- **Insert the power plug firmly enough not to shake.**
  - This imperfect connection may cause fire.
- **Keep the product off humidity, dust, or soot.**
  - This may cause fire or electric shock.
- **Do not put metals(coin, hair pin, metal piece, etc.) or inflammable materials(match, paper, etc.) in the ventilation hole.**
  - This may cause fire.
- **Keep the surrounding temperature between 0˚C to 40˚C and keep the product off humidity.**
  - This may cause breakdown.
- **Secure sufficient ventilation.**
  - This may cause abnormal operation due to high temperature.
- **Keep the product off direct ray of light or heat from the heating device**
  - This may cause fire.
- **Do not disassemble, repair, or remodel the product.**
  - This may cause fire, electric shock, or injury due to abnormal operation.
- **Do not pull out the power cord.**
  - This may destroy the power cord, eventually, cause fire or electric shock.

- **Plug out in the event of thunder or lightning.**
  - This may cause fire.
- **Keep your children off the battery after you take it out of the product. They tend to swallow it unconsciously.**
  - If your children swallow it, please see the doctor immediately.
- **Install the product at a safe place or attach the product to the wall or ceiling with a stand firmly enough not to fall to the ground.**
  - This may injure people.

Before we start

This User's Manual describes the basic usage of SHR-2160/2162/2080/2082.
This Manual contains all the matters necessary for using SHR-2160/2162/2080/2082 such as brief instruction, part name, function, connecting other equipment, and menu setup of SHR-2160/2162/2080/2082.

- SEC retains the copyright on this User's Manual.
- This User's Manual cannot be copied without SEC's prior written approval.
- We are not liable for any or all losses to the product incurred by your use of non-standard product or violation of User's Manual.
- If you want to open the system case to touch the inside, please consult with an expert who works for the shop where you bought the product.
- You may download open source codes from the following website.
  (See CCTV Part of http://www.sec.co.kr)

WARNING

[Battery]
Changing the battery in the SHR-2160/2162/2080/2082 incorrectly may cause an explosion therefore you must use the identical battery that is being used in the SHR-2160/2162/2080/2082.
The following are the specifications of the battery you are using now.

-Normal Voltage : 3V
-Normal Capacity : 220mAh
-Continuous Standard Load : 0.2mA
-Operating Temperature : -30 ~ +60˚C

[System Shutdown]
- Turning off the power while the product is in operation or doing so in non-permitted situations may cause damage to the HDD and the product. Please turn the power off according to the power off section of the system menu for safe powering off.
  You may want to install a UPS system for safe operation in order to prevent damage caused by an unex pected power stoppage. (Any questions concerning USPs, ask your USP retailer.)

[Operating Temperature]
- The guaranteed operating temperature of this device is 0°C~45°C (32°F~113 °F). The device may not work properly if run right after a long period of storage at a temperature below the guaranteed temperature. When using the device after long period of storage at a low temperature, place the device at room temperature for a while and run it.
  Especially for the built-in HDD in the device, its guaranteed temperature is 5°C~55°C (41°F~113 °F) therefore it may not work at a low temperature.

Standards Approvals

Note : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.
This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance whit the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Chapter 1
Overview

1 Introduction

The Digital Video Recorder(DVR) compresses the 16 channel(SHR-2162/2160) / 8 channel(SHR-2082/2080) of camera input data into the MPEG4 video file and the 4 channel of voice input data into the ADPCM audio file in the real time to record them in the Hard Disk or retrieve them from the Hard Disk simultaneously.
In addition, it transfers the Video/Audio out through a network in the real time and it is able to monitor the Video/Audio remotely by your PC.

2 Features

- 16 / 8 CH Composite Input Connectors
- NTSC / PAL Video Source Compatible
  (NTSC : SHR-2162, SHR-2160, SHR-2082, SHR-2080
  SHR-2162N, SHR-2160N, SHR-2082N, SHR-2080N
  PAL : SHR-2162P, SHR-2160P, SHR-2082P, SHR-2080P)
- Able to record the CIF sized (NTSC - 352 x 240 / PAL - 352 x 288) video at the speed of 120 ips (NTSC) / 100ips (PAL) (Image Per Second)
- 16 / 8 CH Loop Through Video Connectors
- Hard Disk Overwrite Mode
- Large Quantity Hard Disk Backup by USB2.0
- Backup function by the USB2.0 memory and exterior CD/DVD writer(SHR-2162 / 2082 supports the internal CD-RW.)
- Able to record, play, and transmit both audio and video files to Windows Network Viewer(Smart Viewer) simultaneously
- Video 16 / 8 channel record, play record function
- Variable Search Mode (Time/Date, Event, Camera)
- Variable Recording Mode (Time Lapse, Event, Schedule)
- Extended Hard Disk Connection (USB2.0)
- Alarm Interface function (Input : 16 / 8, Output:2, Reset:1)
- Remote Monitoring function by Windows Network Viewer(Smart Viewer)

3 Part Names and Functions

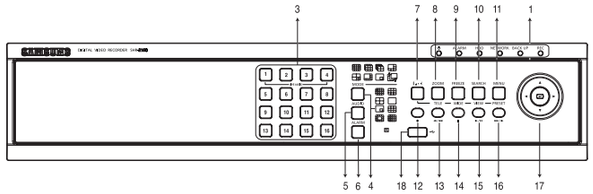

[SHR-2160]

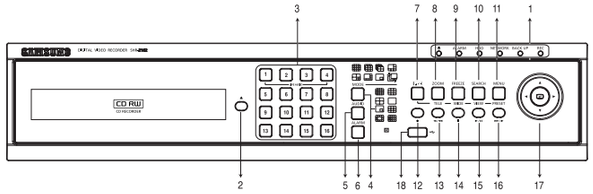

[SHR-2162]

No.	Name		Function		
❶	⏻	Power LED	Displays power on/off condition.		
	ALALRM	Alarm LED	lights on when an event occurs.		
	HDD	HDD Access LED	Displays Normal Access to HDD. Upon Access to HDD, LED repeats on and off.		
	NETWORK	Network LED	Displays both network connection and data transmission conditions.		
	BACK UP	Backup LED	Displays Back Up Mode.		
	REC	Rec LED	Indicates when in recording		
❷	⏏	Eject Button	Opens/closes the CD-RW tray. (SHR-2162 only)		
❸	1 … 16	Channel Button	Selects single channel while in live mode. Used as a numeral input key in numeral input mode.		
❹	MODE	Split Screen Selection Button	Live Mode		Displays 16 split screen.
					Displays 9-split screen (You can select Sub Mode 1 and 2 and auto sequence mode with the direction buttons)
					Displays 4-split screen (You can select Sub Mode 1,2,3, and 4, and auto sequence mode with the direction buttons)
					Displays 6 split screen.
					Displays 7 split screen.
					Displays 8 split screen.
					Displays PIP(Picture in Picture) screen.
					Single channel screen switches automatically following the set time on the menu.
					Displays each channel's play screen as a 16-split.
					Displays each channel's play screen as a 9-split.
					Displays each channel's play screen as a 4-split.
					Displays the play screen of one channel.

No.	Name		Function	
❹	MODE	Split Screen Selection Button	PB Mode	Displays the play screen of one channel and the live screen (small) of another channel as a PIP screen.
				Displays one channel play screen and an 8-channel live screen.
				Displays one channel play screen and an 12-channel live screen.
				Displays one channel play screen and an 16-channel live screen.
❺	AUDIO	Audio Setup Button	Sets the Audio On/Off.	
❻	ALARM	Audio Setup Button	Cancels the alarm when the Alarm button is selected.	
❼	PTZ	PTZ Button	Sets PTZ mode(ON/OFF).	
❽	ZOOM / TELE	ZOOM(TELE) Button	Sets digital zoom (x2) on single screen. Runs the TELE function in PTZ mode.	
❾	FREEZE / WIDE	FREEZE(WIDE) Button	Runs the FREEZE function in live mode. Runs the WIDE function in PTZ mode.	
❿	SEARCH / VIEW	SEARCH(VIEW) Button	Goes to the search select screen. Runs the Present View function in PTZ mode.	
⓫	MENU / PRESET	MENU (PRESET) Button	Either goes to the system menu screen or moves to the upper menu from the lower menu. Runs the Preset Setup function in PTZ mode.	
⓬	●	RECORD	Starts or ends the recording as the setup record setting in normal record mode.	
⓭	◀I/◀◀	Search Function Key	Fast/Step Reverse	Fast Rewind: Used for quick backward search while in play. (x2,x4,x8,x16,x32,x64) Step Rewind: Used for backward scene-by-scene search while in pause.
⓮	■		STOP	Ends search while in play.
⓯	▶/II		PLAY/PAUSE	Pauses and resumes the search screen while in play.
⓰	▶▶/I▶		Fast/Step Forward	Fast Forward : Used for quick forward search while in play. (x2,x4,x8,x16,x32,x64) Step Forward : Used for forward scene-by-scene search when in pause.
⓱		Direction Button Key	◀	Used for changing settings or for moving the cursor up/down/left/right in live mode and on the menu and search screens.
			▲	
			▶	
			▼	
			↵	Shows the cursor for the channel selection in live mode or used as the select button for menu setup.
⓲	USB	USB Port	Connects the USB type device.	

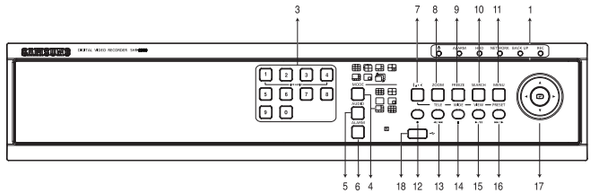

[SHR-2080]

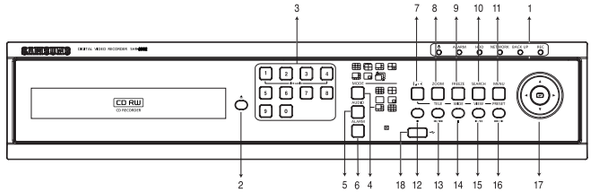

[SHR-2082]

No.	Name		Function		
❶	⏻	Power LED	Displays power on/off condition.		
	ALALRM	Alarm LED	lights on when an event occurs.		
	HDD	HDD Access LED	Displays Normal Access to HDD. Upon Access to HDD, LED repeats on and off.		
	NETWORK	Network LED	Displays both network connection and data transmission conditions.		
	BACK UP	Backup LED	Displays Back Up Mode.		
	REC	Rec LED	Indicates when in recording		
❷	⏏	Eject Button	Opens/closes the CD-RW tray. (SHR-2082 only)		
❸	1 … 0	Channel Button	Selects single channel while in live mode. Used as a numeral input key in numeral input mode.		
❹	MODE	Split Screen Selection Button	Live Mode		Displays 9 split screen.
					Displays 4-split screen (You can select Sub Mode 1 and 2 and auto sequence mode with the direction buttons)
					Displays 6 split screen.
					Displays 7 split screen.
					Displays 8 split screen.
					Displays PIP(Picture in Picture) screen.
					Single channel screen switches automatically following the set time on the menu.
					Displays each channel's play screen as a 9-split.
					Displays each channel's play screen as a 4-split.
					Displays the play screen of one channel.

No.	Name		Function	
			PB Mode	Displays the play screen of one channel and the live screen (small) of another channel as a PIP screen.
				Displays one channel play screen and an 5-channel live screen.
				Displays one channel play screen and an 15-channel live screen.
❺	AUDIO	Audio Setup Button	Sets the Audio On/Off.	
❻	ALARM	Audio Setup Button	Cancels the alarm when the Alarm button is selected.	
❼	PTZ	PTZ Button	Sets PTZ mode(ON/OFF).	
❽	ZOOM / TELE	ZOOM(TELE) Button	Sets digital zoom (x2) on single screen. Runs the TELE function in PTZ mode.	
❾	FREEZE / WIDE	FREEZE(WIDE) Button	Runs the FREEZE function in live mode. Runs the WIDE function in PTZ mode.	
❿	SEARCH / VIEW	SEARCH(VIEW) Button	Goes to the search select screen. Runs the Present View function in PTZ mode.	
⓫	MENU / PRESET	MENU (PRESET) Button	Either goes to the system menu screen or moves to the upper menu from the lower menu. Runs the Preset Setup function in PTZ mode.	
⓬		RECORD	Starts or ends the recording as the setup record setting in normal record mode.	
⓭	◀I/◀◀	Search Function Key	Fast/Step Reverse	Fast Rewind: Used for quick backward search while in play. (x2,x4,x8,x16,x32,x64) Step Rewind: Used for backward scene-by-scene search while in pause.
⓮	■		STOP	Ends search while in play.
⓯	▶/II		PLAY/PAUSE	Pauses and resumes the search screen while in play.
⓰	▶▶/I▶		Fast/Step Forward	Fast Forward: Used for quick forward search while in play. (x2,x4,x8,x16,x32,x64) Step Forward: Used for forward scene-by-scene search when in pause.
⓱		Direction Button Key	◀	Used for changing settings or for moving the cursor up/down/left/right in live mode and on the menu and search screens.
			▲	
			▶	
			▼	
			↵	Shows the cursor for the channel selection in live mode or used as the select button for menu setup.
⓲	USB	USB Port	Connects the USB type device.	

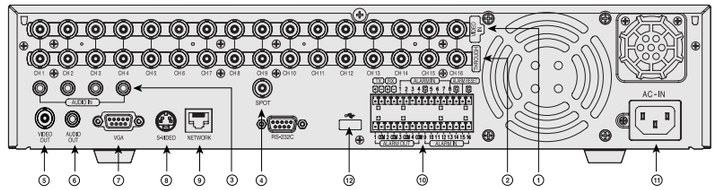

[SHR-2160/2162]

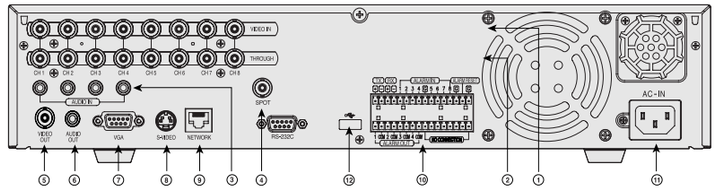

[SHR-2080/2082]

⚠ Caution

Do not play DVR on the carpet or other soft material to prevent clogging of the air ventilator. To play DVR on the cabinet or rack, be sure to check the ventilation condition.

No.	Name	Function
❶	**VIDEO IN**	Composite Video Signal Input Port (BNC Style Connector)
❷	**THROUGH**	You may use THROUGH port to transmit a video signal to the other video equipment.
❸	**AUDIO IN**	Audio Signal Input Port (RCA Jack)
❹	**STOP**	The port (BNC style connector) for SPOT out output.
❺	**VIDEO OUT**	Composite Video Signal Output Port (BNC Style Connector)
❻	**AUDIO OUT**	Audio Signal Output Port (RCA Jack)
❼	**VGA**	VGA Video Signal Output Port
❽	**S-VIDEO**	S-VIDEO Video Signal Output Port
❾	**NETWORK**	Network Connection Port
❿	**ALARM**	- ALARM IN 1~16 (SHR-2160/2162) : Alarm Input Port - ALARM IN 1~8 (SHR-2080/2082) : Alarm Input Port - ALARM RESET IN : Alarm Reset Port - ALARM OUT1~4 : Alarm Output Port - TX+, TX-, RX+, RX- : RS-485 Communication
⓫	**AC-IN**	AC 110-220V Power Socket Support
⓬	**USB**	USB connection Port

KEY	Function
RECORD	Starts or ends the recording as the setup record setting in normal record mode.
CD EJECT	Opens/closes the CD-RW tray. (SHR-2082/2162)
0 ~ 9	Selects single channel while in live mode. Used as a numeral input key in numeral input mode. (For channel selection method, refer to footnote 1)
REC LOCK	Locks the record key.
PANIC	Non-function key.
AUDIO	Sets audio on/off.
MODE	Selects split-screen.
ALARM	Cancels the alarm while the alarm is going off.
◂◂	FR (fast reverse) : used for quick backward search while in play. (x2,x4,x8,x16,x32,x64)
■	STOP : ends search during playback.
▸II	Play/Pause : pauses and resumes the search screen while in play.
▸▸	FF (fast forward) : used for quick forward search while in play. (x2,x4,x8,x16,x32,x64)
MENU	Either goes to the system menu screen or moves to the upper menu from the lower menu.
ZOOM	Sets digital zoom (r2) on single screen.
FREEZE	Runs the FREEZE function in live mode.
SEARCH	Goes to the search select screen.
▲	Used for changing settings or for moving the cursor up/down/left/right in live mode and on the menu and search screens.
▼	
◂	
▸	
↵	Shows the cursor for the channel selection in live mode or used as the select button for menu setup.
PTZ	Sets PTZ mode(ON/OFF).
SYS ID	Confirms system and remote control ID and changes the remote control ID. (For how to change the remote control ID, refer to footnote 2)
TELE	Runs the TELE function in PTZ mode.
WIDE	Runs the WIDE function in PTZ mode.
VIEW	Runs the VIEW function in PTZ mode.
PRESET	Runs the PRESET function in PTZ mode.

- Remote Control Setup : From the setup menu: System → Remote Control Device → Remote Control : On/Off
- System ID Setup : From the setup menu : System → Remote Control Device → System ID

Footnote 1. How to operate the number keys (channel select)

Channel	How to operate the keys
Channel 1	Press the 1 button.
Channel 2	Press the 2 button.
Channel 3	Press the 3 button.
Channel 4	Press the 4 button.
Channel 5	Press the 5 button.
Channel 6	Press the 6 button.
Channel 7	Press the 7 button.
Channel 8	Press the 8 button.
Channel 9	Press the 9 button.
Channel 10	Press the 0(10+) button, release, and press the 0 button again within 3 seconds. Or press the 0(10+) button, release, and wait 3 seconds.
Channel 11	First, press the 0(10+) button, release, and then press the 1 button again within 3 seconds.
Channel 12	First, press the 0(10+) button, release, and then press the 2 button again within 3 seconds.
Channel 13	First, press the 0(10+) button, release, and then press the 3 button again within 3 seconds.
Channel 14	First, press the 0(10+) button, release, and then press the 4 button again within 3 seconds.
Channel 15	First, press the 0(10+) button, release, and then press the 5 button again within 3 seconds.
Channel 16	First, press the 0(10+) button, release, and then press the 6 button again within 3 seconds.

Footnote 2. Changing the Remote Control ID

As you press the SYS ID key, input the desired 2-number ID in order (Remote default ID : 00)
For example, if you want to change the remote control ID to 08 : As you press the SYS ID key, input 0 → 8 in order.
After inputting, press the SYS ID key again in order to verify the ID is 08 then change is completed.

Chapter 2
Installation

1 Installation Environment Setup

Do not play DVR on the carpet or other soft material to prevent clogging of the air ventilator.
To play DVR on the cabinet or rack, be sure to check the ventilation condition.

You should pay attention to the following before you use the product.

1. Do not use it outdoor.

2. Do not let water or liquid in the connection part or the product itself.

3. Do not impose excessive shock or force.

4. Do not pull out the power plug unreasonably.

5. Do not disassemble the product on your own.

6. Do not exceed the rated input or output range.

7. Use certified power cord only.

8. For the products with an input ground, use a power plug that has a ground.

2 Checking Product & Accessory

Upon delivery of a product, you shall unwrap the product and put it on the even floor or where you want to use it. Then you shall check if the following items are in it.

- Main Body
- User's Manual
- One Power Cord
- Two Brackets
  - Brackets are used to attach the product to the rack.
- Smart Viewer Software CD (PDF Manual included)
- Special Screws
  SHR-2160/2080 : 12
  SHR-2162/2082 : 4
  - Please keep special screws well to be used for HDD addition.
- 2 EA of RS-485/Alarm Terminal Block
- Remote Control

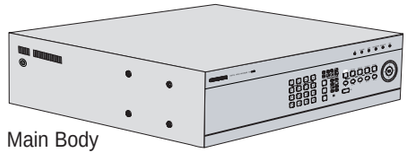

Main Body
SHR-2160

Main Body
SHR-2162

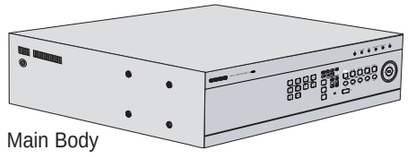

Main Body
SHR-2080

Main Body
SHR-2082

Power Cord

CD

Bracket

User's Manual



Screw

RS-485/Alarm
Terminal Block

Remote
Control

3 HDD Addition

SHR-2160/2080 HDD

The user can add up to 3 HDDs to this product. However, there are many factors that can cause electrical shock, accidents, and malfunctioning of the device inside of the product. When the user does not correctly install or apply the proper settings, the device may not recognize the HDD or the device will not run. Therefore, before adding any HDDs, it is recommended that the user contacts a specialist where you purchased the product.

[Things to consider when adding an HDD]

- When adding HDDs, pay attention so that the cable doesn't get caught between unsuitable places or the cable's insulation doesn't come off.
  (This may cause a malfunction or fire.)
- When adding HDDs, be careful not to receive any injury from the pointed edges inside the product.
- Pay attention so as not to lose the disassembly screws or accessories. If the screws or accessories are not put together, the product will either malfunction or won't be able to operate.

[How to Add an HDD]

1. To remove the product's cover, take out the screws on the left and right sides (5 spots each) and on the back (1 spot).

2. Remove the cover from the product. (Remove the cover by first lifting its back part upward after sliding the cover slightly backward.)

3. There is a bracket (bracket-HDD) mounted on the right and left sides where you can mount the HDD, and you have to remove the screws that are holding the bracket that you want to mount an HDD onto.

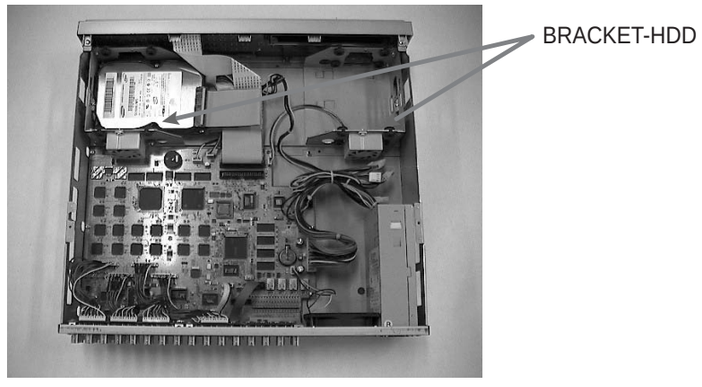

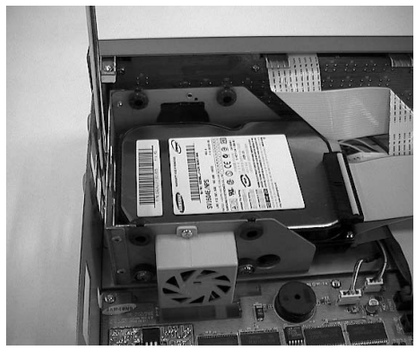

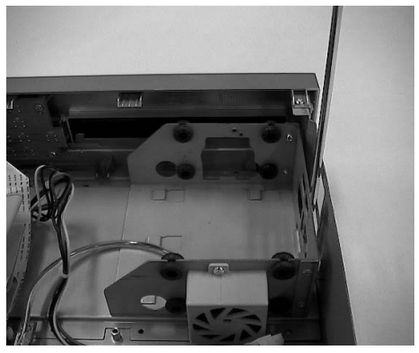

4. Remove the bracket-HDD from the product by separating the power supply cable, signal transmission cable (IDE cable), and fan cable then pulling it toward the center of the product to separate its fixed part from the bottom.

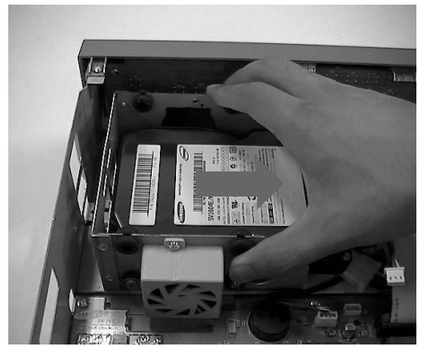

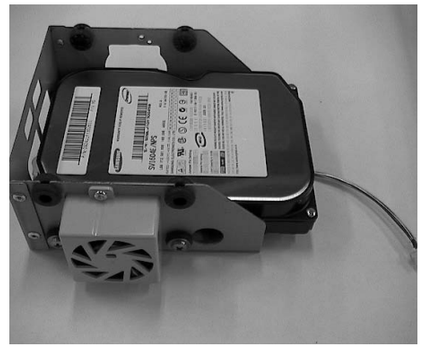

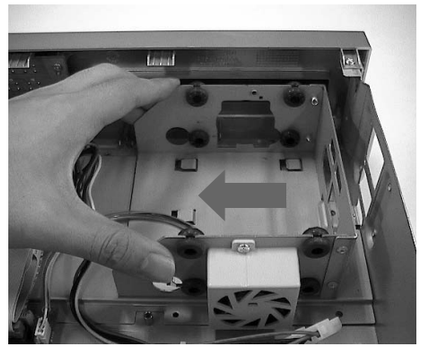

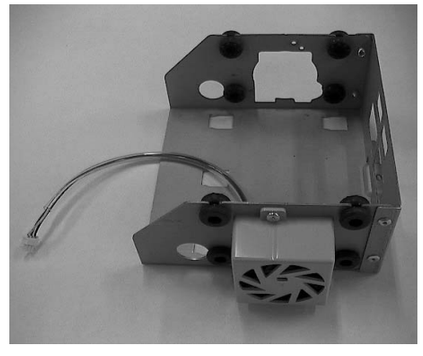

5. When mounting an additional HDD, the primary master has to be mounted.
   Mount the HDD you want to add after setting the master/slave jumpers in the proper order.

When adding one – Primary slave (add one additionally on the top of the bracket that has a built-in HDD when coming out of the factory.)

When adding two – Secondary master (mount under the bracket that is empty when coming out of the factory.)

When adding three – Secondary Slave (mount on the top of the bracket that is empty when coming out of the factory.)

Mount the HDD to the bracket-HDD with (A)SCREW-SPECIAL (BWH,6-32UNC,L10.5) (4 spots) that was provided as an accessory.

6. Re-mount the bracket-HDD mounted with the HDD's to the place where it was separated from. Place the bracket-HDD so that all five mounting spots on the bottom and the bracket-HDD's mounting holes are perfectly aligned, then slide it toward the outside of the product and tighten the screws.

7. Make sure that the bracket-HDD is mounted stably inside of the product, then connect the power supply cable, signal transmission cable (IDE cable), and fan cable to the HDD.

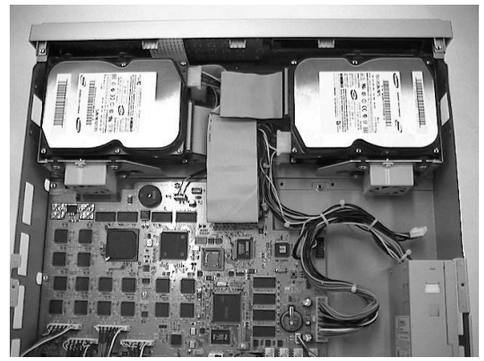

8. Check if there is any problem with connector or wiring inside of the product for connecting and mounting then close the cover.

9. Tighten cover mounting screws. (The left and right side each has 5 spots and back side has 1 spot)

⚠ *Caution*

1. When mounting an additional HDD, the primary master has to be mounted.
When adding one – Primary slave (mount on the top of the bracket that has a built-in HDD when coming out of the factory.)
When adding two – Secondary master (mount under the bracket that is empty when coming out of the factory.)
When adding three – Secondary Slave (mount on the top of the bracket that is empty when coming out of the factory.)
2. Mount the HDD you want to add after setting the master/slave jumpers in the proper order.

SHR-2162/2082 HDD

The user can add up to 2 HDDs to this product. However, there are many factors that can cause electrical shock, accidents, and malfunctioning of the device inside of the product. When the user does not correctly install or apply the proper settings, the device may not recognize the HDD or the device will not run. Therefore, before adding any HDDs, it is recommended that the user contacts a specialist where you purchased the product.

[Things to consider when adding an HDD]

- When adding HDDs, pay attention so that the cable doesn't get caught between unsuitable places or the cable's insulation doesn't come off.
  (This may cause a malfunction or fire.)
- When adding HDDs, be careful not to receive any injury from the pointed edges inside the product.
- Pay attention so as not to lose the disassembly screws or accessories.
  If the screws or accessories are not put together, the product will either malfunction or won't be able to operate.

[How to Add a HDD]

1. To remove the product's cover, take out the screws on the left and right sides (5 spots each) and on the back (1 spot).

2. Remove the cover from the product. (Remove the cover by first lifting its back part upward after sliding the cover slightly backward.)

3. There is a bracket (bracket-HDD) mounted on the right and left sides where you can mount the HDD, and you have to remove the screws that are holding the bracket that you want to mount an HDD onto.

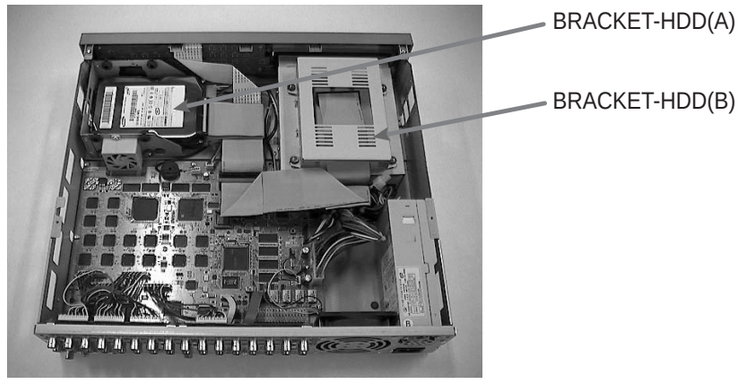

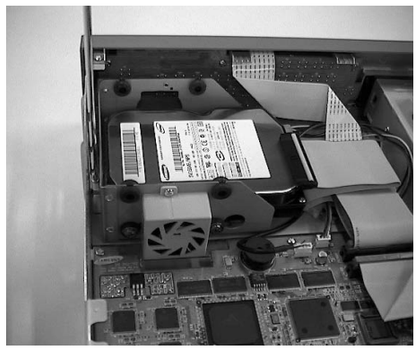

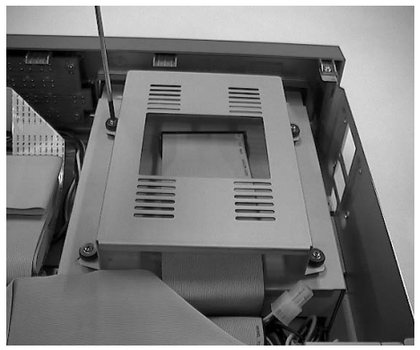

4. Remove the bracket-HDD (A) from the product by separating the power supply cable, signal transmission cable (IDE cable), and fan cable then pulling it toward the center of the product to separate its fixed part from the bottom. Remove the bracket-HDD (B) by lifting it up after removing the screws.

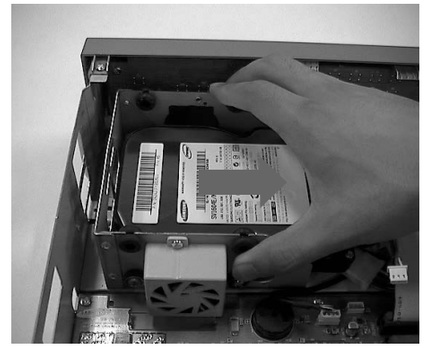

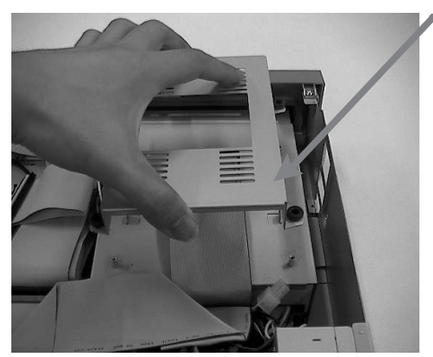

5. When mounting an additional HDD, the primary master has to be mounted.
   In general, HDD should be installed as the primary master of IDE, and the CD-RW drive should be installed as the secondary master of IDE.
   Mount the HDD you want to add after setting the master/slave jumpers in the proper order.

When adding one - Primary slave (mount on the top of the bracket that has a built-in HDD when coming out of factory.)

When adding two - Secondary Slave (mount to the upper bracket of the built-in CD-RW.)

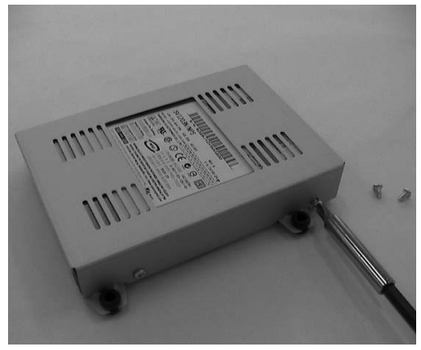

Mount the HDD to the bracket-HDD with (A)SCREW-SPECIAL (BWH,6-32UNC,L10.5) and (B)SCREW-TAPTITE (BH,+,S,M3,L6,ZPC) (4 spots) that was provided as an accessory. (The screws have to be tightened so that it doesn't vibrate loose.)
❇ (B)SCREW-MACHINE is provided when purchasing the HDD.

6. Re-mount built-in HDD bracket-HDD to the place where it was separated from. Place the bracket-HDD (A) so that all the five mounting spots on the bottom and the bracket-HDD's mounting holes are perfectly aligned, then slide it toward the outside of the product and tighten the screws. For the bracket-HDD (B), place it so that all the four mounting spots on the bottom and the bracket-HDD's mounting holes are perfectly aligned, then tighten the screws.)

7. Make sure that the bracket-HDD is mounted stably inside of the product, then connect the power supply cable, signal transmission cable (IDE cable), and fan cable to the HDD.

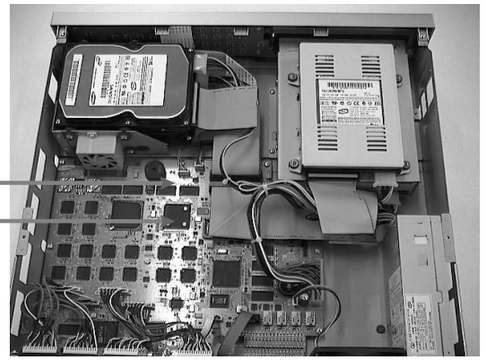

8. Check if there is any problem with connector or wiring inside of the product for connecting and mounting then close the cover.
9. Tighten cover mounting screws. (The left and right side each has 5 spots and back side has1 spot)

Caution

1. When mounting an additional HDD, the primary's master has to be mounted.
In general, HDD should be installed as the primary master of IDE, and the CD-RW drive should be installed as the secondary master of IDE.
When adding one - Primary slave (add one additionally on the top of the bracket that has a built-in HDD when coming out of factory.)
When adding two - Secondary Slave (mount to the upper bracket of the built-in CD-RW.)
2. Mount the HDD you want to add after setting the master/slave jumpers in the proper order.

Chapter 3 Connecting with other device

1 Connecting the Video, Audio, and Monitor

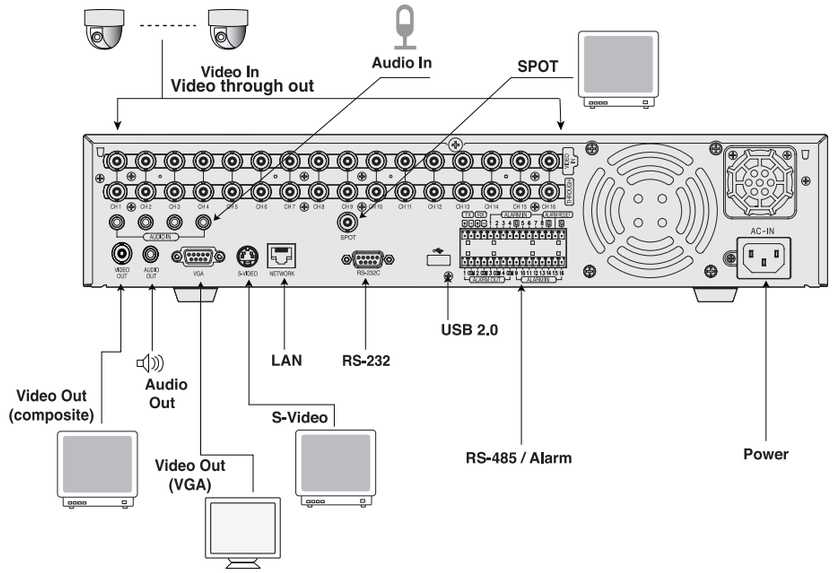

[SHR-2160/2162]

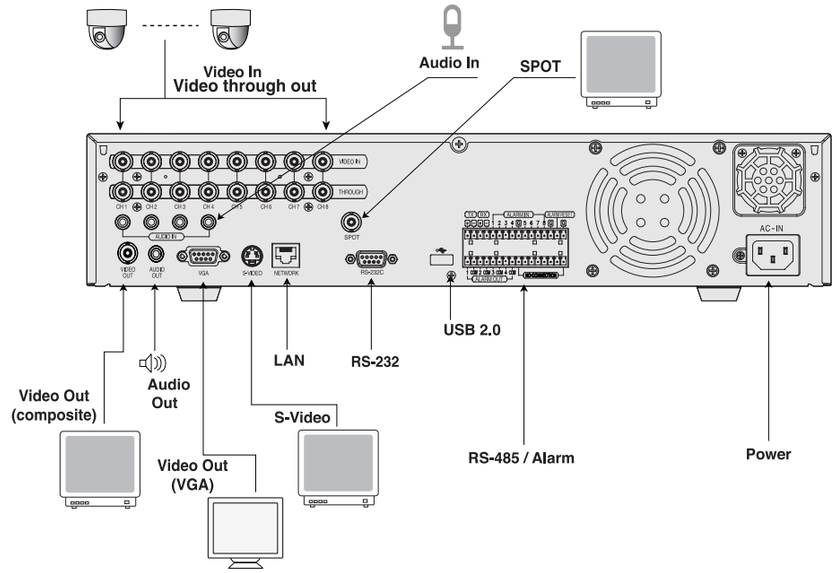

[SHR-2080/2082]

2 Connecting the Network

- Connecting to Internet through Ethernet(10/100BaseT)

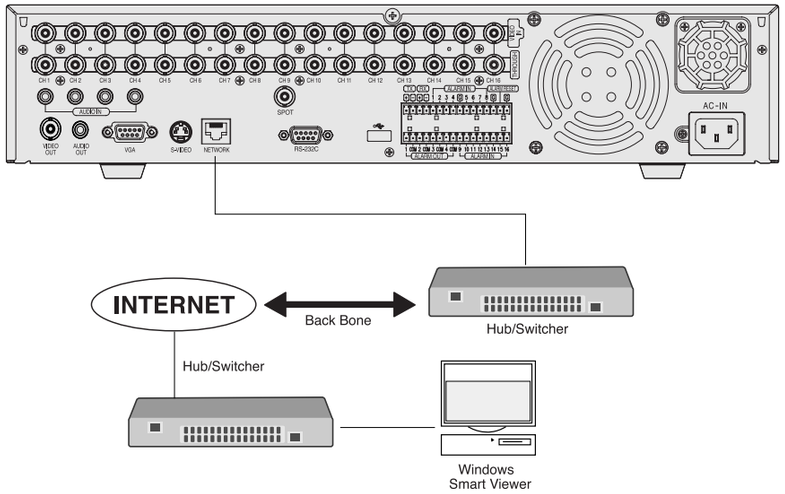

[SHR-2160/2162]

- Connecting to Internet through ADSL

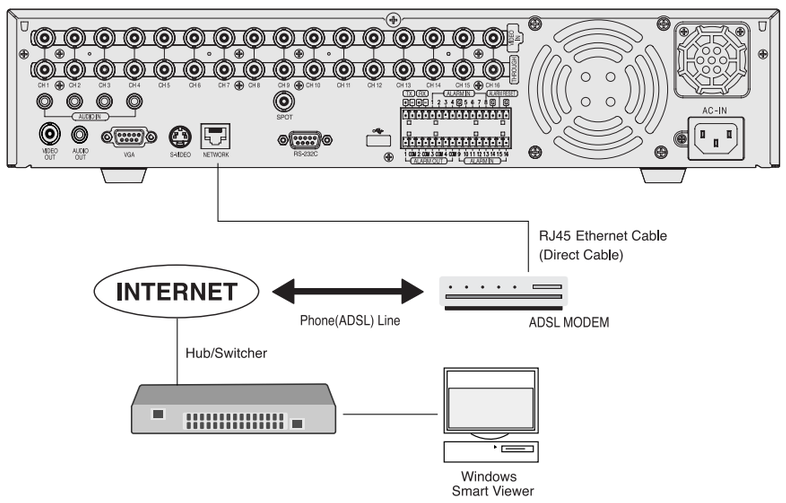

[SHR-2160/2162]

- Connecting to Internet through Ethernet(10/100BaseT)

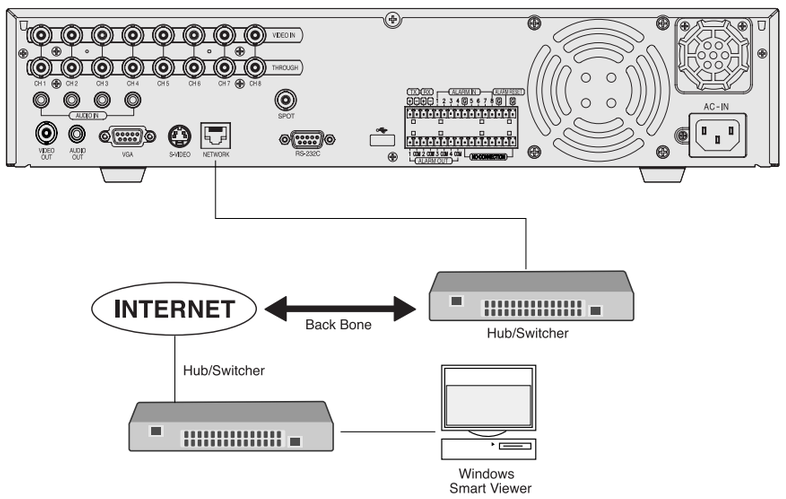

[SHR-2080/2082]

- Connecting to Internet through ADSL

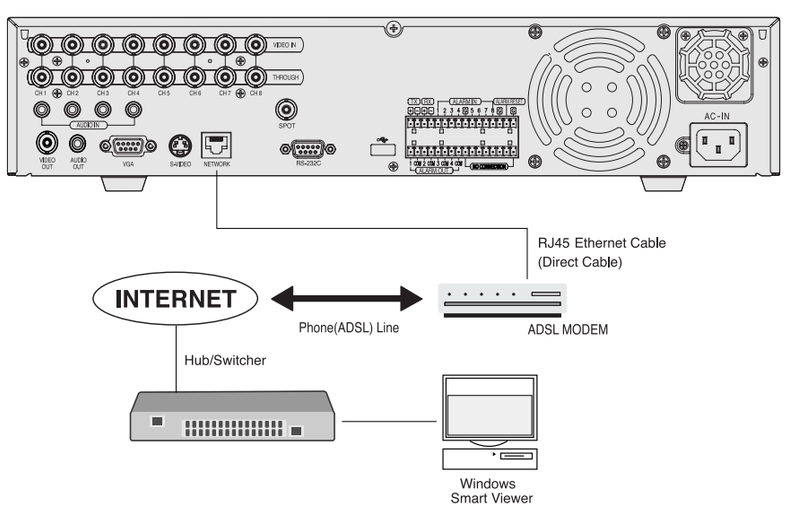

[SHR-2080/2082]

3 Connecting the USB

1. There are two USB connecting ports on the front and back of SHR-2160/2162/2080/2082.
2. USB Hard Disk, USB CD/DVD, and USB Memory are connected through the front and back ports of SHR-2160/2162/2080/2082.
3. Only one USB device can be connected with each USB connecting port.
4. If the USB HDD is connected to the system, it should be detected and set through Menu - System - HDD setup before the operation.
5. It supplies the function of HOT PLUG, which connects/removes the USB device, during the system operation.

Note

See 5-8 System (HDD Setup) of User's Manual.

⚠ Caution

- Wait until the USB device connected by hot plug is stabilized enough and click CONNECT in SHR-2040 / 2041 / 2042 MENU before use.
- USB port on the front and back of SHR-2160/2162/2080/2082 cannot be connected to same kinds of USB device. (For example, the case is that 2 CD-RW devices or 2 USB Memories are used by connection with the front and back of system.)
- If you use the USB Memory on SHR-2160/2162/2080/2082, it should be composed of the format being supported by SHR-2160/2162/2080/2082. Although you format it with FAT32 format on PC, it will be re-formatted, in case of (when) connecting with SHR- 2160/2162/2080/2082.

⚠ Caution

- The hard disk of USB device should be set to Master.

4 Connecting the Alarm Input/Output

The Alarm IN/OUT port in the back of SHR-2160/2162 is composed of the following elements.

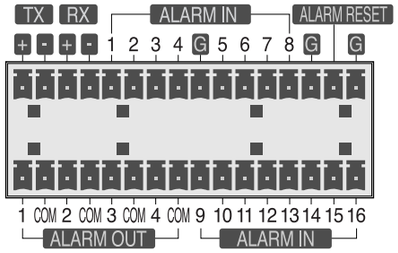

- ALARM IN/OUT Connection

	Name	Function
1	- ALARM IN1 - ALARM IN2 - ALARM IN3 - ALARM IN4 - ALARM IN5 - ALARM IN6 - ALARM IN7 - ALARM IN8 - ALARM IN9 - ALARM IN10 - ALARM IN11 - ALARM IN12 - ALARM IN13 - ALARM IN14 - ALARM IN15 - ALARM IN16	ALARM Input Port
2	- ALARM RESET	On receiving an ALARM RESET signal, the system cancels the current ALARM input or output signal and resumes sensing.
3	- ALARM OUT1 - ALARM OUT2 - ALARM OUT3 - ALARM OUT4	ALARM Output Port

- ALARM IN/OUT Connection

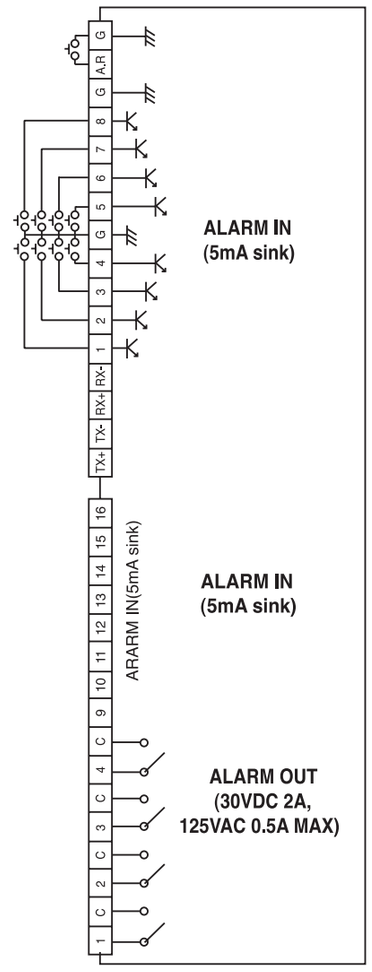

[SHR-2160/2162]

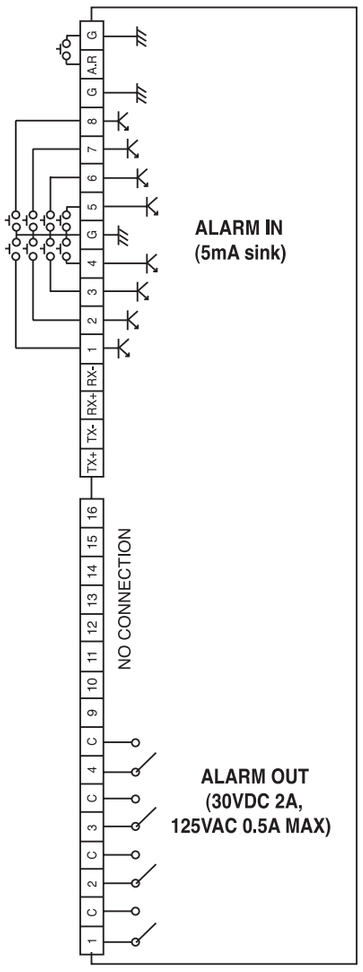

[SHR-2080/2082]

The Alarm IN/OUT port in the back of SHR-2080/2082 is composed of the following elements.

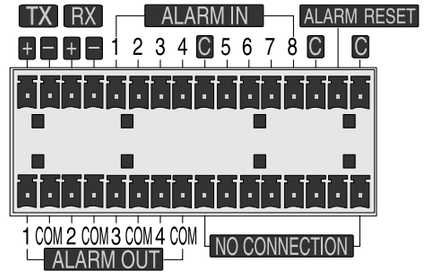

- ALARM IN/OUT Connection

	Name	Function
1	- ALARM IN1 - ALARM IN2 - ALARM IN3 - ALARM IN4 - ALARM IN5 - ALARM IN6 - ALARM IN7 - ALARM IN8	ALARM Input Port
2	- ALARM RESET	On receiving an ALARM RESET signal, the system cancels the current ALARM input or output signal and resumes sensing.
3	- ALARM OUT1 - ALARM OUT2 - ALARM OUT3 - ALARM OUT4	ALARM Output Port

5 Connecting the RS-485 Device

- Connect the RS-485 Device through the back port of SHR- SHR-2160/2162.
- You can install and control the PTZ camera supporting the RS-485 communication.

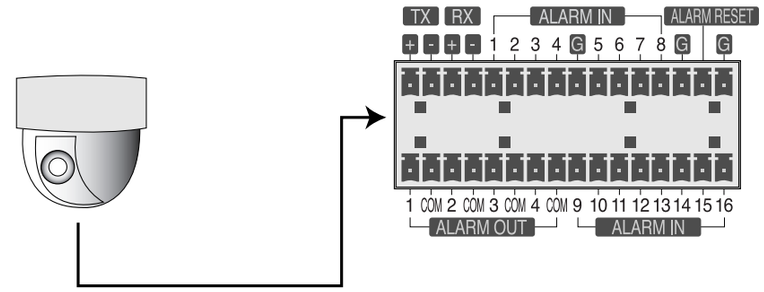

- You can adopt either Half Duplex or Full Duplex method for the connection.

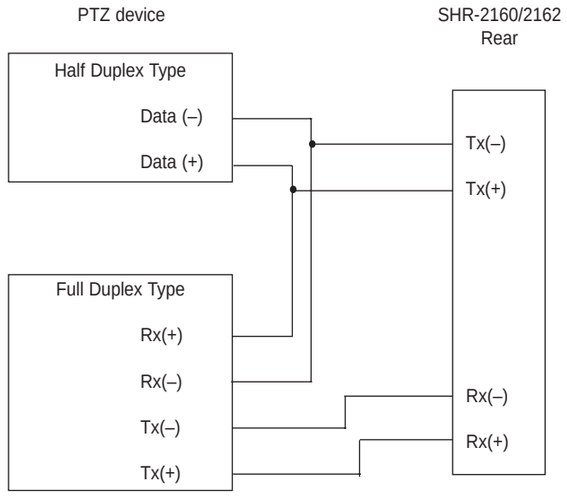

- Baud Rate supports 600/1200/2400/4800/9600/19200/38400.

Caution

Check if RS-485 device is compatible with SHR-2160/2162 first.
Then pay attention not to change the polarity(+, -) of RS-485 when connecting it.

- Connect the RS-485 Device through the back port of SHR- SHR-2080/2082.
- You can install and control the PTZ camera supporting the RS-485 communication.

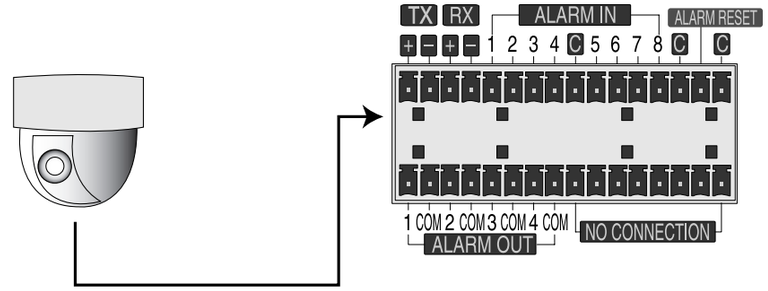

- You can adopt either Half Duplex or Full Duplex method for the connection.

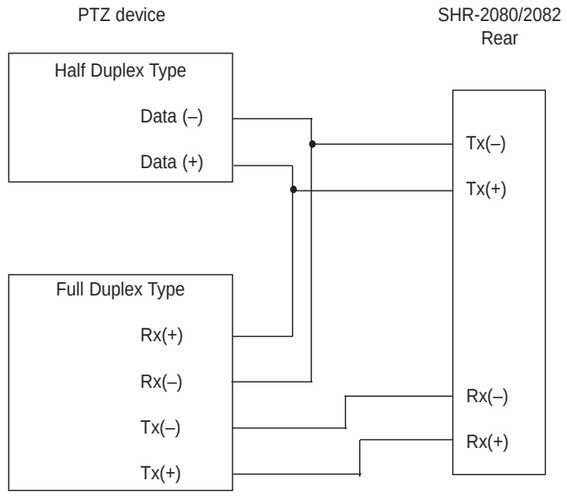

- Baud Rate supports 600/1200/2400/4800/9600/19200/38400.

Caution

Check if RS-485 device is compatible with SHR-2080/2082 first.
Then pay attention not to change the polarity(+, -) of RS-485 when connecting it.

Chapter 4
Live

1 System Operation

- Turn the power on and the following LOGO pops up on the screen.

- After the LOGO appears, all of LED in the front flickers 6 times to initialize the system for operation.
- Upon completion of normal initialization, the Live screen appears accompanying a beep sound.
- It takes approx. 1 min until a live image comes up.

Note

If a new HDD is installed, it may require more time to be appeared the Live screen due to the initialization time of a new HDD.

If the Live screen does not appear continuously or the LED in front repeats flickering, please check the connection between inside and outside. If the system does not operate in normal, contact with the shop where you bought the product.

- The Live screen does not affect the earlier MENU setup. If you reboot the system after power-off during recording, the Live screen will appear, accompanying recording.

Note

If the Live screen dose not appear, check if the Video Out comes out in Composite mode or VGA mode.
From the factory, the default mode is composite mode.

2 Live screen Mode

Definition of Live Screen Icon

The Live screen icons display the current setup and function status of each screen.

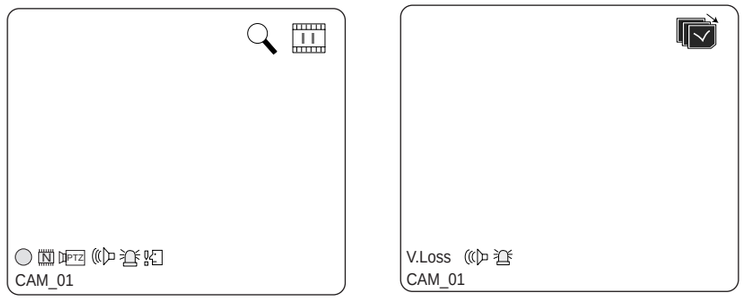

◯/Ⓟ/Ⓔ/Ⓢ : Recording Icon
Each icon represents Normal / Event (Alarm + Motion) / Schedule Recording.

Ⓝ/Ⓒ : Recording Video Size Icon
Each icon represents the recording size of Large / Normal / CIF.
- Normal : Half D1 - (NTSC)720X240 (PAL) 720X288
- CIF : CIF - (NTSC)352X240 (PAL)352X288

PTZ/PTZ : PTZ Icon
This icon appears when setting the PTZ device with the PTZ icon and changes to yellow color when operating the PTZ.

: Audio Icon
This icon represents the Audio On/Off status and changes to yellow color at the Audio On. It does not appear in the Video mode or Audio Disable.

: Sensor In Event Icon
This icon appears in the channel linked with the external sensor signal when inputting the signal at the Sensor On.

: Motion Event Icon
This icon appears in the Motion Event channel at the Motion Detection On.

: Zoom Icon
This icon appears at the Zoom On or Zoom In and disappears when canceling the Zoom On.

: Freeze Icon
This icon appears in the Freeze mode and disappears when canceling the Freeze.

FULL : HDD Recording Disk Full Icon
Comes up when the HDD's space is insufficient when recording.

: Auto sequence Icon
This icon appears in the auto sequence mode.
: Backup Playback Icon
This icon appears when the backup data is played.
: Fan Error Icon
This icon appears when the fan stops.
: No HDD icon
Comes up when there is no HDD.
When the fan failure icon or no HDD icon appears, please contact the service center.

V.Loss / V.Off : Video Input Status
If there is no more video data input in the Video On, [V.Loss] appears in the channel.
If you set Video On/Off to Off, [V.Off] will appear.

Definition of Live Screen Mode

SHR-2160 receives 16 live images and displays them in the following 9 modes.

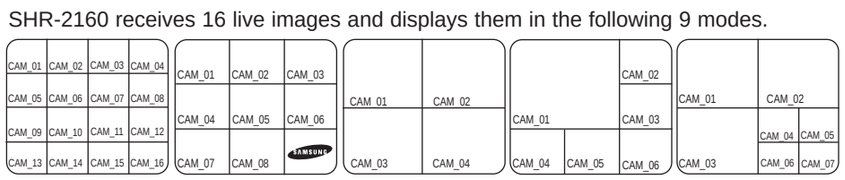

16 Split Mode → 9 Split Mode → 4 Split Mode → 6 Split Mode → 7 Split Mode

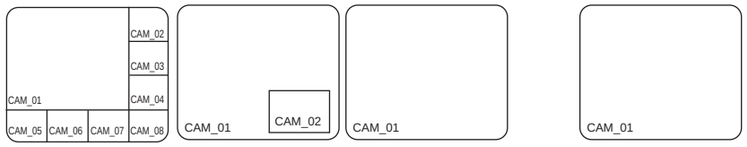

8 Split Mode → PIP Mode → Screen change Mode

Single Mode

- Full Screen(Single) Mode:
  Displays the selected channel in a full screen.
- 4,6,7,8, & 9 Split Mode:
  Displays 4,6,7,8,9 channels each as a split screen. You may match channel numbers with split screens on your own.
  The 4CH or 9CH Split mode has the function of screen change. Refer to (4-4) Live Screen Mode Setup. Press the [Direction Control] button in the 8CH Split mode and the main screen(CAM_01 in the figure) will move.
- 16 Split Mode:
  Displays 1-16 channel's live image input as a 16-split. CH selection in the 16 Split mode is not available.
- PIP(Picture in picture) Mode:
  Displays a 1/3-sized screen in the full screen. You are able to choose a channel as you want to, which is displayed in the full screen or reduced screen area. You may move the PIP screen at 5 stages in the Full screen with the ▲ or ▼key.
- Screen change Mode:
  Displays each channel's full screen according to the setup time interval.

Selecting Live Screen Mode

Each mode may be selected by [MODE Button] and [CH1 ~ CH16 Button]
The following figure shows Live Mode of SHR-2160 after converted.

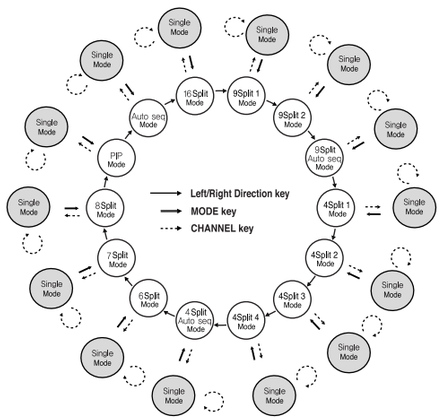

- The default is 16 Split Screen Mode.
- The 9 Split Screen mode default is [9Split 1] for [CH1 ~ CH9], [9Split 2] for [CH10 ~ CH16], and [9Split Screen change] for [9Split 1] and [9Split 2] alternatively.
- The 4 Split Screen mode default is [4Split 1] for [CH1 ~ CH4], [4Split 2] for [CH5 ~ CH8], [4Split 3] for [CH9 ~ CH12], [4Split 4] for [CH13 ~ CH16], and [4Split Screen change] for [4Split 1] ~ [4Split 4] in tern.
- Other modes than Full Screen may be selected by pressing the [Mode] button and [←, →] button in sequence.
  Every time you press the [Mode] button, the mode changes in the following procedure, [16Split] → [9Split 1] → [4Split 1] → [6Split] → [7Split] → [8Split] → [PIP] → [Screen Mode] → [16Split].
  Every time you press the [←, →] button, the mode changes in the following procedure, [9Split 1, 2, Screen Mode], [4Split 1, 2, 3, 4, Screen Mode].
- Press the [CH1~CH16] button to see the full screen of each channel.
- Press the Mode button after you convert to a full screen in the Split Screen mode to returns to the previous Split mode screen.

3 Live Channel Selection and Audio On/Off Setup

In other split modes than Full Screen Mode and Auto Sequence Mode, you can choose a channel to be displayed in each split area on your own. In addition, the channel being set to Audio On can be set to Audio On/Off in all Live Modes.

Audio On/Off Setup in the Full Screen

In full screen mode, the selected channel's audio automatically turns on, and you can set the audio on and off as you toggle the audio button. Depending on the Audio On/Off setup condition, the Audio icon of the channel changes to the Yellow/white color.

Audio On/Off Setup in the 4 Split Mode

If you press [ENTER] Button in the 4 Split Mode, the selection cursor in the following figure will appear and the channel concerned will be selected. When you select a temporary channel and press the audio button, you can set the audio of the selected channel to on or off. Depending on the Audio On/Off setup condition, the Audio icon of the channel changes to the Yellow/white color. You can set audio from 1 to 4 channels in 16-split mode.

CAM_01	CAM_02	CAM_03	CAM_04
CAM_05	CAM_06	CAM_07	CAM_08
CAM_09	CAM_10	CAM_11	CAM_12
CAM_13	CAM_14	CAM_15	CAM_16

Channel Selection and Audio On/Off Setup in the PIP Mode

As in the 16 Split Mode, if you press [ENTER] button in the PIP Mode, the selection cursor appears and the concerned channel is selected. When you select a temporary channel, you can select the watched channel with the channel 1-16 buttons, and just as when in 16-split mode you can set audio to on or off with the audio button's LED. Depending on the Audio On/Off setup condition, the Audio icon of the channel changes to the Yellow/white color.

4 Freeze and Zoom

Freeze Function

Freeze function pauses the video image in the Live Screen, it is only available in the Live Mode. You can set freeze to on or off with the [FREEZE] button.

Zoom Function

Zoom function enlarges the selected area to double size, and it is only available in the single mode.
If the [ZOOM] button is pressed in the single mode, the Zoom area appears. Use the UP/DOWN/LEFT/RIGHT key to adjust the position of Zoom area. After selecting the Zoom area, press the [Enter] button to display the selection area in double size. You can adjust the video image position with the UP/DOWN/LEFT/RIGHT key at the Zoom in state. For Zoom off at the Zoom in state, use the [ZOOM] button.

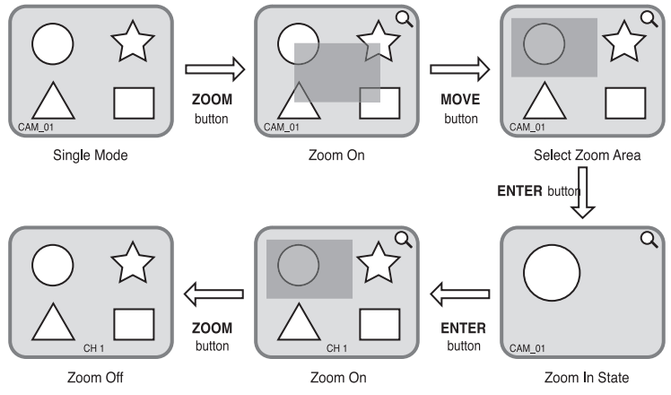

5 Event Monitoring

Event monitoring displays the channel synchronized with a event on the screen when a special event (Sensor/Motion/Video Loss) occurs. Event monitoring On/Off and event duration setup is available in [Menu]→[Monitoring] mode.
If you set the event monitoring interval to 5 seconds and an event occurs at CH2 in the beginning as following figure, the system will display CH2 in the full screen for 5 second.
If another event occurs within 5 seconds, it is displayed together with the existing event. As the following figure, both CH1 and CH3 events occur within 5 seconds (for example, after 4 seconds) after occurring CH2 event, these three events are split into 4 screens.
If the new event does not occurs during the event duration, the system will return to the previous Live mode. Pressing the [ALARM] button during the event duration makes the event monitoring stop. On occurring an event, [ALARM LED] is turned on. Press the [ALARM] button to turn [ALARM LED] off.
The alarm setup is initialized and the event icon disappears, and the event monitoring is off if it is on when pressing the [ALARM] button. After alarming, the event recording is continued again for set time.

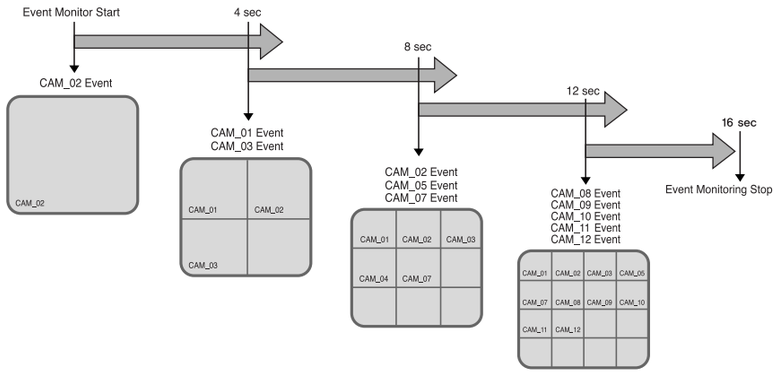

6 Spot-out monitoring

Spot-out Monitoring has nothing to do with Live Screen Output, it monitors the full screen of a certain channel. If you select the Monitoring in the MENU, the one channel among CH1 ~ CH4 is output with a Spot-out or channels are output one by one at an interval as Auto Sequence Mode in the Live Mode. Live screen icon does not appear in the spot-out monitoring.
The interval is as same as the Auto Sequence time in the Live Mode. If the Spot-out Event Monitoring is On, it is possible to see the event channel with Spot-out. In case of simultaneous event occurrence at more than one channel, the lowest numbered event channel has the first priority to be spotted out.

⚠ *Caution*

If the built-in HDD is not connected, or it operates with power applying in error,( ) indicating "built-in HDD error" is displayed at the top of left.
At this time,

(1) Live screen mode
(2) Monitoring mode by Smart Viewer

operate only and the other functions including recording, search, playback, menu setup, and PTZ do not operate.
If the above problem is occurred, be sure to contact a service center to settle the problem.

⚠ *Caution*

If the fan in a set does not operate or has a problem, a fan error message pops up in the live screen as below picture. And the fan error icon appears at the top of left .
If it is, check the fan in the set. The icon at the top of left disappears automatically if the fan recovers its operation.

Fan Information
⚠ *A error occurs in the fan. Refer to the manual.*

Concerning occurrence of a fan error, if it is a long-term problem it will shorten the lifespan of the product.
When a fan error occurs, we ask that you please contact the service center.

Chapter 5
Menu Setup

Before Use

- Selection
  The yellow cursor shows the current window. Use the ▲,▼,◄, ► key in the front to move the cursor on your desirous menu. If you press the "Enter" key with the cursor clicking on your desirable menu, the system will enter the new mode.
  Press the "Enter" key to finish the selection. On seeing Drop Down Menu, use the ▲ or ▼ key to move the cursor on your desirable menu.

- "OK" or "Cancel" in Menu Setup Window
  Once changed, the new menu setup procedure will be finalized by pressing "OK".
  Pressing "Cancel" will cancel the new setup and return to the upper menu.

- Front "MENU" and "SEARCH" Button
  The MENU button or SEARCH button, if pressed first, acts as an entrance button.
  Once entering, it reverses the page to the previous one.

- The ">" or "V" mark beside the title copies the line in the arrow direction to the value of the first line.

- The first page of the menu is structured as follows.

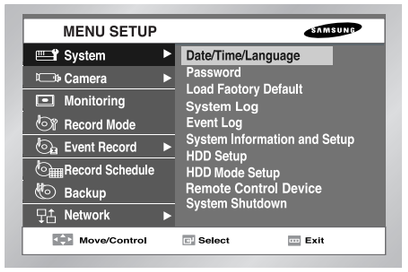

1 System

Date/Time/Language Setup

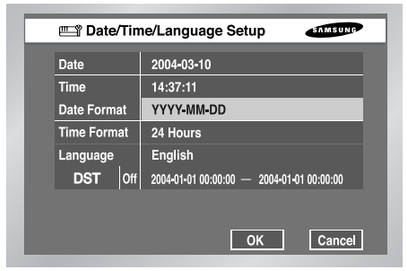

- Press the "Enter" key and the ◄, ► key to move to Y/M/D.
  Use the ▲, ▼key to change the date.
  Press the "Enter" key to come out of the mode.

- Time
  Press the "Enter" key and the ◄, ► key to move to H/M/S.
  Use the ◄, ► key to change the time.
  Press the "Enter" key to come out of the mode.

Note

[Date/Time Change]
Pressing "OK" after you change date and time, you will be asked by a pop-up window if you really confirm the change. Here, press "Yes" to change the time. Since Date/Time does not change in backup process, be sure to stop the backup process before you change Date/Time. If the date and time are changed, the system restarts.

⚠ Caution

[Date/Time Change]
If the Date/Time changes to the original value, the data recorded before the change may be deleted. For example, if the time is changed from 8 am to 7 am, all the data recorded between 7 am and 8 am will be deleted.

- Date Format
  The system supports 3 formats, YYYY-MM-DD / DD-MM-YYYY / MM-DD-YYYY.

- Time Format
  The system supports 2 formats, 24 Hour / 12 Hour(AM/PM).

- Language
  After selecting a language, OSD is expressed in the selected language.
  The available language is added in the list.

- DST(Daylight Saving Time)
  DST sets the watch one hour faster than the local standard time.
  This menu makes the system count for DST in DST regions.
  The system goes one hour faster and reboots at the setup date.

  If the DST is Off, it does not operate. And it is impossible to enter the right date menu. To setting the DST, enter the start time on the left and the end time on the right of '~'. DST is allowed to set Month/Date/Time only.
  Year/Minute/Second remains inactivated.

Note

[On DST Setup]
Backup in progress will be cancelled. Recording in progress will be suspended for a moment until rebooting.

⚠ Caution

[On DST Operation]
As the system goes one hour earlier, the data recorded since an hour ago will be deleted. As DST activates at the preset time, you are recommended to take the utmost care of preventing any trouble incurred by data deletion or rebooting.

Password

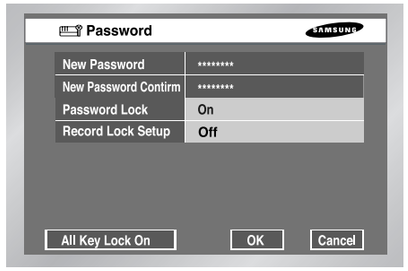

- The Default Password is 4321.

- New Password
  This is used to change the system password inside SHR-2160/2162/2080/2082. You are allowed to create a password up to 4 digits. Press the "Enter" key and a channel button from 1 ~ 4 at the left. Press the "Enter" key after change to move to "New Password Confirm".

- New Password Confirm
  This confirms a new password. You shall be obliged to input New Password in the above row first. Without New Password input, New Password Confirm input has no effect.

- Password Setup
  If it is set to On, a window for asking the password pops up when pressing the menu button.
  If it is set to Off, you are allowed to enter the menu mode without being asking the password when you press the menu button.

- Record Lock Setup
  When setting the record lock to "on", pressing the record button causes the password window to come up.
  You can also set record lock button to on/off from the remote control.

- All Key Lock On
  If you select this, the system will enter the Live Mode immediately. If you press any button in the front, the Password window will pop up. If the correct password is input, the lock function is cancelled after popping up a message for the cancellation of Key Lock.

Note

[All Key Lock On]
If you select this, the system will change to the Live Mode immediately and keys will be locked.

Load Factory Default

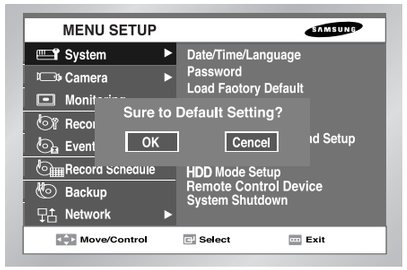

- It used to initialize all the menu setup values. The recorded data will not be deleted. Press "OK" in the confirmation window to start initializing.

System Log

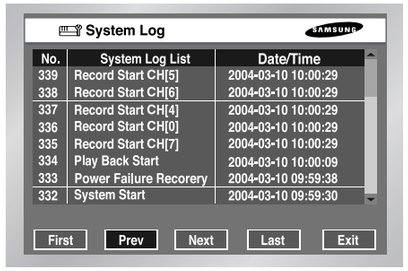

- System Log is used to check the important record by an administrator.
- It displays such contents of a system related log and its execution date/time as System Start, System Termination, and Menu Setup Change.
- First : Moves to the first Log page.
- Prev : Moves to the previous Log page.
- Next : Moves to the next Log page.
- Last : Moves to the recent Log page.

- System Log List

System Start	Starts the system.	Time Change	Changes the Date/Time.
Login(Admin)	Viewer Login (Admin)	Load Factory Default	Initializes the system.
Logout(Admin)	Viewer Logout (Admin)	System Upgrade	Changes the system S/W.
Login(User)	Viewer Login (User)	Disk Full	No Space in the HDD
Logout(User)	Viewer Logout (User)	Backup Start	Starts the backup.
Setup Start (Local) Set	Enters into the menu.	Backup End	Ends the backup.
Setup End (Local) Set	Comes out of menu.	Backup Stop	Stops the backup.
Setup (Remote): Viewer	Sets the menu.	Backup Fail	Backup Failure
Play Back Start	Starts the playback.	ATA HDD Erase	Erases the ATA Data.
Play Back End	Ends the playback.	USB HDD Erase	Erases the USB HDD data.
Record Start CH[N]	Starts the Channel [n] recording.	USB MEMORY Erase	Erases the USB MEMORY data.
Record End CH[N]	Ends the channel [n] recording.	Overwrite Playback Stop	Stops the playback by overwrite.
Power Failure Recovery	Returns the system after power interruption.	Backup Stop(Overwrite)	Stops the backup by overwrite.

Event Log

- It used to check the record regarding Event like Alarm / Motion / Video Loss.
- It displays the contents of a log regarding event and its execution date / time.
- First : Returns to the first Log page.
- Prev : Back to the previous Log page.
- Next : Forwards to the next Log page.
- Last : Moves to the recent Log.

- Event Log List

Video Loss CH[N]	Means the occurrence of Channel [N] Video Loss.
Alarm Detection CH[N]	Means the occurrence of Channel [N] alarm.
Motion Detection CH[N]	Means the occurrence of Channel [N] Motion.

System Information and Setup

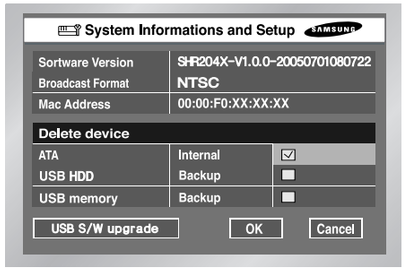

- Software Version : Displays the current version. Setup is not available.
- Broadcast Format : Displays the current Format(NTSC/PAL) . Setup is not available.
- Mac Address : 6 Byte hardware address. Setup is not available.
- Device Erase
  This erases the data in ATA / USB HDD / USB memory. Click the checkbox of the device that you want to erase and press "OK" You are not allowed to erase the data in Backup progress.
- USB S/W Upgrade
  You can update the program by use of USB device. If there is no device, "USB S/W Upgrade fail" window pops up.
- In the case of 2080/2082, the software version comes up as SHR208X-V1.2.5-2005XXXXXX.

Note 1

[Internal HDD]
This is a physical hard disk connected with the IDE cable inside the SHR2160/2162/2080/2082 main body, and stores data.
[External HDD]
This is a physical hard disk connected with the port and terminal in the back of the SHR2160/2162/2080/2082 main body, and stores data.
This can be used as Extended HDD or Backup HDD.
- Extended HDD : Supplements Internal HDD quantity. Connected, it takes the place of Internal HDD.
- Backup HDD : Backs up the data recorded in the set.

Note 2

[ATA]
Usage : Internal HDD
This is a physical hard disk connected with the IDE cable inside the SHR2160/2162/2080/2082 main body.
[USB]
Usage : External HDD(Extended HDD or Backup HDD)
It is physical hardware that is connected to the front/back part of the SHR-2160/2162/2080/2082 with the USB port.

Caution

[Device Erase]
Data will not be deleted in the backup mode.
Please be sure to stop the backup before you delete a data. In the recording mode, suspend the recording and delete a data.

Caution

[USB S/W Upgrade]
Download the software to upgrade at http://www.sec.co.kr, CCTV Part.
If the USB memory to upgrade has a format not being supported by DVR set, the upgrade is impossible.
In this case, use the "device erase" of menu 5-7 system information and setup.
Only one file to upgrade is allowed in the USB Memory.

HDD Setup

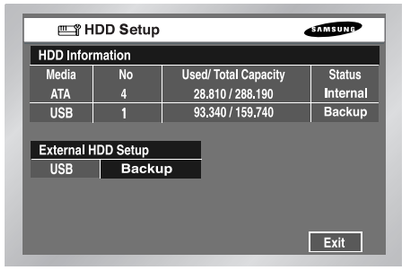

- HDD Information
  Displays the number, capacity, and status of ATA and USB device. Setup is not available.
  Status : Internal HDD, External HDD, Backup HDD

- External HDD Setup
  1. Backup/External type
     The USB's usage can be set up as below.
     Not Defined → Appears when the usage of connected HDD is not defined. You can set to External or Backup type.
     No Device → Appears when there is no HDD connected. You are able to connect it by pressing the right connection TAB after connecting HDD
     External → Appears when the connected HDD is set to External type. It may used as a backup HDD if you press the "Enter" key and turn to Backup.
     Backup → Appears when the connected HDD is set to Backup. If you press the "Enter" key and turn to External(Extend), it can be used as an External HDD.

HDD Mode Setup

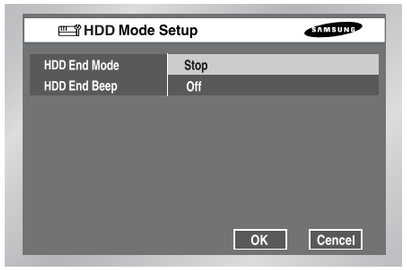

- HDD End Mode
  Stop : Stops recording when HDD is full during the recording.
  Overwrite : Deletes the original data and save a new data when HDD is full during the recording.

- HDD End Beep
  On : Beeps when the HDD is full in the recording mode.
  Off : Although the HDD is full in the recording mode, the beep sound is not heard.

Note

If the HDD is full, the Disk Full Icon(FULL) is appeared.

Caution

When you want to overwrite the data you want to backup and HDD repeat recording is set to overwrite, backup starts.
You can change the time or cancel backup.

[Disk Overwrite]
In the overwrite Mode, the previous Event data is deleted and the mode is changed.

Remote control Device

- MENU for the use of Samsung system keyboard

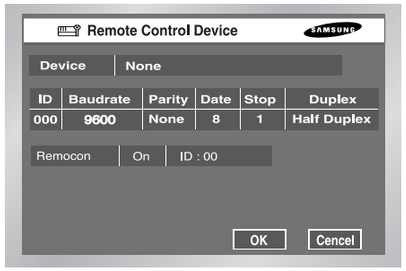

- Device
  A Remote Control Device, being connected to the RS485 port.

- ID
  This is a private ID of SHR-2160/2162/2080/2082.
  This private ID is essential for SSC-2000 because SSC-2000 can control many SHR-2160/2162/2080/2082 DVRs.

- Baudrate
  Baudrate to communicate with SSC-2000
  It should be same to SSC-2000 Baudrate for communication.

- Parity
  Sets up one of None / Even / Odd.

- Data
  Sets up either 7 or 8.

- Stop
  Sets up either 1 or 2.

- Duplex
  Sets up either Half Duplex or Full Duplex.

- Remote Control
  Sets the remote control to on/off.
  You can set the remote control's ID to 0-99.

Note

When controlling with a PTZ device and a remote control device at the same time, it will cause a data conflict and will not function properly.

System Shutdown

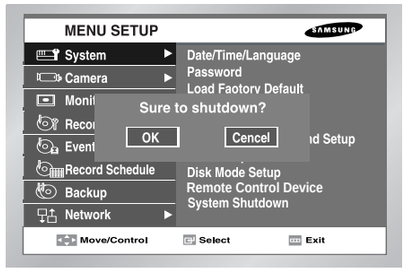

- Terminates the work in action safely and turns the power off. Press "OK" in the confirmation window and plug out when you see "Safe to Power Off".

⚠ *Caution*

[System Shutdown]
Power-off without terminating the system in the System Shutdown menu may incur improper motion like data loss and disk failure. Power-off shall be done in the System Shutdown menu.

2 Camera

- The detailed Camera Menu items are as follows.

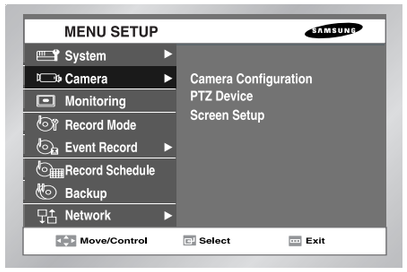

Camera Config.

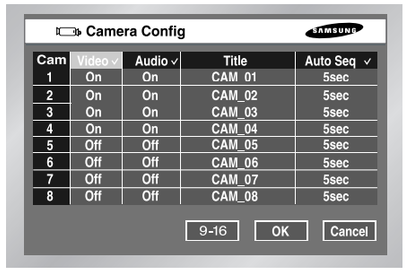

- Image
  On : Camera images from a selected channel appear.
  Off : Camera images from a selected channel disappear.
  Covert1 : Displays the information except for the Video information of selected channel.
  Covert2 : Does not display the any information.
  Audio/Cam name/Auto sequence setup are impossible in the Off channel.

- Sound
  On : Makes the sound of selected channel on.
  Off : Makes the sound of selected channel off.
  You can only select 4 channels for the sound.

- In the case of the 2080/2082, 8-channel information comes up.

- Title
  You can name the camera of selected channel.
  If you press the [Enter] key, the Virtual keyboard will come out.
  ► Virtual Keyboard
  If you move the cursor, you can type text by text.
  Up to 15 texts can be typed.
  Keyboard cannot be composed of all spaces.
  Pressing Caps Lock changes the keyboard that can be selected. (2 Modes)

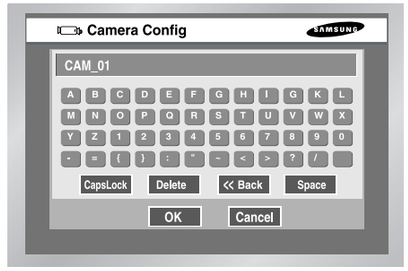

- Auto Sequence
  You are allowed to set the duration of each channel at the Auto Sequence channel in the Live Mode.
  A channel, set to Off, does not operate in the Auto Sequence Mode.

PTZ Device

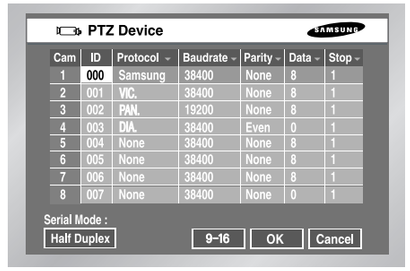
PTZ Device
SAMSUNG
Cam ID Protocol Baudrate Parity Data Stop
1 000 Samsung 38400 None 8 1
2 001 VIC. 38400 None 8 1
3 002 PAN. 19200 None 8 1
4 003 DIA. 38400 Even 0 1
5 004 None 38400 None 8 1
6 005 None 38400 None 8 1
7 006 None 38400 None 8 1
8 007 None 38400 None 0 1
Serial Mode :
Half Duplex
9~16
OK
Cancel

- ID
  It is an ID for PTZ Camera and available to set from 0 to 255.

- Protocol
  It is supported by the PTZ device.
  The following protocols are now being supported.
  Samsung / Vic. / Pan. / AD / Phi. / Ern. / Pel-D / Pel-P / Vcl. / Dia. / Kal.

- Baurate
  Baurate is supported by the PTZ device. 600 / 1200 / 2400 / 4800 / 9600 / 19200 / 38400

- Parity
  It is set to the one of None, Even, and Odd.

- Data
  It is set to either 7 or 8.

- Stop
  It is set to either 1 or 2.

- Duplex
  It is set to either Half Duplex or Full Duplex.

- In the case of the 2080/2082, 8-channel information comes up.

⚠ *Caution*

The above items shall be same to the PTZ device setup.
For the details, please refer to User Manual of the PTZ device manufacturer.

Screen Setup

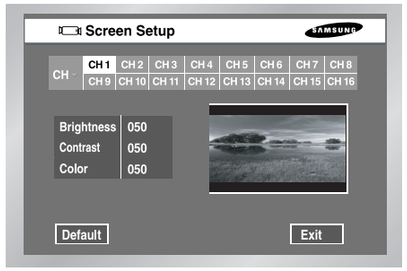

- It is a window to set Brightness/Contrast/Color for the camera image of each channel. Put the cursor on the channel that you want to adjust and set Brightness/Contrast/Color. Once selected, the channel appears in the right PIP area. Use the ▲ or ▼ button to adjust the value from 0 to 100.

- If you mark ✓ in the select CH, all the channel values will become the same as the finally selected channel value.

- "Default value" resets the current channel to the basic value of 50.

- In the case of the 2080/2082, 8-channel information comes up.

3 Monitoring

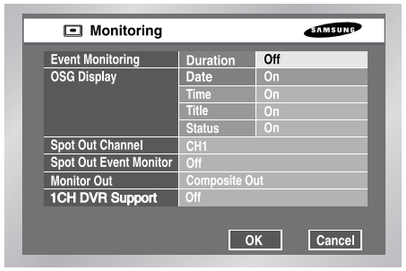

- Event Monitoring
  It is possible to set to Off/3sec/5sec/10sec/20sec/30sec/Continuous.
  ① Off : Event Monitoring does not operate to turn to the screen where an event occurs.
  ② 3sec/ 5sec/ 10sec/ 20sec/ 30sec : Sets the duration time of screen in the Auto Sequence mode.
  ③ Continuous : The Event Monitoring screen remains alive until you press the "Alarm" button in the front to cancel the screen manually.

- Letter Display
  ① Date : The date is displayed on the screen when it is On, and not displayed when it is Off.
  ② Time : The time is displayed on the screen when it is On, and not displayed when it is Off.
  ③ Cam name : The Cam name is displayed on the screen when it is on, and not displayed when it is off.
  ④ Status : Audio/Ptz is displayed on the screen when it is on, and not displayed when it is off.

- Spot Out Channel
  Spot Out channel is used to let one of two monitors monitor a channel, focusing on it.
  Spot Out channel supplies two functions, continuous monitoring of only one channel and Auto Sequence to display all the channels one by one.
  ① Auto Sequence setup ranges from Ch1 to Ch 4.
  ② In the Auto Sequence mode, Spot Out channels are displayed in turn.
  ③ Duration time for Auto Sequence is as same as set for Camera setup.

- Spot Out Event Monitor
  Sets if event monitoring will be executed for Spot Out channels.
  ① Off : The event monitoring dose not operate in the Spot Out channel.
  ② 3sec/ 5sec/ 10sec/ 20sec/ 30sec : Sets the duration time of screen in the Auto Sequence mode.
  ③ Continuous : Once scrolled down, the screen remains displayed until you delete "Alarm" LED in the front manually.

- Image output
  You are not allowed to connect VGA OUT and Composite/S-Video OUT simultaneously.
  In other words, the user must choose either VGA output or composite/S-video output.
  ① Composite : Makes the output come out through the "Composite / S-Video OUT" port.
  ② VGA : Makes the output come out through the "VGA Out" port.
  When changing the output from Composite to VGA or from VGA to Composite, the system reboots automatically.

- Play channel location
  Designates the one channel location to play in play 9 split mode.
  Lower right-hand corner : Sets the location at the lower right-hand corner.
  Center : Sets the location in the center.

- Multi-channel change
  You can set changes for a split screen.
  You can set it to 3, 5, 10, 20, or 30 seconds.

⚠ *Caution*

[Video Out]
When setting the Composite Output, VGA output does not come out.
When setting the VGA Output, Composite Output does not come out.
If you press the No. 1 button for 5 seconds in the Live Mode with keeping the MODE button pressed, the system will change from VGA to COMPOSITE or from COMPOSITE to VGA and reboot.

[Video Output]
NTSC VGA output: 720x480 (60Hz)
PAL VGA output: 720x576 (50Hz)

[NTSC]
For NTSC, because VGA output is output at 720x480(60Hz), if you have a PC with a CRT monitor you will have to adjust the image size; and a PC with an LCD monitor that doesn't support 720x480 adjusts the image signal to 640x480. During this process, vertical line noise can occur.

[PAL]
For PAL, because VGA output is output at 720x576 (50Hz), if you have a PC with a CRT monitor, you will have to adjust the image size; and in the case of a PC with an LCD monitor that doesn't support 720x576, there won't be any images on the upper and lower parts of the screen. Especially in the case of LCD monitors that don't support 50Hz, because the images won't come up, we ask that you pay careful attention when selecting an LCD monitor.

4 Recording Mode

Record Mode

- Details for Record Mode Menu are as follows.

NTSC

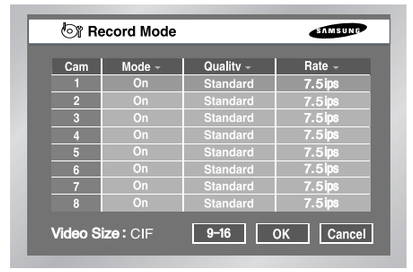

PAL

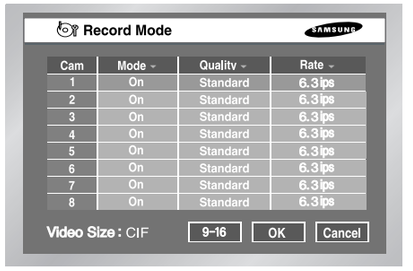

If you press the front "REC" button, the mode value to be recorded will be set.
☛ For the setup of Event Recording Mode value, refer to 5-20. Event Recording Mode Setup Menu.

- Mode
  On : The current channel is recorded if the REC button is pressed.
  Off : The current channel is not recorded even thought the REC button is pressed.
  The default value is set to "On".

- Quality
  It sets the Quality.
  Set to the one among Very high / High / Normal / Low.

- Rate
  It sets the Rate means the number of screen recorded every second.
  If it is set to 15 ips(NTSC)/12.5 ips(PAL), the system records too many screens per second and the playback continues intermittently since recording is more detailed.
  This is appropriate for concentrated monitoring zone setup.
  IIn case of NTSC, select one out of 30 ips / 15 ips / 10 ips / 7.5 ips / 5 ips / 3 ips / 1 ips. In case of PAL, select one out of 25 ips / 12.5 ips / 8.33 ips / 6.25 ips / 5 ips / 2.5 ips / 1 ips.
  The Recording Menu will be activated depending on Video On/Off in the Camera Setup (Menu5-12). In the case of cif, the total recording ips is 120ips; and in the case of half d1, it's 60ips. While ips functions, if it goes over the determined total, it automatically adjusts to the total as it changes from the last channel at the lowest ips (0.9 ips).

⚠ *Caution*

When calculating the total of recording seconds, the total is based on the highest recording second out of the recording mode's recording seconds or event recording mode's recording seconds. If you cannot select when selecting the desired recording seconds, please confirm the recording mode's and event recording mode's recording seconds.

- Video size
  The Video size is displayed at the bottom of left.

- In the case of the 2080/2082, 8-channel information comes up.

Record Video size Mode

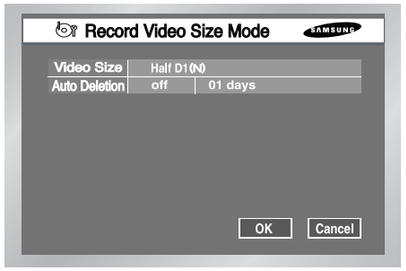

- Video size
  It sets the video to be recorded.
  Half D1 : (NTSC) 720x240(N) → Normal
  (PAL) 720x288(N) → Normal
  CIF : (NTSC) 352x240(C) → CIF
  (PAL) 352x288(C) → CIF

- Auto Deletion
  Press the [Off] button at the bottom of left to select either OFF or On.
  Select "On" to move to the Date selection button and to limit the search date.
  If you select "Off", you cannot move to the Date selection button and to limit the search date.
  The date is limited from 1 to 99 days.

5 Event Record Mode

- The detailed items of Event Record Menu are as follows.

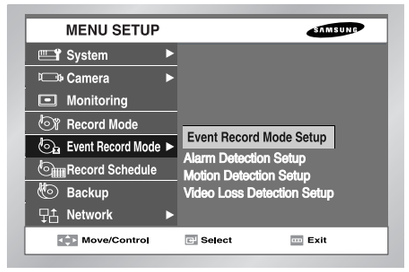

Event Record Mode setup

NTSC

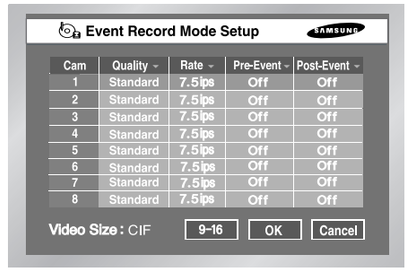

PAL

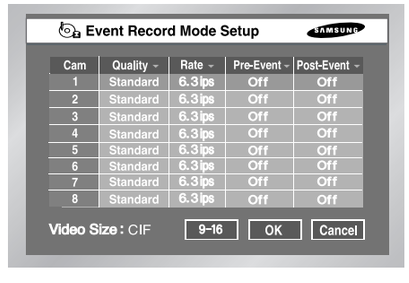

- Event Record Mode setup
  Sets a mode to be recorded when an event occurs.

- V. Size (Video Size)
  You can set the recording screen size in recording resolution mode.
  Half D1 : (NTSC) 720x240(N) → Normal
  (PAL) 720x288(N) → Normal
  CIF : (NTSC) 352x240(C) → CIF
  (PAL) 352x288(C) → CIF

- Quality
  Quality will be determined.
  Select the one among Very High/High/Normal/Low.
- Rate
  Sets the Rate the number of screen recorded every second.
  It you set to 15ips, the system records too many screens per second and play continues intermittently since recording is more detailed. This is appropriate for concentrated monitoring zone setup.
  In case of NTSC, select the one of 30 ips/ 15 ips/ 10 ips/ 7.5 ips/ 5 ips/ 3 ips/ 1 ips.
  In case of PAL, select the one of 25 ips/ 12.5 ips/ 8.33 ips/ 6.25 ips/ 5 ips/ 2.5 ips/ 1 ips.
- The Event Recording setup menu will be activated depending on Video On/Off in Camera Setup (Menu5-12).
- When the video size in the Camera Setup Menu is set to Half D1 and less than 2 In the case of cif, the total recording ips is 120ips; and in the case of half D1, it's 60ips. While ips functions, if it goes over the determined total, it automatically adjusts to the total as it changes from the last channel at the lowest ips (0.9 ips).

⚠ *Caution*

When calculating the total of recording seconds, the total is based on the highest recording second out of the recording mode's recording seconds and even recording mode's recording seconds. If you cannot select when selecting the desired recording seconds, please confirm the recording mode's and event recording mode's recording seconds.

- Pre-Event

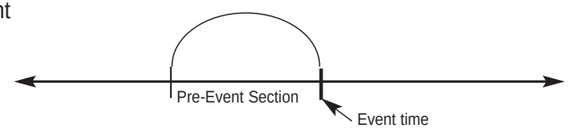

Records the situation until Alarm is issued.
Off : No recording
5sec/ 10sec/ 20sec/ 30sec : The recording time options before Alarm issue

- Post-Event

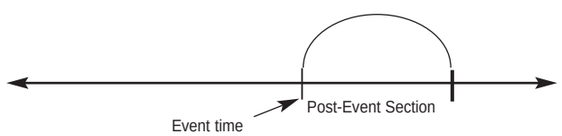

Records the situation since Alarm is issued.
Off : No recording
5sec/ 10sec/ 20sec/ 30sec/1min/3min/5min/10min/20min: Sets the recording time after an event occurs.

- Video size
  The Video size is displayed at the bottom of left 5-19.
- In the case of the 2080/2082, 8-channel information comes up.

Alarm Detection Setup

- Off : Sensor does not operate.
  ① N.O(Normal Open) Sensor : Sensor remains open all the time and if closed, an alarm will be issued. (A Contact)
  ② N.C(Normal Close) Sensor : Sensor remains closed all the time and if open, an alarm will be issued. (B Contact)
- Cam
  Sets a camera that will synchronize with the current sensor. The default value is currently set to the sensor number. A sensor shall be synchronized with at least a camera.
  Multi-selection is possible.

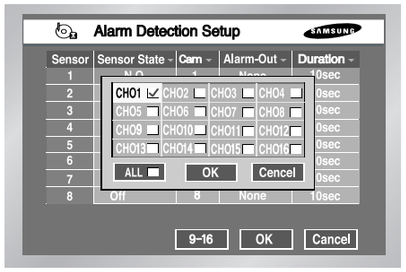

- Alarm-out
  Sets the Alarm-Out when Alarm Sensor sounds.
  5 Alarm Outs are supported un the present.
  Choose an alarm-out that you want to synchronize with the current sensor.
  Multi-selection is possible.

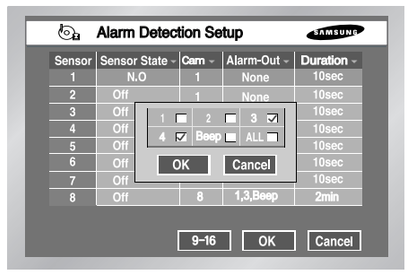

- Duration
  Sets the Alarm-Out Duration. Alarm-Out continues for the set value.
  Off / 3sec / 5sec / 10sec / 20sec / 30sec

- In the case of the 2080/2082, 8-channel information comes up.

Motion Detection Setup

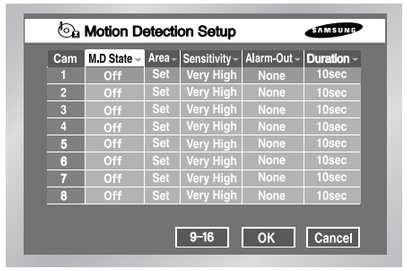

- Motion Detection Mode
  Off : Motion Detection does not operate
  On : Motion Detection operates.

- Area
  Selects the Motion Detection area. It is composed of 45x40(NTSC)/45x48(PAL) sized Block. It is impossible to set 4 block rows(Up/Down/Left/Right) to allow them to be displayed in all monitors.
  ► Select All : Selects the whole area.
  ► Select Block : Selects a block every time. Selection is done by a toggle system.
  ► Select Quarter : Splits the whole area into 4 pieces, which enables selecting a fourth of the whole area.
  ► Clear All : Cancels the whole area.
  ► Save & Exit : Saves and exits.
  ► Exit : Exits without saving.

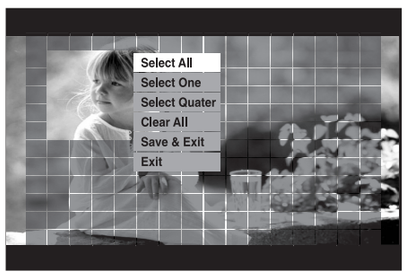

- Sensitivity
  Sets the sensitivity of motion detection. Sensitivity grade consists of Low → Medium → Very High in the ascending order.

- Alarm-Out
  Sets the Alarm-Out when Motion occurs.
  5 Alarm Outs are supported.
  Select an alarm-out that you want to synchronize with the current motion channel.
  Multi-selection is possible.

- Beep-Out
  Sets the Alarm-Out Duration. Alarm-Out continues for the determined duration.
  Off/ 3sec/ 5sec/ 10sec/ 20sec/ 30sec

Video Loss Detection Setup

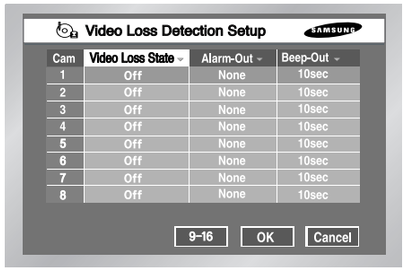

- Video Loss State
  Off : Video Loss does not operate.
  On : Video Loss operates.

- Alarm-Out
  Selects the Alarm-Out when the current Video Loss occurs.
  3 Alarm Outs are supported in the present. Select an alarm-out that you want to synchronize with the current motion channel. Multi-selection is possible.

- Beep-Out
  Sets Alarm-Out Duration. Alarm-Out continues for the determined duration.
  Off / 3sec / 5sec / 10sec / 20sec / 30sec

- In the case of the 2080/2082, 8-channel information comes up.

6 Record Schedule

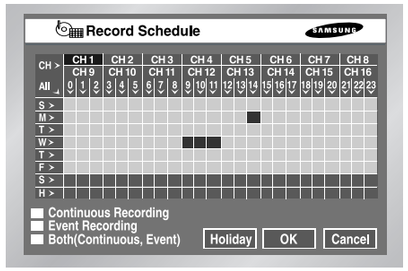
Record Schedule
SAMSUNG
CH > CH 1 CH 2 CH 3 CH 4 CH 5 CH 6 CH 7 CH 8
CH 9 CH 10 CH 11 CH 12 CH 13 CH 14 CH 15 CH 16
All 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23
S >
M >
T >
W >
T >
F >
S >
H >
Continuous Recording
Event Recording
Both(Continuous, Event)
Holiday
OK
Cancel

This setup selects a time to record automatically.
Selection by the day or by the time is available.
The default value is set to "Event Record".

- Press "CH >" copies the value of Channel 1 to all the channels.

- The horizontal axis numbered from 0 to 23 represents the time value.
  The vertical axis numbered from S to H represents the day value. (H : Holiday)
  Selection by the day or by the time is available.

- Pressing "ALL" converts the overall setting of the selection window into
  Continuous → Event Record → Schedule/Event Record.

- Record Schedule
  Recording starts automatically on the preset time.
  Recording follows the condition that set in 5-18.Record Mode.
  ☛ Refer to 7-2 Record Schedule.

- Event Recording
  Recording starts automatically when an event (Alarm/Motion Detection/Video Loss) occurs within a setup time.
  Recording follows the condition that set in 5-20.Event Record Mode setup.
  ☛ Refer to 7-3 Event Recording.

- Scheduled recording is indicted by yellow, event recording by blue, scheduled/event recording by red, and non-designated recording by gray.

- Schedule / Event Record
  On occurrence of Event, Continuous Recording is replaced with Event Recording Mode.

- Holiday
  If you press "Holiday", a calendar pops up and you are able to designate holidays.
  Move to a date and press "Enter" to complete designation.
  Press "Enter" once more to cancel designation.
  "H" at the bottom of the table means a holiday.

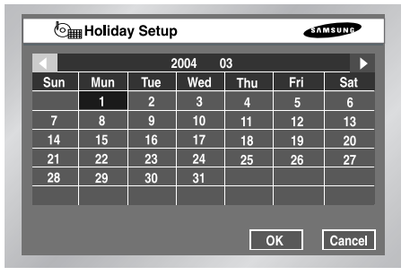

7 Backup

Backup

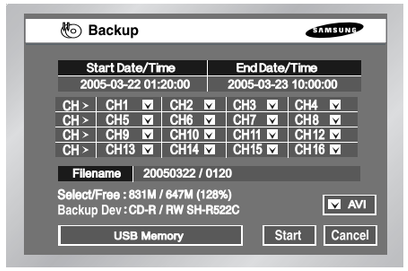

- If there is a device, the free space and the backup device is displayed.
- Select a date, time, and camera No. to backup, and press "Start".
- When you change Start Date/Time or End Date/Time, free space keeps updated in the Free Space zone.
- A file name is composed of Folder/File Name. A folder is composed of the backup date(YYYYMMDD) while a file name is composed of the time(HHMM).
  A file may be renamed by the virtual keyboard. A file name can composed of the maximum 5 letters.
- In case that more than one backup device is connected, click the box in the bottom of left corner to select a backup device.
- If there is no backup device, Warning sign pops up. Select and connect Backup Device in 5-8.HDD Setup and proceed the backup.
- Press the "Stop" to stop the backup.
- Pressing Cancel during the Backup returns to the upper menu but this does not affect the backup process.
- In case of USB HDD, the AVI check is impossible.
- In the case of the 2080/2082, 8-channel information comes up.

Caution

[In Backup Process]
Pressing THE "Cancel" returns to the upper menu but this does not affect Backup process. Press "Stop" to stop the backup.
The speed of the set may down during the backup.

When backing up to USB CD/DVD or memory, you must use a smaller capacity than the device's true capacity. (Part of the capacity is used for the system)

When trying to backup to DVD, if the capacity to backup is more than 1 GB, the number of backup capacity/1GB becomes the number of multi-sessions.
As the file name is determined by 'the user-designated file name, 4 characters + 0 ~ the user-designated file name, 4 characters + (number of multi-sessions-1)', the number of files created are equal to the number of multi-sessions. It takes a long time because number of backups are equal to the number of multi-sessions.

It doesn't support backing up with memory cards, flash cards, and memory sticks such as SD, CF, MMC, etc. Also, it doesn't support USB backup with the adapters of the devices listed above.

File name's virtual keyboard does not support special keys or the space bar.

Note

SHR-2040 supports the internal CD-R/W.
In case of AVI backup, the backup playback is available in the PC, but it is not available in the set.
If you backup with USB CD/DVD or memory, be sure to use the less capacity than the real capacity of the device. (some capacity is used for the purpose of the system).
In the case of avi backup, you need the divX codec for playing saved files.
The divX codec can be found at www.divx.com.

8 Network

IP Setup

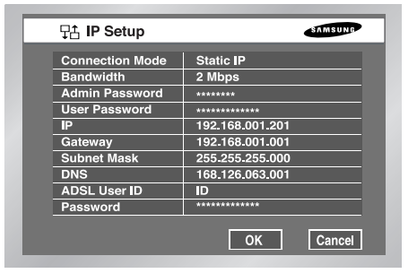

- Connection Mode
  Designates the kind of the network connected to the main body of SHR-2160/2162/2080/2082.
  Static IP : When the main body is connected to the network with Static IP.
  Dynamic IP : When the main body is connected to the network with Dynamic IP supplied by DHCP.
  ADSL(PPPoE) : When the main body is connected to the ADSL network with PPPoE.
- Bandwidth
  Designates the network speed to which the main body of SHR-2160/2162/2080/2082 is connected.
  Unlimited / 2 Mbps / 1 Mbps / 600 Kbps / 300 Kbps
  In case of ADSL, the bandwidth should be selected 600 Kbps or 300 Kbps.

Caution

1. *If the device is connected to a network with a high-speed LAN, set the bandwidth at 1 Mbps or 2 Mbps.*
2. *If the device is connected to a network with ADSL or low bandwidth, set the bandwidth not to exceed 600Mbps, and set the recording mode not to exceed CIF (standard).*
   Setting up to a high bandwidth or recording mode on a network environment supporting low bandwidth may cause a network overload, therefore connection with the smart viewer or image monitoring may not operate properly.
3. *When connection mode is set to ADSL, the IP settings page's bandwidth is set at 300kbps and the protocol setting page's protocol adapter is set to TCP.*

Note

In case of ADSL, the Protocol type is fixed to TCP.

- Admin Password
  Used for the connection between Smart Viewer and the set with the authority of Admin.
  The password can be input 8 digits in maximum.
  Press "Enter" and the left numeric keys from 1 to 4 for setup.
  The default password for ADMIN is 4321.
- User Password
  Used for the connection between Smart Viewer and the set with the authority of user.
  The password can be input 8 digits in maximum.
  Press "Enter" and the left numeric keys from 1 to 4 for setup.
  The default password for USER is 4321.

- IP
  Sets the IP address for the main body of SHR-2160/2162/2080/2082 to connect with the network.
  If the Connection Mode is set to Static IP, you shall type in IP yourself.
  If the connection mode is Dynamic IP or ADSL(PPPoE), the IP allocated by the DHCP server or ADSL company will be automatically displayed. In case of failure of DHCP or ADSL connection, 000.000.000.000 will be displayed. Then, press OK to retry connection to get IP. If you continue to fail in DHCP or ADSL connection, keep the main body of SHR-2160/2162/2080/2082 off for a while and turn it on for retry.

- Gateway
  Sets the Gateway Address in the SHR-2160/2162/2080/2082 main body.

- Subnet Mask
  Sets the Subnet Mask Address in the SHR-2160/2162/2080/2082 main body.

- DNS
  Sets the DNS Address in the main body of SHR-2160/2162/2080/2082. The default value of DNS is 168.126.63.1. Generally, you don°Øt have to alter the DNS default but you may be hard to connect to the network sometimes if you use DHCP or ADSL.
  In this case, call the network manager or ADSL company to set up a new DNS address.

- ADSL User ID
  If the main body of SHR-2160/2162/2080/2082 is connected with the ADSL(PPPoE) network, input User ID subscribed to the ADSL company. You may input User ID with a Virtual keyboard as long as 40 digits irrespective of alphabets, numbers, or symbols.

- Password
  If the main body of SHR-2160/2162/2080/2082 is connected to the ADSL(PPPoE) network, input the user password subscribed to the ADSL company. You may input the password with a Virtual keyboard as long as 40 digits irrespective of alphabets, numbers, or symbols.

⚠ Caution

Be sure to set IP/Port/SubnetMask/Gateway/DNS to let Smart Viewer connect with the main body of SHR-2160/2162/2080/2082.
Wrong IP/Port/Gateway/SubnetMask/DNS may prevent Smart Viewer from being connected to the main body of SHR-2160/2162/2080/2082.
Please call the network manager or ADSL company to get each setting value.

⚠ Caution

In case of ADSL, the audio is not played in the SmartViewer.

Transfer Protocol Settings

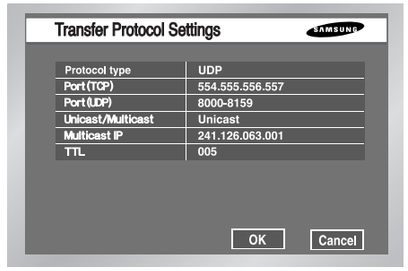

- You may select either TCP or UDP for the protocol type.
  If you select ADSL from the IP setup page, only TCP is available.
  While TCP is selected, Audio transmission is not available.

- The available Port(TCP) ranges from 554 to 998 and the port number will be changed by 4. Once the first digit is determined, the following 3 digits will change accordingly.

- The available Port(TCP) ranges from 8000 to 9760 and the port number will be changed by 160. Once the first digit is determined, the remaining digits will change accordingly.

- Unicast is set to the default value and Multicast can be selected in Unicast / Multicast.

- Multicast IP will be activated and its setup is available only when Multicast is selected from Multicast/Unicast.. Select a number from 224.0.0.0 to 239.255.255.255 for the D-Class IP address.

- TTL will be also activated and the value from 0 to 255 can be set only when Multicast is selected from Multicast / Unicast. The default value is 5.

Note

If you want to connect IP Router with the main body of SHR-2160/2162/2080/2082, you shall designate a port for SHR-2160/2162/2080/2082 in the IP Router setup menu.
The main body of SHR-2160/2162/2080/2082 uses 4 ports for TCP communication.
In addition, if you want to use the DHCP function backed by IP Router to allocate Dynamic IP to the main body of SHR-2160/2162/2080/2082, you shall designate a port for the IP which SHR-2160/2162/2080/2082 has been allocated by the IP Router setup menu.
If you use IP Router, you are recommended to rather determine IP and Port numbers to be allocated to the main body of SHR-2160/2162/2080/2082 from the IP Router setup menu, set the connection mode to Static IP for the main body of SHR-2160/2162/2080/2082, and input the determined IP and Port number in IP Router than use the DHCP function.
Please refer to the IP Router User's Manual or call the manufacturer to set up IP Router.

9 Network Setup

Callback Settings

- The Callback function is used to forward a callback message to the IP where SmartViewer is in action in case Alarm, Motion Detection, or Video Loss event occurs.

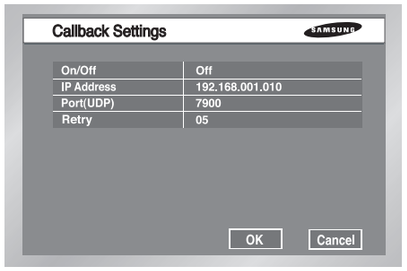

- On/Off : Off is default but you may choose On.
- IP Address : IP setting is available only when On is selected from On/off Setting. Select the IP address of PC where SmartViewer is in action.
- Port(UDP) : You may choose one from 7900 to 7999 and the number changes by 1. Selects the Port value for the Callback Connection menu from SmartViewer Setup.
- Retrial : You may choose one from 1 to 20 and the number changes by 1.

⚠ *Caution*

- Though Callback is set to ON, any Callback message will be created unless Alarm, Motion Detection, and Video Loss are set by EventRecord.

- Unless the Callback button is clicked, SmartViewer does not receive any Callback message.

Port Setup for SmartViewer Connection

- The Port value for DVR registration of SmartViewer (Setup → Site Setup) shall be as same as that of the set (TCP).
- If you want to use the IP Router, you shall forward the activated Port depending on the current setting value.
  - If set to TCP, allocate 4 ports to the IP Router whose Port(TCP) was set.
  - If set to UDP, allocate 4 ports whose Port(TCP) was set and 160 ports whose Port(UDP) was set to the IP Router.

In the event of TCP Setup from Transfer Protocol Setup Page

- The ports allocated to Port(TCP) will be used for SmartViewer connection control and stream forwarding.

In the event of UDP Setup from Transfer Protocol Setup Page

- The ports allocated to Port(TCP) will be used for SmartViewer connection control and the ports allocated to Port(UDP) will be used for stream transfer.
- If you set to Multicast
  - Both MultiCast IP and TTL Setup will be activated.
  - MultiCast IP means the group address(D-Class IP Address : 224.0.0.0 ~ 239.255.255.255) for MultiCast Forwarding.
  - TTL(Time To Live) indicates how many Routers will be passed for MultiCast Forwarding.
  - When you are unable to use Multicast by the Network(LAN or ADSL) characteristic as both Set and SmartViewer are installed, the message, "Not Connected" will be displayed in the SmartViewer screen. Please alter the TCP or UDP(Unicast) setting value.
- In the event of poor image from SmartViewer
  - When the bandwidth of the network where Set is installed is smaller than the quantity of transfer stream packet, the image is sometimes poor. Set the IP setup bandwidth lower than the current setting value. (In case of ADSL, it is recommended 300Kbps or 600Kbps for the bandwidth.)
  - If this effort is no use, alter the protocol type to TCP.

Chapter 6
PTZ Camera Control

1 PTZ Camera Control Mode

- Select a proper PTZ camera Configuration value in MENU to enter PTZ Control Mode.

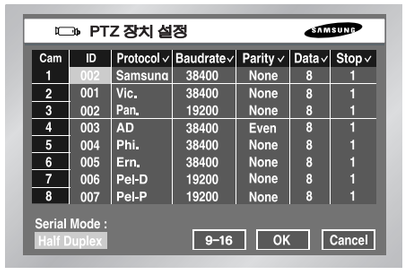
PTZ 장치 설정
SAMSUNG
Cam ID Protocol Baudrate Parity Data Stop
1 002 Samsung 38400 None 8 1
2 001 Vic. 38400 None 8 1
3 002 Pan. 19200 None 8 1
4 003 AD 38400 Even 8 1
5 004 Phi. 38400 None 8 1
6 005 Ern. 38400 None 8 1
7 006 Pel-D 19200 None 8 1
8 007 Pel-P 19200 None 8 1
Serial Mode :
Half Duplex
9~16
OK
Cancel

- Selected in MENU, the PTZ symbol(PTZ) is displayed on the channel in the screen.
- If you press the Enter(↵) button among direction keys in front of Split Screen, a blue bar will appear in the monitor screen. Use direction keys to move this bar until you reach the channel with the PTZ symbol and press the PTZ button in front of SHR-2160/2162/2080/2082 to enter PTZ Camera Control Mode.
If you succeed in entering PTZ Camera Control Mode, the PTZ symbol on the monitor screen will turn yellow from white while the PTZ button in front of SHR-2160/2162/2080/2082 will turn blue. PTZ Camera Control Mode supports Pan, Tilt, and Zoom operation.



- Other PTZ Camera Control Modes perform its control in a single screen. Press the channel selection button in the left front to select the PTZ setting channel and press the PTZ button. If you succeed in entering Single Screen PTZ Camera Control Mode, the PTZ symbol on the screen will turn yellow from white while the PTZ button will turn blue. Single Screen PTZ Camera Control Mode supports Pan, Tilt, and Zoom operation basically and Preset, Camera Menu, and other functions additionally.

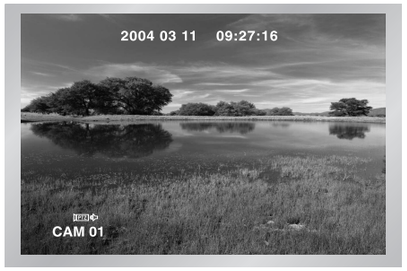

- Press the PTZ button in Live Mode to cancel PTZ Camera Control Mode. After cancellation, the PTZ symbol on the screen will turn white from yellow while the PTZ button will lose its blue light.

Note

When controlling with a PTZ device and a remote control device at the same time, it will cause a data conflict and will not function properly.

2 Basic Operation of PAN, TILT, & ZOOM

- When using a remote control device (SCC2000), it is possible to control the camera with the remote control limited to the Samsung protocol. (refer to SCC2000 user manual) If there is no PTZ control for 5 minutes from the DVR, PTZ mode is automatically cancelled.
  This is to control PTZ with the remote viewer when there is no PTZ control.

- PAN
  Press the LEFT or RIGHT button in front SHR-2160/2162/2080/2082 in PTZ Camera Control Mode to control PTZ Camera horizontally.



- TILT
  Press the UP or DOWN button in front SHR-2160/2162/2080/2082 in PTZ Camera Control Mode to control PTZ Camera vertically.



- ZOOM
  Press the TELE/WIDE button in front SHR-2160/2162/2080/2082 in PTZ Camera Control Mode to zoom in or out PTZ Camera.

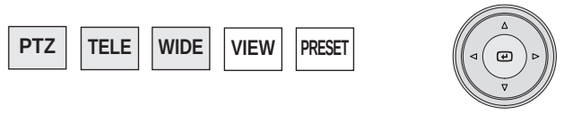

3 Preset Setup

- Records a certain position of PTZ Camera.
- Memorizes up to 20 PTZ Camera positions at the moment.

Note

For AD Protocol PTZ Camera, this memorizes only 7 Presets.

- Press the Preset button in front of SHR-2160/2162/2080/2082 in Single Screen PTZ Camera Control Mode to set up Preset.

- After Preset setup, press ENTER.

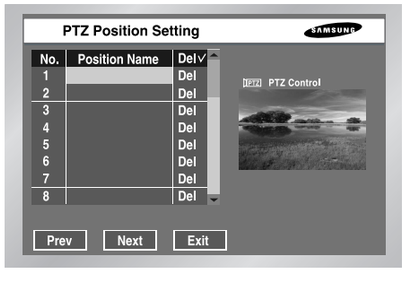

- Move the cursor to right and press ENTER in PTZ Control Mode first. Then, press the "Enter" to run P/T/Z/ operation mode in the PIP screen and press the "Enter" again to cancel P/T/Z/ Motion Mode.
- Press Enter at the Position Name position to see Virtual Keyboard. Enter the type position name and press the "OK" to save the position and position name.

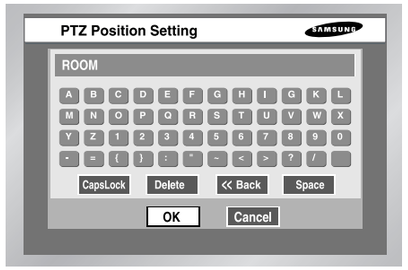

- Press the "Del" to delete both Position and Position Name with the number.
- Click the Press Del ✓ on the top to delete all positions and position names in memory.

4 Camera Menu Setup

- Camera Menu is a menu supplied by PTZ Camera itself. This Menu sets up several conditions of PTZ Camera.

Note

Pan. or Samsung Protocol Camera only is authorized for Camera Menu setup.

- Press the Preset button in front of SHR-2160/2162/2080/2082 in Single Screen PTZ Camera Control Mode to select Camera Menu.

- Press the "Preset" button in front of SHR-2160/2162/2080/2082 to return to the upper menu from camera menu.

5 Preset View

- Preset setup allows your movement to a certain saved position of PTZ Camera.
- Press the VIEW button in front of SHR-2160/2162/2080/2082 in Single Screen PTZ Camera Control Mode to select Preset.(For example, Samsung Protocol)

(For example, Samsung Protocol)

- Control the cursor until it reaches a preset position number that you want to move and you can check it in the right PIP Screen.

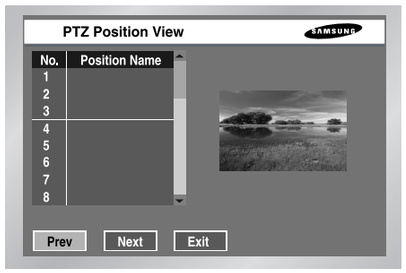

6 Other View

- Press the "VIEW" button in front of SHR-2160/2162/2080/2082 in Single Screen PTZ Camera Control Mode to supply PTZ Camera. This is a very special function.

Note

Samsung, Pan., Pel.-P, or Pel.-D Protocol PTZ Camera supports this function.
Samsung : Auto Pan / Scan / Pattern
Pan. : Auto Pan / Sequence / Sort
Pel.(P,D) : Auto Scan / Frame Scan / Pattern

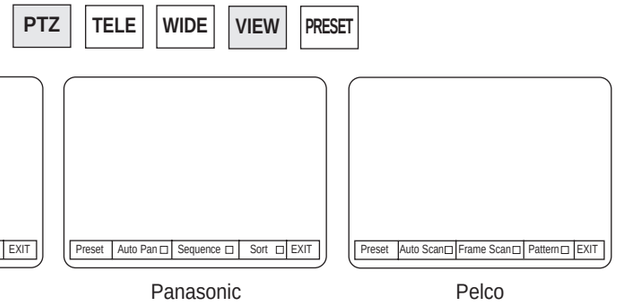

Samsung Panasonic Pelco

- After you select a function, press Enter. Then the function will be checked and start running.
- If you select other function during the operation, the previous function will be unchecked and the current function will be checked.

(For example, Samsung Protocol)

- If you put P/T/Z/ during the operation or enter the Preset Setup or Camera Menu Setup during the operation, the function in action will be suspended and unchecked.
- Restarting SHR-2160/2162/2080/2082 system during the operation has no effect. The function continues its duty and remains checked.

Chapter 7
Recording

1 REC (Normal Recording)

- Pressing REC the button starts recording as set in the record mode. Then, REC LED lights on and a recording icon appears on the screen. During the recording in HDD, the front HDD LED blinks.
- During the normal recording, you can stop it by pressing the REC button. If the recording stops, REC LED lights out.

Warning

If the work that has to stop the recording(Time change, File delete, HDD connect/disconnect etc.) is performed during the recording, the current recording stops.

2 Schedule Recording

- While "Record Schedule" or "Schedule/Event recording" is selected in the Record Schedule menu, Schedule Recording automatically starts. Otherwise, Schedule Recording remains inactivated. During the Schedule Recording, Recording Icon appears on the screen. During the recording in HDD, the front HDD LED blinks.

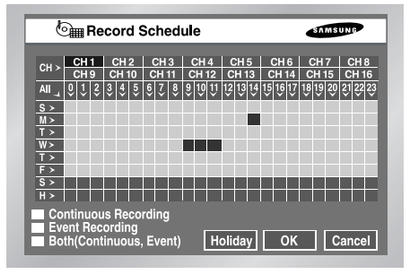

- If the Event Recording is selected, the recording starts at the every event. In this case, the recording is saved according to the Event Record setup of the channel (Video size, Recording quality, Frame rate, Pre-Alarm, Post-Alarm).

Note

Even in case of an event, Event Recording will not start unless Event Recording or Schedule/Event recording is selected in the Schedule Recording.

Warning

If the work that has to stop the recording(Time change, File delete, HDD connect/disconnect etc.) is performed during the recording, the current recording stops.

3 Event Recording

- Alarm Detection
  Sensor operation mode in Alarm of Event Record menu shall be set to N.O (Normal Open) or N.C (Normal Close).
- Motion Detection
  Motion detection in the Event Recording menu shall be set to On.
- Video Loss Detection
  Video Loss in Event Record menu shall be set to On.
- Event Recording Mode
  Sets the recording type when an event occurs. In particular, depending on PreAlarm Off or PostAlarm Off, PreAlarm or PostAlarm Recording is disabled respectively.

Warning

If the work that has to stop the recording(Time change, File delete, HDD connect/disconnect etc.) is performed during the recording, the current recording stops

Chapter 8 Search and Play

Before Use

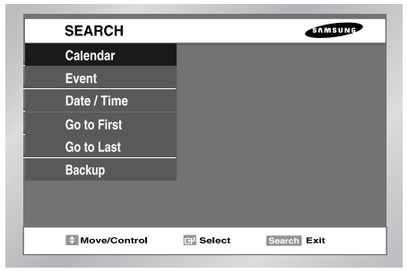

- Pressing the "SEARCH" button shows Search Menu on the screen as seen above.
- Calendar Search searches a video file by the use of a calendar at the desired time.
- Event Search searches a video file recorded by the occurrence of event.
- Date/Time Search searches a video file by the entering of a day and time.
- "Go To First" searches a video file from the oldest one.
- "Go To Last" searches a video file from the latest one.
- Backup Search searches backed-up video file.
  - Searches the backup video of backup device connected with the set.

1 Calendar Search

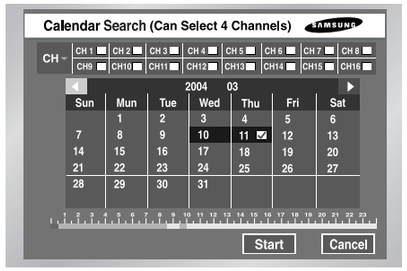
Calendar Search (Can Select 4 Channels)
SAMSUNG
CH ~
CH 1 CH 2 CH 3 CH 4 CH 5 CH 6 CH 7 CH 8
CH9 CH10 CH11 CH12 CH13 CH14 CH15 CH16
2004 03
Sun Mun Tue Wed Thu Fri Sat
Start
Cancel

- Be sure to select both the channel and the date to search. And press the [Start] button to search for the desired time.
- Use a calendar to search the video file of desired time. Four channels in maximum are in the range of search.
- Select the channel up to 4 by the use of ◄, ► and Enter button. And then the date column will be displayed in thick blue when it has a video recorded in the channel.
- Use the ◄, ► button until you reach the Year/Month setup line and use both buttons and the "Enter" button to select Year/Month.
- If you select a day by the [Enter] button, a checkbox will appear on the right of the date number and the checkbox will be checked.
- Use the ▼ button until you reach the Time bar and move to the time you want with the ◄, ► button, and then press the Enter button to select a time.
- If you want to start the search, press the [Start] button. And press the [CANCEL] button to move to the previous menu.
- You are able to search every 30 minutes.
- In the case of the 2080/2082, 8-channel information comes up.

2 Event Search

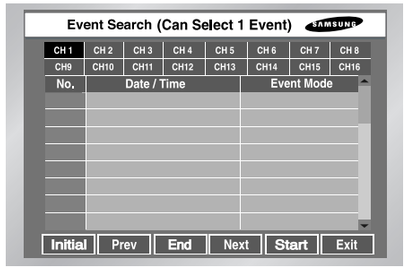

- Searches Normal Recording, Schedule Recording, Alarm Recording, Motion Recording, and V.Loss(Video Loss) Recording by the time.
- You shall select a channel to search to see the event information of the channel.
- On the basis of event information for each channel, the system searches a video file for the event. Only one channel is allowed for video search.
- If you use both the [Enter] button and the ◄, ► button key to select a channel, the system will show the list of event for the selected channel only.
- After channel selection, you can use the ◄, ► [Enter] button to select an event out of the list. The checkbox on the left of the selected event number will be checked.
- If you want to start the search, use the ▼ button until you reach [START] and press the [Enter] button. If you want to cancel the search, move to the [Exit] and press the [Enter] button. If you wish to view the event list of the next screen, select [NEXT] and press the [Enter] button and if you wish to view the event list of the previous screen, select [PREV] and press the [Enter] button.
- When you want to see the initial screen's event list, select the [initial] button, and when you want to see the end screen's event list, select the [end] button.
- In the case of the 2080/2082, 8-channel information comes up.
- If you press the search button while viewing the event recording list, the event search list comes up again.
  This makes searching for the next event easier and faster.

3 Date/Time Search

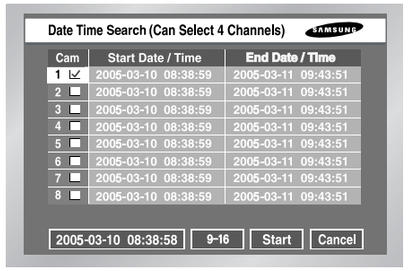

- Use the Day/Time information to search a video file at the time as you desire. Up to 4 channels can be searched at once.
- After you select a channel with the ▲, ▼, [Enter] button, the checkbox on the right of selected event number will be checked.
- Use the ▼ button until you reach the Search Time setup line. Press the [Enter] button to change the search time. Search Time change will be done by the Year/Month/Day/Hour/Minute/ Second unit with the ▲, ▼, button. For your convenience, you may hold on a key to change the value continuously.
- If you want to start the search, use the ▼ button until you reach [START] and press the [Enter] button. If you want to cancel the search, move to the [CANCEL] and press the [Enter] button.
- The time information, 2005-03-10 08:38:58 on the bottom left corner, represents the time when play starts.
- In the case of the 2080/2082, 8-channel information comes up.

4 Go to First Search

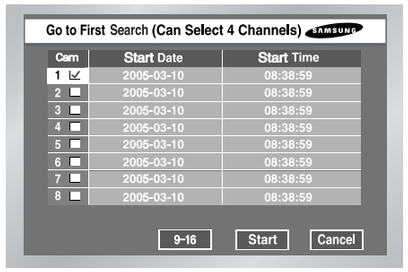

- Searches the oldest one among recorded video files. Up to 4 channels can be searched at once.
- After you select a channel with the ▲, ▼, [Enter] button, the checkbox on the right of the selected channel number will be checked.
- Press the [Start] button want to start the search and to cancel. And press the [Cancel] button to cancel the search.
- In the case of the 2080/2082, 8-channel information comes up.

5 Go to Last Search

- Searches the latest one among recorded video files. Up to 4 channels can be searched at once.
- After you select a channel with the ▲, ▼,[Enter] button, the checkbox on the right of the selected channel number will be checked.
- Press the [Start] button want to start the search and to cancel. And press the [Cancel] button to cancel the search.
- If you start Go To Last Search during recording, the system will search the video image right at the time of entering Search.
- In the case of the 2080/2082, 8-channel information comes up.

6 Backup

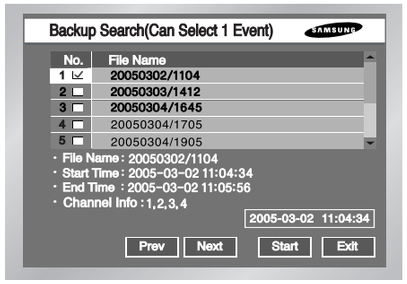

- First, select the backup device.
- Mark the data of device.
- Select the file name to backup, and the detail information of a file is displayed in the below.
- The [Previous] button shows the previous page.
- The [Next] button shows the next page.
- The [Start] button plays the desired file.
- The [Exit] button exits the menu.

Note

SHR-2162/2082 supports the internal CD-R/W.

7 Playback

- In order to play data recorded on the HDD, press the play/pause button (►/II).
- If you used the SEARCH button for playback just before, the system would remember the information of the played channel until you click the PLAY/PAUSE button(►/II) again, then the system plays the previous channel.
  If you press the PLAY/PAUSE button(►/II), the Search Menu will appear as far as you never tried the playback.

Note

Pressing the PLAY button(►/II) does not affect the playback as far as the user stays in the MENU. Be sure to exit from the MENU to start the playback.

- Press the STOP button(■) to stop the playback. If you press the Playback/PAUSE button(►/II) once more, the recording will resume from the point where the previous recording stops. When the data position reaches the end of HDD during the playback, the playback will be paused.

- Play screen mode: You can change play screen mode with the mode button and number buttons as the figure below.

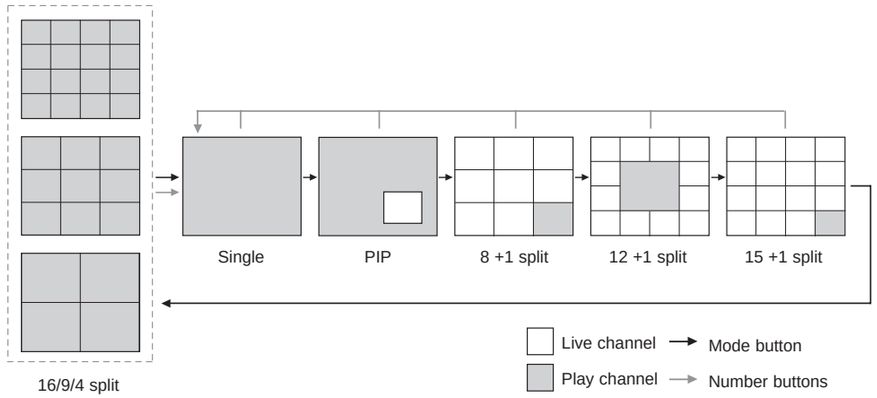

① Single screen : Comes up when you select and play 1 channel in search.

② 4-split screen : Comes up when you select and play between 2 and 4 channels in search.

③ 9-split screen : Comes up when you select and play between 5 and 9 channels in search.

④ 16-split screen : Comes up when you select and play 16 channels in search.

⑤ PIP screen : Comes up when you press the MODE button while playing single screen. (The big screen displays the played channel, and the small screen in the bottom right hand corner is the live channel in PIP form.) You can move the small PIP screen (live channel) up and down with the direction keys. When you press the enter button, a blue bar appears on the live screen, and when you press the desired channel button, you can change the live screen to the selected channel.

⑥ N+1 split screen : Shows x number of (N) live channels and 1 play channel on the screen. In the case of 9 +1 split screen, you can set the location of the play chan nel from the menu.

- Play at Faster Speed
  If you press the LEFT or RIGHT button(◀◀ / ▶▶) during the playback, you will be able to see the screen at the x2, x4, x8, x16, x32, and x64 speed either forwardly or reversely.

- Viewing Still Screen
  If you press the LEFT or RIGHT button(◀◀ / ▶▶) when the system paused, you will be able to see still screens forwardly or reversely.
  During the reverse search, the interval between cuts becomes long depending on the recording specification.

- Audio playback
  Audio can only record/play 4 channels (CH1,CH2,CH3,CH4).
  It is possible to playback audio when converting to single channel of CH1,CH2,CH3,CH4.
  In a split play screen (5/9/16 split), you can move the blue bar from CH1 to CH4 by using the enter button to select an audio playback channel.
  With the audio button, you can activate/deactivate audio playback.
  When activating audio playback, the screen's audio icon turns yellow.
  When deactivating audio playback, the screen's audio icon turns white.

Chapter 9
Smart Viewer

1 Introduction

Smart Viewer is a program that a general PC user is able to install SHR-2160/2162/2080/2082 to his PC to monitor the video and audio data in the real time through network without going to the site where SHR-2160/2162/2080/2082 is installed.

2 Feature

- Thanks to the transmission of video data compressed by the MPEG-4 Video Compression method, it can play the video images of good quality.
- Thanks to the G.726 Voice Compression method, it supplies the voice data of good quality. Use of armored MIC improves the quality of remote voice.
- Thanks to the transmission of video/audio stream through RTP(Real-Time Transport Protocol), the real-time video playback is excellent and multi-users' simultaneous connection does not affect the transmission speed in whole abruptly.
- Command & Control by RTSP(Real-Time Streaming Protocol) enables safety control through the network.
- Variable transport protocols are supported (TCP/IP, UDP(Unicast, Multicast)).
- Connection is open to you at any time to monitor video and audio data by inputting IP Address only.
- You can not only perform real-time recording(*.dvr format) with User's PC whereas necessary during the monitoring but also convert recorded video files(*.dvr format) into frame unit images((JPEG format).
- Up to 3 Smart Viewer users are allowed to connect to a DVR simultaneously. (If the multicast is used, up to 6 users can connect.)
- With a Smart Viewer, you are allowed to connect to as many as 9 SHR-2160/2162/2080/2082s to monitor them simultaneously.
- Smart Viewer is optimized in the resolution of 1024X768.

3 PC Specification(Recommendation)

- OS : Win98SE, WinMe, Win2000, WinXP
- Recommendation : CPU Pentium 3, 1GHz or higher
  RAM 256 MB or higher
  VGA RAM 32Mb or higher
  DirectX 8.1 or higher

Note

Depending on Recording Rate, Video Size, and user's PC specification set to SHR-SHR-2160/2162/2080/2082, the number of Smart Viewer playback frame varies. For the detailed specification, refer to Appendix 5.

4 Smart Viewer Installation

Smart Viewer Installation

- Put a Smart Viewer Program CD in CD-ROM and open the "Smart Viewer" folder in the CD.

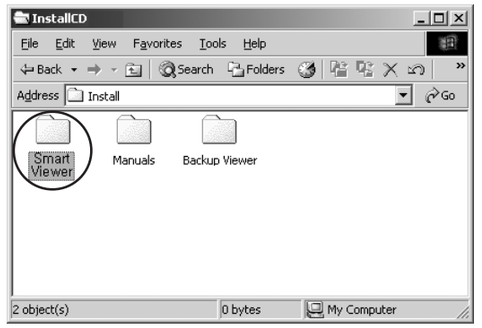

- Run the "Setup.exe" file.

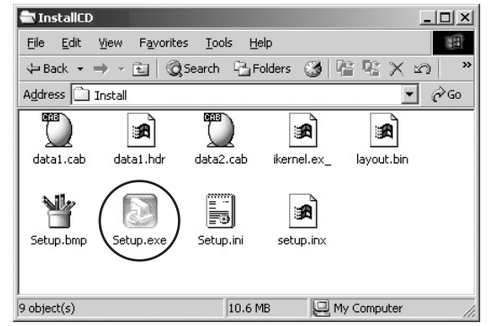

- Click the “Next” button.

InstallShield Wizard
Welcome to the InstallShield Wizard for SmartViewer 2.0
The InstallShield® Wizard will install SmartViewer 2.0 on your computer. To continue, click Next.
< Back
Next >
Cancel

- If you agree with Smart Viewer License, click “Yes”.

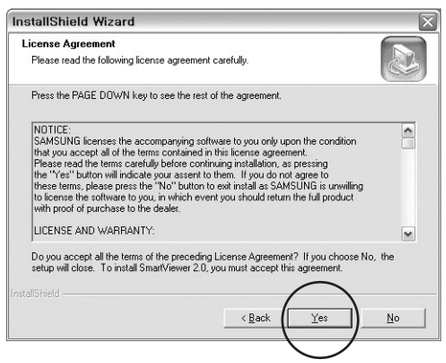
InstallShield Wizard
License Agreement
Please read the following license agreement carefully.
Press the PAGE DOWN key to see the rest of the agreement.
NOTICE:
SAMSUNG licenses the accompanying software to you only upon the condition that you accept all of the terms contained in this license agreement.
Please read the terms carefully before continuing installation, as pressing the "Yes" button will indicate your assent to them. If you do not agree to these terms, please press the "No" button to exit install as SAMSUNG is unwilling to license the software to you, in which event you should return the full product with proof of purchase to the dealer.
LICENSE AND WARRANTY:
Do you accept all the terms of the preceding License Agreement? If you choose No, the setup will close. To install SmartViewer 2.0, you must accept this agreement.
InstallShield
< Back
Yes
No

- Designate a folder to install Smart Viewer in it and click “Next”.

InstallShield Wizard
Choose Destination Location
Select folder where Setup will install files.
Setup will install SmartViewer 2.0 in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\Program Files\Samsung\SmartViewer 2.0
Browse...
InstallShield
< Back
Next >
Cancel

- The system proceeds with setup file installation and system setup.

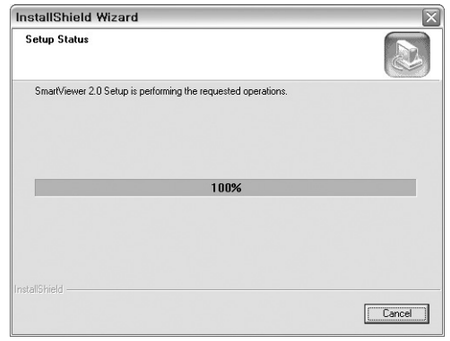

- Installation is complete. Click the “Finish” to terminate the installation.

- Installation is complete. Click the “Finish” to terminate the installation.

5 Smart Viewer Program Execution

- Double-click the Smart Viewer icon in the background screen to run the program.

6 Smart Viewer Initial Screen

- Screen Description

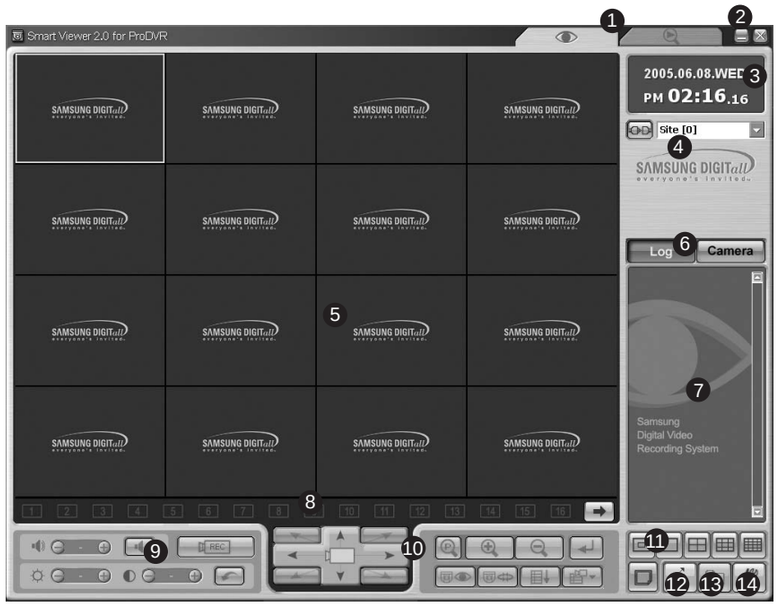

① This is the button to enter the Search mode in which you can search and play remote the video file recorded in SHR-2160/2162/2080/2082 and enter the Monitoring mode for real-time video monitoring.
② This button terminates or minimizes the program.
③ It displays the current date, day, and time.
④ This button is used for the connection with the preset DVR (SHR-2160/2162/2080/2082) or site.
⑤ This screen shows the monitoring video.
⑥ These buttons select the window displays the event message and the window displays the connection condition of camera.
⑦ This window displays the event message from SHR-2160/2162/2080/2082 in the real-time.
⑧ These buttons display the status of current channel.
⑨ These buttons adjust the audio volume and video brightness/contrast, and save the video file.
⑩ These buttons are used for PTZ related functions.
⑪ These buttons are used for screen split and Sequence Mode.
⑫ This button is used for the connection Callback.
⑬ This button is used for Favorite function when connecting to the site.
⑭ This button pops up the Setup Mode window to change Smart Viewer or SHR-2160/2162/2080/2082 setup. (Refer to 9-30. Setup Mode.)

7 Setup Mode

- Initial Screen

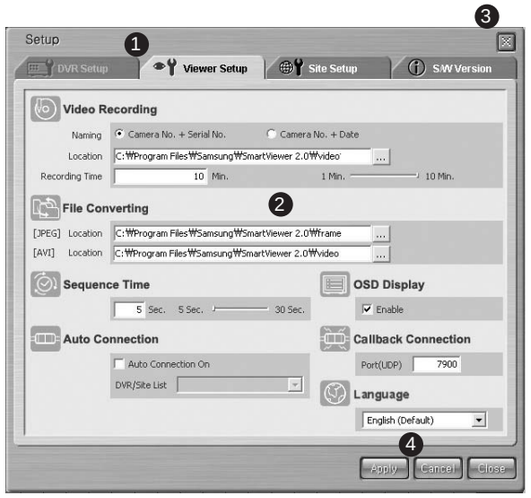

① Button to select items for DVR Setup, Viewer Setup, Site Setup, and S/W Version setup.
② It shows what the selected Setup item can set up in detail.
③ button to terminate the setup window.
④ Button to save the information revised in the setup window, remark the information prior to such a revision, or terminate the setup window.

- Setup Item Selection Button

- It is used for the selection of each setup item.
- It is composed of 4 items- DVR Setup, Viewer Setup, Site Setup, and S/W Version.
- DVR Setup: Allows you to change the remote menu setup items of SHR-2160/2162/2080/2082.
- Viewer Setup : Allows you to set the various kinds of item concerning the operation of Smart Viewer.
- Site Setup : Allows you to set SHR-2160/2162/2080/2082 information, that is SHR-2160/2162/2080/2082 name, IP Address, ID, and Password that you are going to contact through Smart Viewer or registers all the registered SHR-2160/2162/2080/2082s at a site for control.
- S/W Version : Shows the current version of Smart Viewer, system requirement, and the System S/W version of on-line SHR-2160/2162/2080/2082 and upgrades SHR-2160/2162/2080/2082 System S/W remotely.

- Save/Cancellation of Revised Information

- Click the [Apply] button to save the information revised in the setup window and click the [Cancel] button to display the information before such a revision.

- Closing the setup window

- Click the [X] icon on the top of right corner in the setup window or click the [Close] button to close the setup window.
- If more than one setup item have been revised before you close the setup window, the following message box pops up. If you press OK, the revised information will be saved, closing the setup window but if you press CANCEL, the revised information will be flown away, closing the Setup window.

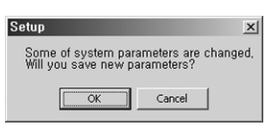

DVR Setup

- Click the [DVR Setup] button for DVR Setup.
- You can change remotely the setup items of SHR-2160/2162/2080/2082 Menu, being connected with Smart Viewer.
- DVR Setup is composed of 5 items; System, Camera/Audio, Monitoring, Recording, and Network.

Note

- You are authorized with access to DVR Setup in an Admin authority only.
- The button will not be activated if you are connected to SHR-2160/2162/2080/2082 as a user or unconnected.

① Among more than one SHR-2160/2162/2080/2082 that is connected now, the name of SHR-2160/2162/2080/2082 connected in the Admin authority will be listed. Depending on connecting to a SHR-2160/2162/2080/2082 or the site, the name of SHR-2160/2162/2080/2082 or the name of SHR-2160/2162/2080/2082 connected in the Admin. Authority among those composing the site will be listed. You can select one to set SHR-2160/2162/2080/2082 Menu.



② To display the setup menu for selected SHR-2160/2162/2080/2082.

- Detailed DVR Setup Items
  ① System
  - Information
    Information shows the information on on-line SHR-2160/2162/2080/2082.

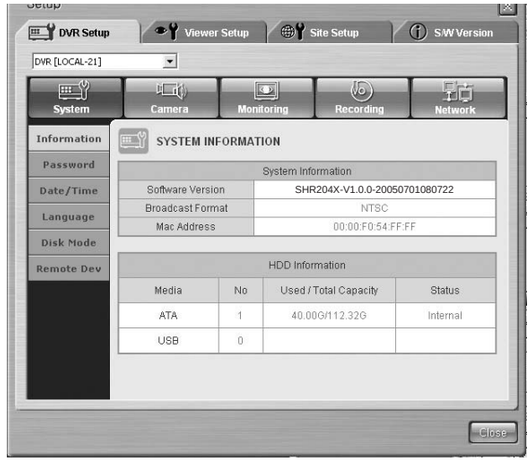

Note

For the detailed items of DVR Setup, refer to Chapter 5.

- Password
  Sets the password for the control of SHR-2160/2162/2080/2082 Menu or SHR-2160/2162/2080/2082 key input.

⚠ Caution

System Password shall be composed of numeric only, up to 8 digits.

Note

- The Delete key and the combination of Ctrl+C or Ctrl+V in the keyboard are not supported at the System Password input.
- Use the BACKSPACE key to delete the contents.

Note

Default System Password is set to 4321.

- Date/Time
  Data/Time is used to set the information of Date, Time, Format, and DST for on-line SHR-2160/2162/2080/2082.

Note

- If you change the Data/Time value, SHR-2160/2162/2080/2082 automatically cuts the connection with Smart Viewer to apply the new time setup.
- Upon completing the new time setup for SHR-2160/2162/2080/2082, you are permitted to resume the connection with the Smart Viewer.
- But, Display Format or DST can be set without the disconnection.

- Language
  Language sets the language in which on-line SHR-2160/2162/2080/2082 will be expressed

Note

The change of language by the system language results in the change of language expression setup of SHR-2160/2162/2080/2082. In short, the language setup of Smart Viewer does not change.
Language specification to be supported is subject to change later.

- Disk Mode
  In Disk Mode, you can set the writing mode of HDD installed to SHR-2160/2162/2080/2082.

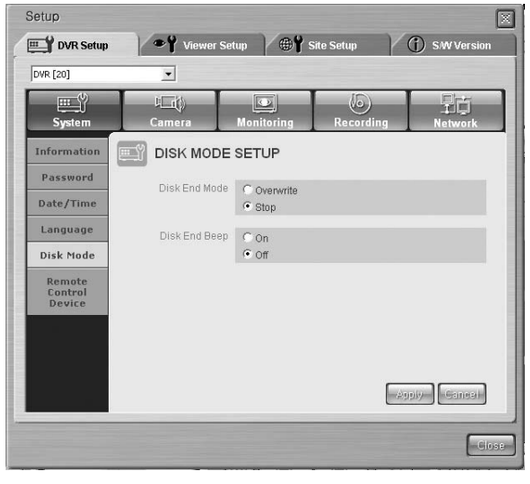

- Remocon (Remote Control Device)
  Remocon can set the remote control device installed to SHR-2160/2162/2080/2082.

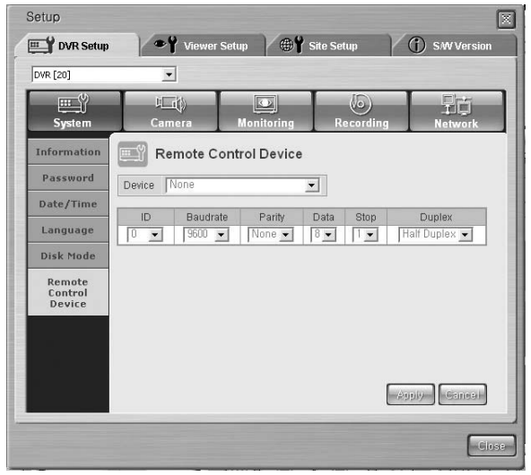

Note

If you install the remote control device to the main body of SHR-2160/2162/2080/2082
and activate the setup, PTZ control is not available in the Viewer.

② Camera
- Config.
  Config. sets Video, Audio On/Off, Camera Title, and Auto Sequence Time for each channel of on-line SHR-2160/2162/2080/2082.

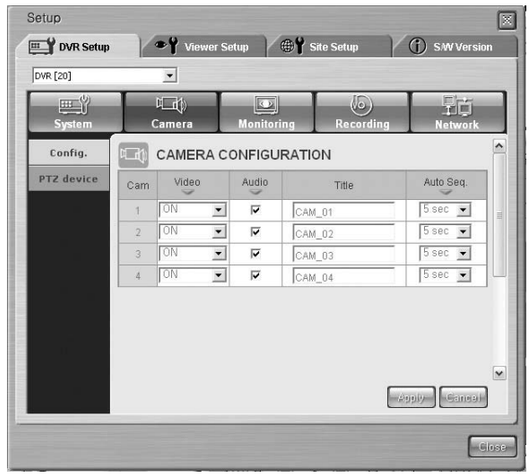

⚠ Caution

- Only English is supported for the title. If you type in and apply the title in your native language, warning message pop sup to ask your retyping.
- The title should be composed of no more than 15 digits.
- If you leave the title blank and apply it, Warning message pops up to ask your retyping.

Note

- The Delete key and the combination of Ctrl+C or Ctrl+V in the keyboard are not supported for title input.
- Use the BACKSPACE key to delete the contents.

- PTZ device
  It sets Camera ID, Protocol, Baud Rate, Parity, Data Bit, Stop Bit, and Serial Mode when connecting the dome camera to all the channels.

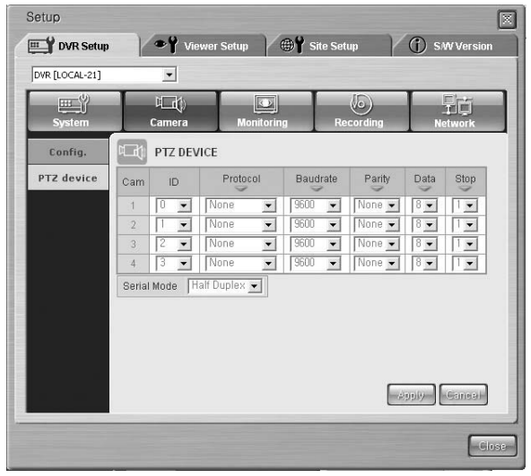

③ Monitoring
- Monitoring
  It sets both the event monitoring and OSG display of the live mode.

④ Recording
- Rec. Mode
  It sets the Video Size, Quality, and Rate values during the recording by the setting the recoding ON/OFF for the related channel in the live mode.

NTSC

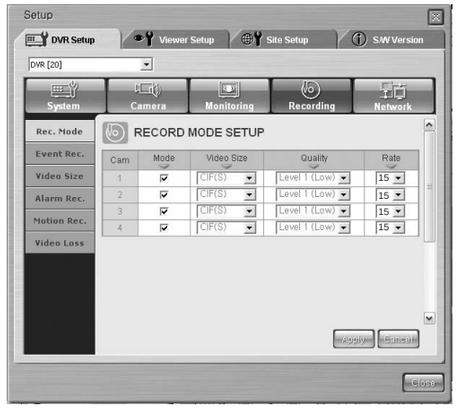

PAL

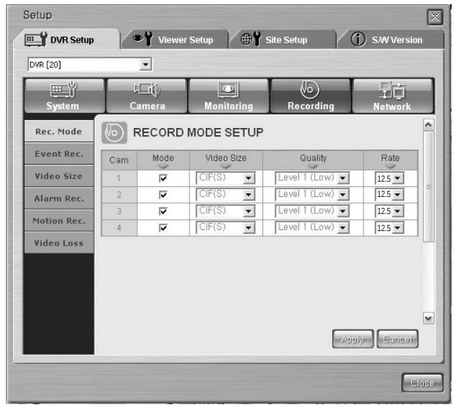

Note

Full D1(L) Video Size does not support 15ips, 10ips (NTSC) / 12.5ips, and 8.33ips(PAL) Rate.

- Video size Rec.
  Sets the Video size. The Video size being set in the menu affects to the ips setup of Rec. Mode and Event Rec.

- Event Rec.
  It sets the Video Size, Quality, Rate, Pre Alarm, and Post Alarm values to be recorded when an event occurs.

NTSC

PAL

Note

Full D1(L) Video Size does not support 15ips, 10ips(NTSC)/12.5ips, and 8.33ips(PAL) Rate.

- Alarm Rec.
  It sets the information necessary for the alarm recording.

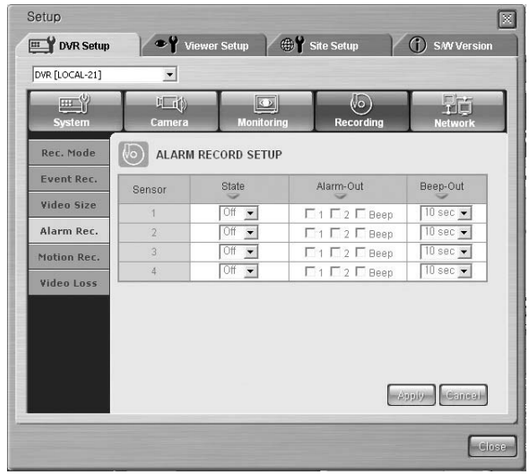

Note

More than one camera should be selected to apply the alarm.

- Motion Rec.
  It sets the information necessary for the recording by the motion Detection.

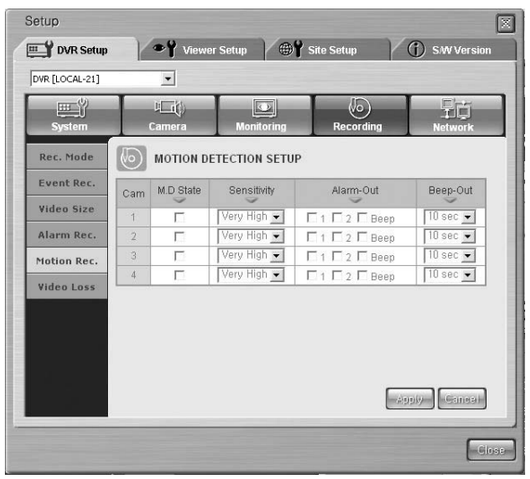

- Video Loss
  Video Loss sets up the information on how to inform the user of Video Loss of SHR-2160/2162/2080/2082.

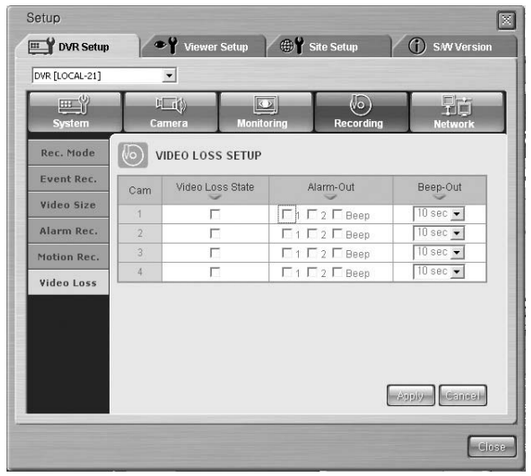

⑤ Network
- Password
  It sets the password for Admin and User when connecting with SHR-2160/2162/2080/2082 through the network in Smart Viewer.

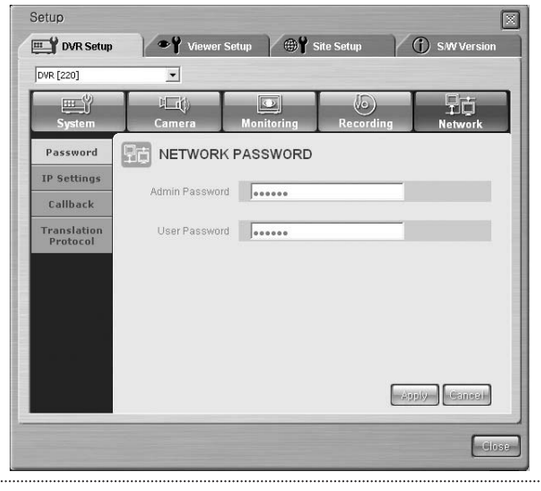

Caution

- Network password should be composed of numeric and it can be input up to 8 digits.
- If you leave password blank and apply it, a warning message pops up to ask your retyping.

Note

- The Delete key and the combination of Ctrl+C or Ctrl+V in the keyboard are not supported to the network password input.
- Use the BACKSPACE key to delete the contents.

Note

- Default Admin Password is set to 654321.
- Default User Password is set to 654321.

- IP Settings
  It sets the network connection method of SHR-2160/2162/2080/2082.
  SHR- SHR-2160/2162/2080/2082 supports the connection with Static IP, Dynamic IP, and ADSL(PPPoE). It can set the network bandwidth.
  Adjust the bandwidth to the network condition in which SHR-2160/2162/2080/2082 is connected.
  It sets the IP Address, Gateway, Subnet Mask, and DNS. Input both ID and password of the sub scriber for ADSL.

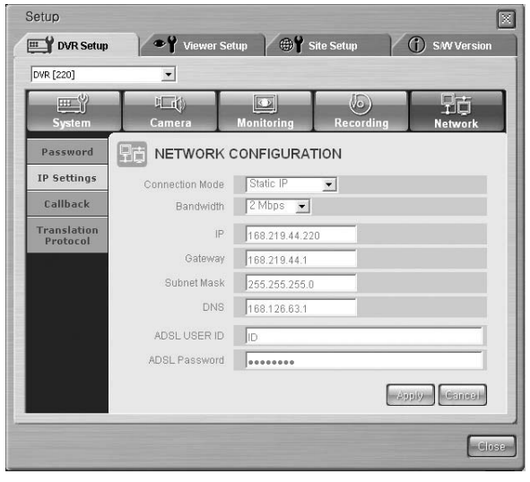

Caution

- Be sure to inquire the network manager before you input Network IP, Gateway, Subnet Mask, and DNS.
- Both ADSL ID and Password can be input up to 40 digits of alphabets, numbers, and symbols without discrimination.

● Callback
- You can set the Callback function of SHR-2160/2162/2080/2082.
- In the event of Alarm, Motion Detection, or Video Loss, set the IP address and port of PC where SmartViewer is installed to forward Callback messages. In failure of message forwarding, set the value for retrial.

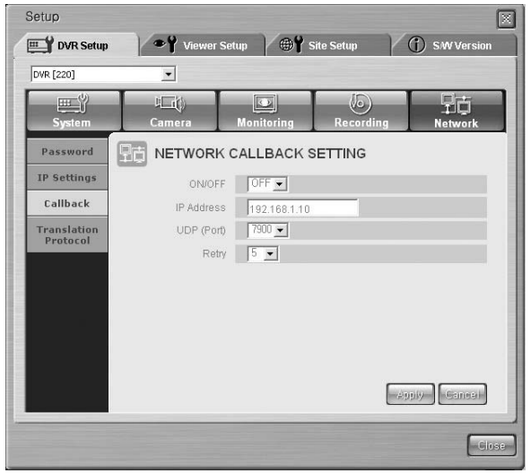

● Transfer Protocol
- You can change the transfer protocol setting value. The protocol supports TCP/IP and UDP(Unicast, Multicast). Control Port(TCP/IP) and Port(UDP) to alter the connection port. Both Multicast IP and TTL are used for UDP(Multicast).

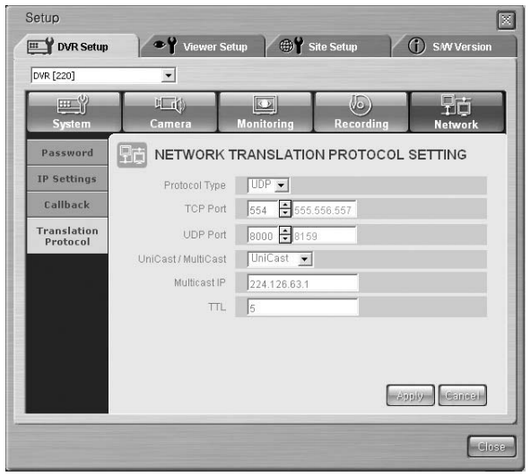

Note

- SHR-2160/2162/2080/2082 uses 4 ports for TCP connection.
- The PORT number is flexible and 4 consecutive numbers are grouped for the change (554,555,556,557 → 558,559,560,561)
- If you use the IP Router for network composition, you should allocate a protocol for SHR-2160/2162/2080/2082.

Viewer Setup

- Click the [Viewer Setup] for Viewer Setup.
- Viewer Setup sets the various kinds of item related to the operation of Smart Viewer.
- Viewer Setup is composed of 5 items; Video Recording, File Converting, Sequence Time, OSD Display, and Auto Connection.

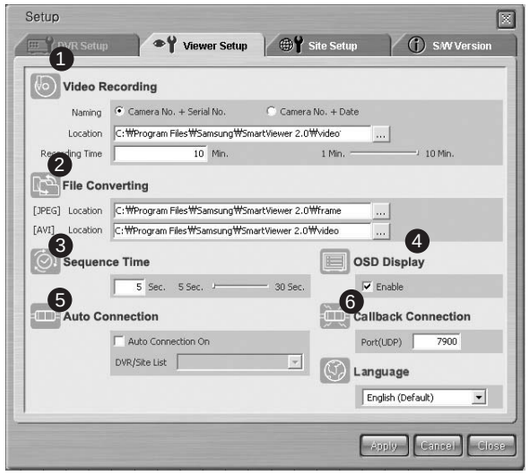

① Item to set the information necessary for saving the video data displayed into *.dvr file when connecting with SHR-2160/2162/2080/2082.
② Item to set the information necessary for converting the file saved in your PC with *.dvr file into JPEG.
③ Item to set the information necessary for the auto sequence mode.
④ Item to set the information of Smart Viewer OSD.
⑤ Item to set whether Smart Viewer shall be automatically connected to DVR(SHR-2160/2162/2080/2082) or Site when it begins running.
⑥ Item to set a port for the callback connection.

- Video Recording
  ① Naming

  - Being connected to SHR-2160/2162/2080/2082 in the monitoring or search mode, you can save the video displayed with ∗.dvr file and name it.
  - If you set to "Camera No. + Serial No.", the file name depends on the camera number and serial number. If set to "Camera No. + Date", it depends on the camera number, current date, and time.

  ② Location



  - When connecting with SHR-2160/2162/2080/2082 in the monitoring or search mode and saving the video displayed, it sets the directory where ∗.dvr file to be saved.
  - The current default directory is "Directory that installs Smart Viewer Program \ video \ ∗.dvr".

  ③ Recording Time

  - When connecting with SHR-2160/2162/2080/2082 in the monitoring or search mode and saving the video displayed, it sets the maximum saving time.
  - The saving time can be set from 1 to 10 minutes. If the saving time exceeds the preset time, the saving stops automatically.

- File Converting
  [JPEG]
  ① Location



  - You can convert the file saved in your PC with ∗.dvr format into JPEG file. The frames composing ∗.dvr file will be converted into JPEG file. Sets the directory in which the converted JPEG file will be saved.
  - The current default directory is "Directory that installs Smart Viewer Program \ frame".

- Sequence Time

  - When connecting with SHR-2160/2162/2080/2082 in the monitoring mode, set the auto sequence time if the auto sequence is set. The time can be set from 10 to 20 minutes.

- OSD Display

  - Sets if OSD shall be displayed on each channel of Smart Viewer.
  - Whether you check "Enable" or not, OSD will appear or not. However, Audio icon, PTZ icon, REC icon, and Alarm/Motion event icon will not be affected by the OSD condition.

- Callback Connection

  - Sets the port for Callback connection.

- Auto Connection
  - Sets if the smart viewer is automatically connected to SHR-2160/2162/2080/2082 or site at the initial operation.
  - If you check "Auto Connection On", the names of SHR-2160/2162/2080/2082 and Site currently registered at the DVR/Site list will be displayed in the following list. If you select one from the list, the smart viewer will connect to the selected SHR-2160/2162/2080/2082 or Site when it operates later.

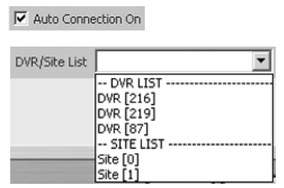

- Language

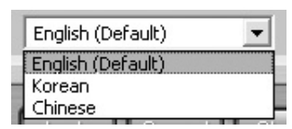

  - Sets the language used in the SmartViewer.

Site Setup

- Click the [Site Setup] button for Site Setup.
- The information of DVR(SHR-2160/2162/2080/2082) or Site that you want to connect by Smart Viewer is set in the Site Setup.
- Smart Viewer allows you to connect with DVR(SHR-2160/2162/2080/2082) or Site registered only here.

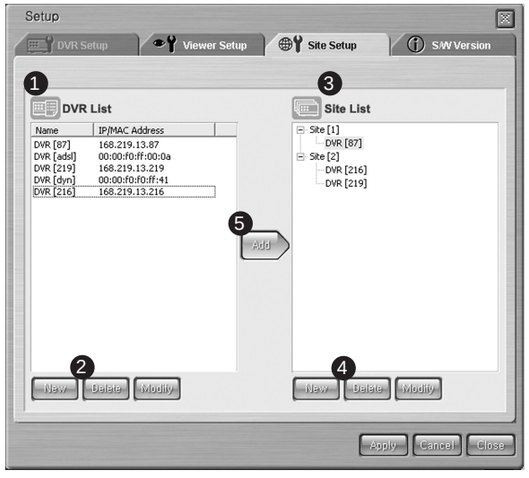

① The DVR(SHR-2160/2162/2080/2082) list that registered by the user is displayed.
② The button to add a new DVR(SHR-2160/2162/2080/2082), delete, or edit the exist DVR(SHR-2160/2162/2080/2082)
③ The site list that registered by the user is displayed.
④ The button to add a new site, delete, edit the exist site, or delete DVR(SHR-2160/2162/2080/2082) that composes the site.
⑤ The button to add DVR(SHR-2160/2162/2080/2082) selected from the DVR list to the Site selected from the Site list. But, if the selected DVR(SHR-2160/2162/2080/2082) is set to ADSL Network, it cannot be registered to the site.

- DVR List

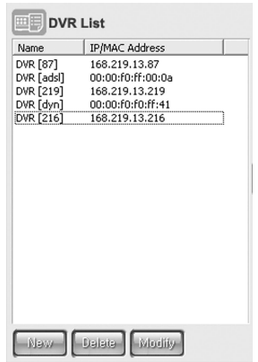

- The information of DVR(SHR-2160/2162/2080/2082) that you want to connect by Smart Viewer is set in the DVR List.
- You can register a new DVR(SHR-2160/2162/2080/2082) or delete and edit the DVR(SHR-2160/2162/2080/2082) selected from the registered list, and the name and IP / MAC Address of the registered DVR(SHR-2160/2162/2080/2082) is displayed in DVR List.

① To add a new DVR(SHR-2160/2162/2080/2082)

New

- If you press the [New] button, the following window will pop up where you are able to add a new DVR(SHR-2160/2162/2080/2082) information.

1. Network Modes - LAN
   - If DVR(SHR-2160/2162/2080/2082) is connected to the LAN, set the network mode to LAN.
   - If the LAN connected to DVR(SHR-2160/2162/2080/2082) uses Static IP, select Static IP in the Address Type and input the name and IP address of DVR(SHR-2160/2162/2080/2082).
   - You should select a PORT in accordance with the PORT number set at the DVR(SHR-2160/2162/2080/2082) network menu.

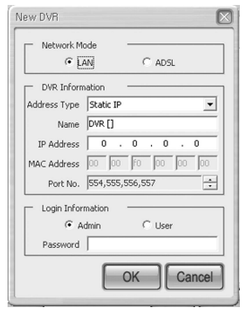

- If the Dynamic IP has been allocated for the ADSL that connected with DVR(SHR-2160/2162/2080/2082) through the DHCP or PPPoE, select DHCP/ PPPoE in the Address Type and input the name and MAC address of DVR(SHR-2160/2162/2080/2082).
- You should select a PORT in accordance with the PORT number set at the DVR(SHR-2160/2162/2080/2082) network menu.

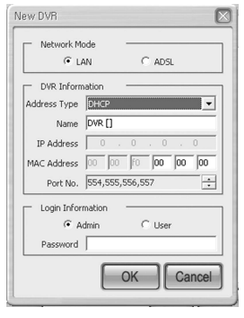

2.Network Modes - ADSL
- If DVR(SHR-2160/2162/2080/2082) is connected to the ADSL, set the network mode to ADSL.
- If the ADSL connected to DVR(SHR-2160/2162/2080/2082) uses Static IP, select Static IP in the Address Type and input the name and IP Address of DVR(SHR-2160/2162/2080/2082).
- You should select a PORT in accordance with the PORT number set at the DVR(SHR-2160/2162/2080/2082) network menu.

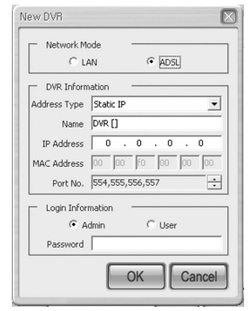

- If the Dynamic IP has been allocated for the LAN that connected with DVR(SHR-2160/2162/2080/2082) through the DHCP, select DHCP in the Address Type and input the name and MAC address of DVR (SHR-2160/2162/2080/2082).
- You should select a PORT in accordance with the PORT number set at the DVR(SHR-2160/2162/2080/2082) network menu.

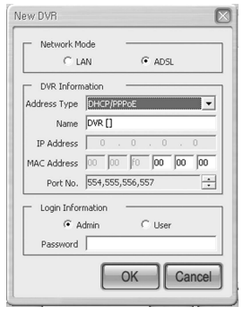

Note

- As it is possible to enter a DVR name in English and Korean, in English you may enter up to 15 characters and enter up to 7 characters in Korean.
- The login password should be same to the network password for SHR-2160/2162/2080/2082 to connect.
- To add a new DVR, input all the information required.

Note

- The MAC address of DVR is written at the side label of the product. It is also found in the system information of DVR Menu.
- If the DVR(SHR-2160/2162/2080/2082) is connected to ADSL, the network bandwidth is low. Therefore, the transfer rate becomes low and the viewer operates in the more limited range.
- The viewer can monitor up to 4CH all the same time.
- The viewer can search or play only 1CH.
- The audio does not play.
- The number of playback frame is 0.5 ips in average, but it is variable depending on the number of channel and video size under simultaneous monitoring.

② Deletion of an old DVR(SHR-2160/2162/2080/2082)

Delete

- If you select a DVR(SHR-2160/2162/2080/2082) in the DVR list for deletion and press the [Delete] button, the following message box pops up. Press the [OK] button to delete the DVR(SHR-2160/2162/2080/2082).



- When the DVR(SHR-2160/2162/2080/2082) for deletion is connected with the Smart Viewer, the following message box pops up and the DVR(SHR-2160/2162/2080/2082) cannot be deleted. Be sure to cut the connection between the DVR(SHR-2160/2162/2080/2082) and the Smart Viewer before you delete it.

③ To Edit the old DVR(SHR-2160/2162/2080/2082)

Modify

- If you select a DVR(SHR-2160/2162/2080/2082) in the DVR list to edit and press the [Edit] button, the following message box pops up. Press [OK] button to edit the DVR(SHR-2160/2162/2080/2082).

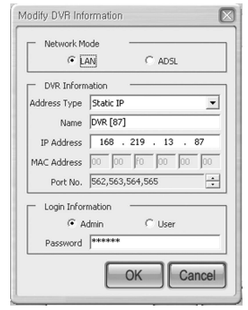

- When the DVR(SHR-2160/2162/2080/2082) to edit is connected with the Smart Viewer, the following message box pops up and the DVR (SHR-2160/2162/2080/2082) cannot be edited. Be sure to cut the connection between the DVR(SHR-2160/2162/2080/2082) and the Smart Viewer before you edit it.

- Site List

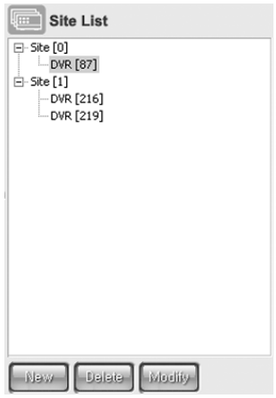

- You can register and control the many DVRs(SHR-2160/2162/2080/2082) to be connected with the smart viewer at once with a site in the site list. You are allowed to register a new site ,and delete or edit the selected site in the registered list. Also, you can add or delete a DVR(SHR-2160/2162/2080/2082) to the site selected in the site list.
- In the site list, both the name of a registered site and the name of DVR(SHR-2160/2162/2080/2082) that composes the site are displayed with a list. A site can be composed of the maximum 9 DVRs(SHR-2160/2162/2080/2082).

① New site addition

- If you press the [New] button, the following window pops up and you can allowed to input the information for a new site.
- The information to be input is the site name.

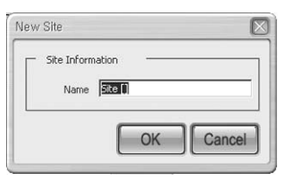

Note

The site may be named in both English and Korean with the maximum 10 letters.

② To delete an old site or DVR(SHR-2160/2162/2080/2082)

- If you select a site or DVR(SHR-2160/2162/2080/2082) in the site list for deletion and press the [Delete] button, the following message box pops up. Press the [OK] button to delete either site or DVR (SHR-2160/2162/2080/2082).
- When deleting the DVR(SHR-2160/2162/2080/2082), it is deleted from the site composition but the DVR(SHR-2160/2162/2080/2082) information is not deleted.



- When the site to delete or the site that is composed of the DVR (SHR-2160/2162/2080/2082) to delete is connected with the Smart Viewer, the following message box pops up and the site or the DVR (SHR-2160/2162/2080/2082) cannot be deleted. Be sure to cut the connection between the DVR (SHR-2160/2162/2080/2082) and the Smart Viewer before you delete it.

③ To edit the information of an old site

- If you select a site in the site list to edit and press the [Edit] button, the following message box pops up and you can edit the site information.

- When the site to edit is connected with the Smart Viewer, the following message box pops up and the site cannot be edited. Be sure to cut the connection between the DVR(SHR-2160/2162/2080/2082) and the Smart Viewer before you edit it.

- If you select a DVR(SHR-2160/2162/2080/2082) and press the [Edit] button, the following message box pops up and the DVR(SHR-2160/2162/2080/2082) cannot be edited. To edit the DVR(SHR-2160/2162/2080/2082), go to the DVR list.

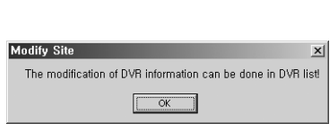

- To add a DVR(SHR-2160/2162/2080/2082) to the site

- If you press the [Add] button, the DVR(SHR-2160/2162/2080/2082) selected in the DVR list is added to the site selected in the site list. The DVR(SHR-2160/2162/2080/2082) set to ADSL cannot be added to the site.
- You can add up to 4 DVRs(SHR-2160/2162/2080/2082) to a site and the DVR(SHR-2160/2162/2080/2082) composing the site can be deleted in the site list.
- If you press the [Add] button unless a site is registered in the site list, a new site named "Site [0]" as a default is created and the DVR(SHR-2160/2162/2080/2082) add to it.
- When the site to add a DVR (SHR-2160/2162/2080/2082) is connected with the Smart Viewer, the following message box pops up and the addition of DVR(SHR-2160/2162/2080/2082) to the site is impossible. Be sure to cut the connection between the DVR(SHR-2160/2162/2080/2082) and the Smart Viewer before you add a DVR(SHR-2160/2162/2080/2082).

S/W Version

- If you press the [S/W Version] button, the smart viewer version, system requirements, and the version of DVR(SHR-2160/2162/2080/2082) System S/W, being connected to the smart viewer, are displayed.
- You can upgrade the on-line DVR(SHR-2160/2162/2080/2082) System S/W remotely. You are authorized with S/W upgrade in an Admin authority only. With the authority of user or without connecting with the DVR(SHR-2160/2162/2080/2082), your access will be denied.

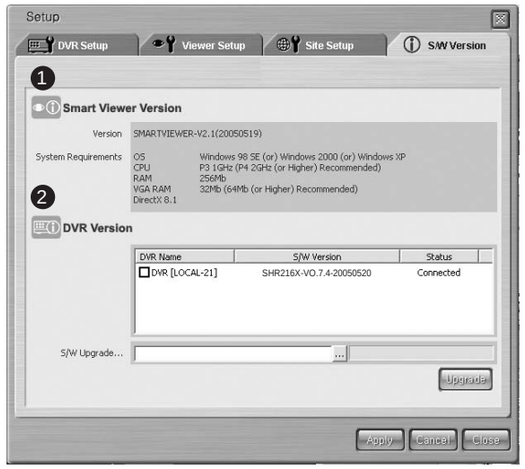

① Displays the smart viewer version and system requirements.
② Displays the version and name of DVR if any DVR(SHR-2160/2162/2080/2082) is being connected with the smart viewer. You are also able to upgrade remotely the on-line DVR(SHR-2160/2162/2080/2082) S/W.

- Smart Viewer Version

Version	SMARTVIEWER-V2.0(20050126)	
System Requirements	OS	Windows 98 SE (or) Windows 2000 (or) Windows XP
	CPU	P3 1GHz (P4 2GHz (or Higher) Recommended)
	RAM	256Mb
	VGA RAM	32Mb (64Mb (or Higher) Recommended)
	DirectX 8.1	

- Smart Viewer Version and system requirements are displayed.

- DVR Version

DVR Name	S/W Version	Status
DVR [216]	SHR-2160/2162/2080/2082 -MAIN-V0.5-200501261626	Connected
DVR [219]	Unknown	Not Connected

- DVR Version not only displays the connected DVR(SHR-2160/2162/2080/2082) name if any DVR(SHR-2160/2162/2080/2082) is being connected with Smart Viewer or the name of DVR(SHR-2160/2162/2080/2082) composing a site if any DVR(SHR-2160/2162/2080/2082) is being connected with the site but also displays DVR(SHR-2160/2162/2080/2082) S/W version.
- When the smart viewer does not connected with the DVR (SHR-2160/2162/2080/2082), it displayed with a gray and "Not connected" is displayed in the status.
- Each DVR Version has a check box, which is used for S/W Upgrade.

- DVR(SHR-2160/2162/2080/2082) S/W Upgrade
  - Smart Viewer upgrades on-line DVR(SHR-2160/2162/2080/2082) S/W remotely.

① Select a DVR(SHR-2160/2162/2080/2082) to be upgraded among DVRs(SHR-2160/2162/2080/2082) on line.

DVR Name	S/W Version	Status
☑ DVR [216]	SHR-2160/2162/2080/2082 -MAIN-V0.5-200501261626	Connected
DVR [219]	Unknown	Not Connected

② Click the following button to open the "SHR-2160/2162/2080/2082 Firmware" file in format.

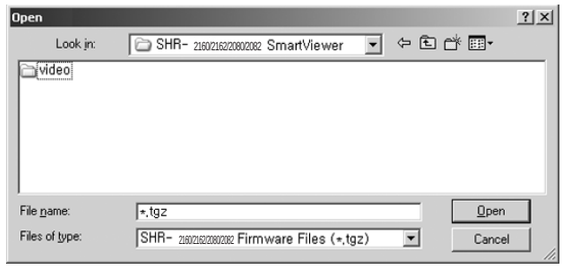

③ Press the [Upgrade] button to transmit a file to the selected DVR(SHR-2160/2162/2080/2082) and start the upgrade of DVR(SHR-2160/2162/2080/2082) S/W.

④ The progress of file transmission and upgrade is displayed at the bottom.

⚠ Caution

Be sure to suspend all the DVR system functions in action such as recording, MENU, backup, and playback before you upgrade the DVR(SHR-2160/2162/2080/2082) S/W.
Never try to turn the DVR(SHR-2160/2162/2080/2082) power off during the S/W upgrade.
The S/W upgrade requires about 5 minutes.
If the S/W upgrade is suspended accidentally, the previous S/W will be left intact.

Note

You may download the upgraded firmware for the s/w of the DVR (SHR-2160/2162/2080/2082) from the CCTV part at www.sec.co.kr.

8 Monitoring Mode

- DVR(SHR-2160/2162/2080/2082) / SITE Connection
  - Select the name of DVR(SHR-2160/2162/2080/2082) or site for connection and click the connection button.

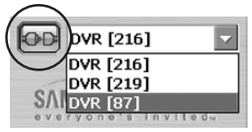

Note

You can set the name, IP, and password of DVR(SHR-2160/2162/2080/2082) for connection in the Setup mode. Also, the site setup which permits simultaneous connection to multi-DVRs(SHR-2160/2162/2080/2082) is available in the Setup mode.
You are allowed for the simultaneous connection with no more than 9 DVR(SHR-2160/2162/2080/2082) as you approaches at the site.

◆ Connection Failure Cases

1. Password Certification Failure

- In case of discord between the Network password set to SHR-2160/2162/2080/2082 and the connection password set to Smart Viewer, a window pops up to induce retry of password input.

2. Admin User Connection Failure

- Where SHR-2160/2162/2080/2082 that you wish to connect to has been already occupied by other user in an Admin authority, you are authorized with access to SHR-2160/2162/2080/2082 concerned in a User authority.

Note

No more than 3 users, one Admin. authorized user and 2 User authorized users are allowed to access SHR-2160/2162/2080/2082 simultaneously.(In the case of multicast, 5 User authorized users are allowable.)

⚠ Caution

Once occupied by 3 users(In the case of multicast, 6 users), SHR-2160/2162/2080/2082 does not permit more connection.

- Monitoring Mode Connection Screen

⚠ Caution

If you change the "Video size" or "Color Quality" from the setup tab of [Display Registration Information] while Smart Viewer is running, Smart Viewer will fall into an unexpected condition.
You should terminate the Smart Viewer first to change them.

- Mode Conversion Button

  - This button converts the monitoring mode and the search mode.

- Time Information



  - As soon as you are connected to SHR-2160/2162/2080/2082, the current date, day, and time of SHR-2160/2162/2080/2082 will be displayed.
  - Otherwise, the current date, day, and time of your PC will be displayed.

- Connection Information

  - As soon as you are connected to SHR-2160/2162/2080/2082, the connection button will display connection status.
  - If you click the connection button here, connection will be cancelled.

- Play Screen OSD Information

① Channel no., camera name, and video size will be displayed.
Video Size : (C)CIF / (N)Normal / (L)Large
② If the Video data of the current channel are recorded in your PC, REC mark is displayed.
③ Audio ON/OFF Button is displayed.
④ The name and IP address of SHR-2160/2162/2080/2082 in connection are displayed.
⑤ The current channel alarm status is displayed.
⑥ The controllability of the current channel PTZ is displayed.

Note

③ Clicking the speaker icon turns the audio of channel on or off.
: Audio OFF *: Audio ON*

If you turn the audio of a SHR-2160/2162/2080/2082 channel off, "Disable" will be displayed.
: Audio Disabled

✳ For the Audio on channel now, use the following audio button to adjust the volume and set the mute.

Note

⑤ the alarm or motion detection occurs at the channel of SHR-2160/2162/2080/2082, which is set to alarm or motion detection, it is displays on the screen in the real-time with an icon.
: Motion Detection *: Alarm Event*

Note

⑥ If you connect and set up PTZ Camera in SHR-2160/2162/2080/2082, PTZ controllability for the channel will be displayed.

✳ Select a channel capable of PTZ and use the PTZ button at the bottom to control PTZ. (Refer to the description of PTZ button.)

- Event Log Display Window

- Click the Log button to activate the log display window.
- It displays the event(alarm, user connection, and setup change) occurring at SHR-2160/2162/2080/2082 in the real-time.

Note

[Event Message]

- ► *Connecting.. : Trying to connect to SHR-2160/2162/2080/2082.*
- ► *Connected.. : Succeeded connecting to SHR-2160/2162/2080/2082.*
- ► *Connection Failed : Failed in connecting to SHR-2160/2162/2080/2082.*
- ► *Disconnected.. : Finished connecting to SHR-2160/2162/2080/2082.*
- ► *Setup(Remote) : SHR-2160/2162/2080/2082 setup at Dvr Setup of Viewer changed.*
- ► *Setup Start / End (Local) : Start/Finish the Menu screen at SHR-2160/2162/2080/2082.*
- ► *Video Loss CH[N] : Video Loss at the N channel of SHR-2160/2162/2080/2082 encountered.*
- ► *Alarm Detection CH[N] : Alarm issued at the N channel of SHR-2160/2162/2080/2082.*
- ► *Motion Detection CH[N] : Motion detected at the N channel of SHR-2160/2162/2080/2082.*
- ► *Time Change : Date/Time of SHR-2160/2162/2080/2082 changed.*
- ► *Load Factory Default : SHR-2160/2162/2080/2082 System initialized.*
- ► *Network Change : SHR-2160/2162/2080/2082 Network setup changed.*
- ► *System Shutdown : SHR-2160/2162/2080/2082 System terminated.*
- ► *Hdd Format : SHR-2160/2162/2080/2082 HDD initialized.*
- ► *Disk Full : No more space in SHR-2160/2162/2080/2082 HDD.*
- ► *Power Failure Recovery : SHR-2160/2162/2080/2082 resumed after power failure.*
- ► *Backup Start/End/Fail/Stop : Backup at SHR-2160/2162/2080/2082 started/ finished/failed/stopped.*
- ► *Network Traffic Busy : Data transport in the network is not smooth.*
- ► *Access Denied(Limit Over) : Over connection.*

⚠ Caution

When Time Change, Load Factory Default, Network Change, System Shutdown, or Hdd Format event occurs, Smart Viewer terminates the connection automatically.

- Camera connection Indication Window

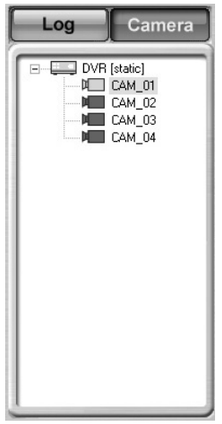

- Displays the connection condition of DVR and CAMERA in the list.

Note

[DVR Icon Color]

- ► *Successfully connected to SHR-2160/2162/2080/2082, the icon turns yellow, otherwise, turns black.*

[DVR Icon Color]

- ► *Connected to CAMERA for monitoring, the icon turns yellow.*
- ► *Connectable, the icon turns blue, otherwise, turns black.*

- Screen Split Selection Button

  - Small Sized Single / Single / Quad / Nine-Split Mode Sixteen-Split Mode
  - You can change the Split Mode of the screen under monitoring.

- Sequence Mode Button

  - Changes the channel to be played at the preset interval.
  - The sequence time interval can be set at the Setup Mode?Viewer Setup.
  - In Single Mode : 1 → 2 → 3 → 4 → 5 → 6 → 7 → 8 → 9 → 10 → 11 → 12 → 13 → 14 → 15 → 16 → 1 (CH)
  - In Quad Mode : 1,2,3,4 → 5,6,7,8 → 9,10,11,12 → 13,14,15,16 → 1,2,3,4 (CH)
  - In Nine-Split Mode : 1,2,3,4,5,6,7,8,9 → 10,11,12,13,14,15,16 → 1,2,3,4,5,6,7,8,9(CH)
  - In Sixteen-Split Mode : 1,2,3,4,5,...,13,14,15,16 → 1,2,3,4,5,...,13,14,15,16 (CH)

Note

When connecting many DVRs (SHR-2160) with site, the sequence operates as follows.

- ***In Single Mode : DVR1:1CH →...→ DVR1:16CH → DVR2:1CH →...→ DVR2:16CH***
- ***In Quad Mode : DVR1:1,2,3,4CH →...→ DVR1:13,14,15,16CH → DVR2:1,2,3,4CH →...→ DVR2:13,14,15,16CH***
- ***In Nine-Split Mode : DVR1:1,2,3,4,5,6,7,8,9CH → DVR1:10,11,12,13,14,15,16CH →... DVR2:1,2,3,4,5,6,7,8,9CH***
- ***In Sixteen-Split Mode : DVR1:1,2,3,4,5CH,...,13,14,15,16 → DVR2:1,2,3,4,5CH,...,13,14,15,16CH → DVR3:1,2,3,4,5,...,13,14,15,16CH***

- Monitoring screen condition Information / Selection Button
  - Displays the Split or Monitoring condition of the screen in play.

: When monitoring with Quad Mode

: When monitoring with Single Mode

: Camera Off

Note

The number in the screen icon indicates the screen position in SmartViewer.

- ***: The orange icon indicates the current channel is connected to a camera.***
- ***: The gray icon indicates the current channel is connected to a camera but not displayed in the screen.***
- ***: The black icon with a slash indicates the current channel is not connected to any camera.***

- NEXT button

- When you click the NEXT button with the left mouse button, you can see the channel that follows the currently-monitored channel.
- In Single Mode : 1 → 2 → 3 → 4 → 5 → 6 → 7 → 8 → 9 → 10 → 11 → 12 → 13 → 14 → 15 → 16 → 1 (CH)
- In Quad Mode : 1,2,3,4 → 5,6,7,8 → 9,10,11,12 → 13,14,15,16 → 1,2,3,4 (CH)
- In Nine-Split Mode : 1,2,3,4,5,6,7,8,9 → 10,11,12,13,14,15,16 → 1,2,3,4,5,6,7,8,9 (CH)
- In Sixteen-Split Mode : 1,2,3,4,5,...,13,14,15,16 → 1,2,3,4,5,...,13,14,15,16 (CH)

Note

When connecting many DVRs (SHR-2160) with site, it operates the next action as follows.

- In Single Mode : DVR1:1CH →...→ DVR1:16CH → DVR2:1CH →...→ DVR2:16CH

- In Quad Mode : DVR1:1,2,3,4CH →...→ DVR1:13,14,15,16CH → ...→ DVR2:1,2,3,4,CH →...→ DVR2:13,14,15,16CH

- In Nine-Split Mode : DVR1:1,2,3,4,5,6,7,8,9CH → DVR1:10,11,12,13,14,15,16CH →DVR2:1,2,3,4,5,6,7,8,9CH ...

- In Sixteen-Split Mode : DVR1:1,2,3,4,5,...,13,14,15,16CH → DVR2:1,2,3,4,5,...,13,14,15,16CH →DVR3:1,2,3,4,5,...,13,14,15,16CH

- CALLBACK Button

- If you press CALLBACK, the CALLBACK window will be activated to receive messages.
- Receiving a message, Smart Viewer automatically tries to contact a DVR.
- In the event of Video Loss, Alarm, or Motion Detection, a message is received.

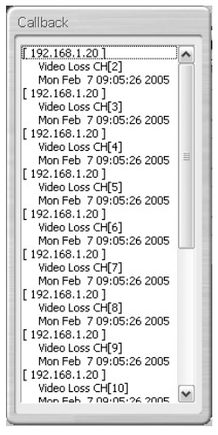

- FAVORITE Button

- If you press FAVORITE, the FAVORITE window will be activated.

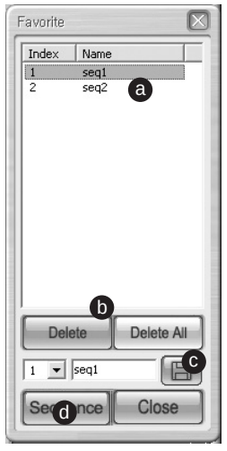

ⓐ If you click the current FAVORITE, the cameras saved in the current setting value will be displayed in the screen.
ⓑ You may delete the selected FAVORITE or all FAVORITE setting values.
ⓒ You may set up a new FAVORITE number and name.
ⓓ Change FAVORITE at the set intervals.

Note

- The FAVORITE button is available only when you contact SITE.

- The FAVORITE information setting value is saved in the Config file even after you are away from the SITE.

- If you change the DVR list composing the SITE from Setup, the FAVORITE setting value will be initialized

- Video Recording Button

  - If you select a channel in the playback and click the "Save" button, the video will be saved in a file format with the extension of *.dvr in a designated folder of your PC.
  - The name of the directory in which an image will be saved, the file name, and the image save length shall be set up at the Setup Mode → Viewer Setup.
  - The video length to be saved can be set from one minute to 10 minutes.
  - The saved video can be played in the Local mode of Search mode.
  - Click the button again to stop recording. However, manual suspension is prohibited for 10 seconds after recording started.

- Audio Volume Control Button

  - You can control the audio volume of channel in the playback or set to mute for it.
  - You can adjust the audio volume from 0 to +10.

- Video Brightness/Contrast Control button

  - Select the channel in the playback and use the control button(+,-) to adjust the brightness or contrast of video.
  - The default value is set to +5.
  - You can adjust the brightness or contrast from 0 to +10.
  - Press the button to recover the default value.

Note

The adjusted Audio volume, brightness, and contrast values will be saved in your PC and remain unchanged even if you terminate Smart Viewer and restart it.

**** OS of Windows 98 or ME do not support this Brightness/Contrast function.***
**** Brightness and contrast adjustments does not work for models SHR-2160/2162/2080/2082.***

- PTZ Camera Control Buttons

  - Select a channel connected to PTZ Camera to control PTZ related functions.
  - PAN Left / Right
  - TILT Up / Down
  - Diagonal Control
  - The channel under PTZ control will be displayed in the center of the button.

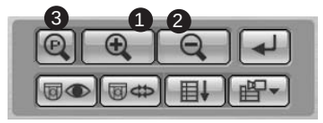

①② ZOOM IN / OUT
③ POWER ZOOM : Click P button to activate POWER ZOOM.
  - POWER ZOOM is a function to zoom in or zoom out the video screen by clicking the screen.
  - After POWER ZOOM is dominant, ZOOM IN / OUT will zoom in or out the video screen.
  - POWER ZOOM Operation Procedure : Click POWER ZOOM → Select ZOOM IN or OUT → Click ZOOM IN or OUT zone in the video screen → ZOOM IN / OUT will be activated in the clicked zone.

Note

The PAN / TILT / ZOOM function is supported to all the cameras.
But, POWER ZOOM is supported only by Samsung Smart Dome Camera, and assured to the operation of TILT below 45°.

① PRESET
- If you press the PRESET button, a window for PRESET setup pops up.

ⓐ If you click the current PRESET number and name, the camera will move to its position.

ⓑ You can delete the selected or all the PRESET setup values.

ⓒ You can set a new PRESET number and name.

Note

① The PRESET function is supported to all the cameras.
You are allowed to set no more than 20 PRESET items.
But, the AD Protocol camera can be set up to 7 PRESET items.

② AUTOPAN : The camera operates reciprocating between Start and End.
③ SCAN : The camera operates circulating the PRESET setup positions.
④ PATTERN : The camera operates following the route that user defined.

Note

The name of ②,③, and ④ functions varies depending on the camera and some cameras do not support these functions.

- The Samsung camera supports all the functions and names.
- The Panasonic camera supports all the functions, but with different names.
② SEQUENCE ③ AUTOPAN ④ SORT
- The PELCO camera supports all the functions, but with different names.
② FRAME SCAN ③ AUTO SCAN ④ PATTERN
- Other cameras do not support the ②AUTOPAN, ③SCAN, and ④PATTERN functions.

- Self Menu Setup of PTZ device

① You can set the function menu in the PTZ camera.

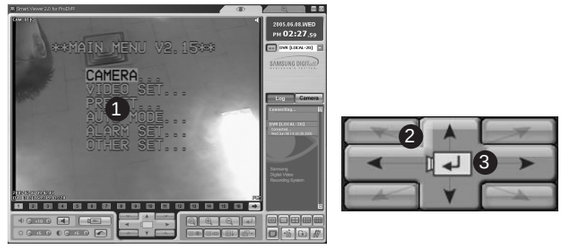

① This is a Menu screen supplied by the camera itself, seen from Viewer.
② Use the ↑/↓/←/→ button for the movement between menus.
③ This is a button for the role of Enter.

Note

The Camera Menu Setup function is supported by Samsung and Panasonic camera only.

⚠ Caution

As far as SHR-2160/2162/2080/2082 uses the PTZ camera control functions, Smart Viewer can not control PTZ Camera.
The PTZ Camera control functions can be used by the user with Admin authority.

9 Search Mode

- The initial screen of search mode
  - The search mode is divided into the remote mode to search and play the SHR-2160/2162/2080/2082 video and the local mode to play *.dvr file saved in the directory designated by your PC.

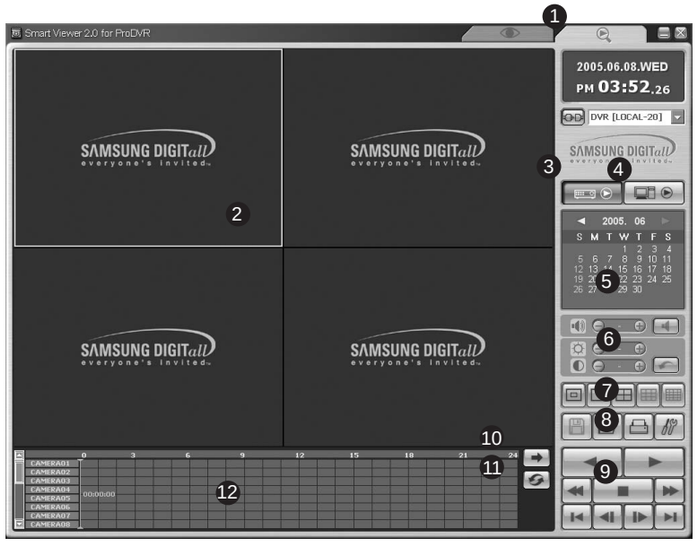

① To change to the search mode for the remote control of video recorded in SHR-2160/2162/2080/2082.
② To show the playback video.
③ To change to the remote mode for the transmission of video recorded in SHR-2160/2162/2080/2082 through network.
④ To change to the local mode for the playback of *.dvr files recorded in your PC.
⑤ Calendar window to select "Year/Month/Day" for search.
⑥ To control the audio volume and video brightness/contrast.
⑦ To change the screen split.
⑧ Button for the Record / Convert File / Print / Setup functions.
⑨ To control the playback of searched video.
⑩ To display the next channel in order.
⑪ To change the channel and DVR or renew the calendar window and Time Line.
⑫ Timeline to display the time information of search date recorded in SHR-2160/2162/2080/2082.

Note

- When connecting to the site, select a DVR to search in the camera connection list.
- When connecting as a user, you are denied to access the search mode.

- DVR(SHR-2160/2162/2080/2082) Selection/Change by contacting SITE
  - Same as "DVR(SHR-2160/2162/2080/2082)/SITE Connection" of the monitoring mode.

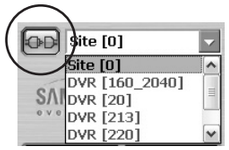

- DVR(SHR-2160/2162/2080/2082) Selection/Change by contacting SITE
  - Select SHR-2160/2162/2080/2082 from the Contact list.
  - SHR-2160/2162/2080/2082 turns black if contacted with the ADMIN authority and turns gray if contacted with the USER authority.
  - Without the ADMIN authority, search is not accessible.



- Remote Mode
  - This mode transfers the video data recorded in SHR-2160/2162/2080/2082 by network for the playback.
  - Up to 4 channels are allowed for simultaneous search and playback.
  - The video information at the time indicated by the timebar will be displayed in the playback screen.

When clicking, it changes to the remote mode.

- Calendar Window

  - If the video data in on-line SHR-2160/2162/2080/2082 was recorded, the date turns red.
  - If you click the date in red, the saved video information is displayed.
  - The currently selected date will be marked with a thick red box.
  - ◄ : Moves to the previous month.
  - ► : Moves to the next month.

- Audio Volume Control, Video Brightness/Contrast Control Buttons

  - Same as the control function of Monitoring Mode
  - Windows 98 or ME does not support this Brightness/Contrast function.
  - Brightness and contrast adjustments does not work for models SHR-2160/2162/2080/2082.

- Screen Split Selection Button
  - Small Sized Single / Single / Quad / Nine-split/ Sixteen split mode

Note

In the remote mode, Nine-split Mode is not available and in the local mode, Quad, Nine split Mode is not available.

- Video Save(Backup) / Video Conversion / Print / Setup

① Video save button
: During the playback(Play/Reverse Play/Fast Forward/Fast Backward),
  - If you select a channel in the playback and click the SAVE button, the video is saved in a file format with the extension of ∗.dvr in a designated folder of your PC.
  - The directory in which an image will be saved, the file name, and the video length to be saved can be set at the Setup Mode → Viewer Setup.
  - The video length to be saved can be set from one minute to 10 minutes.
  - Click the button again to stop recording. However, manual suspension is prohibited for 10 seconds after recording started.

② Backup Button
  - If not playback(Stop), the video save button performs the backup function.
  - If the save button is pressed, the window for backup pops up.

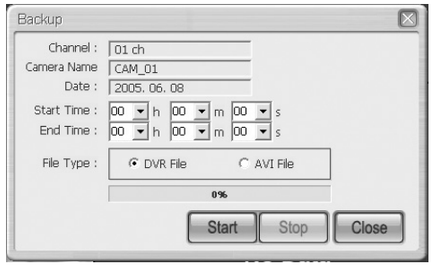

  - Set a Start/End tome for backup and select a file format to save.
  - The backup starts when the "Start" button is clicked. The backup file is saved according to the setting route; Setup → Viewer Setup → Video Recording → Video Location.
  - To stop the backup, click the "Stop" button.

Note

Video saving in the remote mode is available only when the Play/Reverse Play/Fast Forward/Fast Backward button remains pressed down..
The backup function in the remote mode is available at the Stop status.

③ File Converting Button
  - This function converts ∗.dvr files into "∗.jpg" files.

  - Click the "Open" button to select a ∗.dvr file to be converted.
  - Select the JPEG Frame or AVI Video.
  - If the JPEG Frame is selected, the file is converted into the "∗.jpg" file by clicking the "Start" button. The converted "∗.jpg" file is saved according to the setting route Setup → Viewer Setup → File Converting → Jpeg Location.
  - I f the AVI Video is selected, the file is converted into the "∗.avi" file by clicking the "Start" button. The converted "∗.avi" file is saved according to the setting route Setup → Viewer Setup → File Converting → AVI Location
  - Press the "Start" button to convert it to a ∗.Jpg file. Press Setup → Viewer Setup → File Converting to save the converted ∗.jpg file.
  - Click the Stop button to pause the file conversion.

Note

In the case of avi backup, you need the divX codec for playing saved files.
The divX codec can be found at www.divx.com.

④ Print
- This function outputs the screen zone of the playback video which is now being displayed.

⑤ Setup Mode Button
- This button pops up the setup mode window.

● Play Buttons

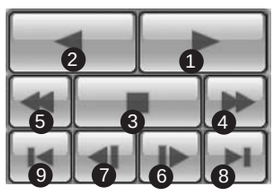

① Play : Play
② Reverse Play : Reverse Play
③ Stop : Stop
④ Fast Forward : Faster Play
⑤ Fast Backward : Faster Reverse Play
⑥ Step Forward : Forward playback per second.
⑦ Step Backward : Reverse playback per second.
⑧ Go to First : Playback of the first image in the time Line
⑨ Go to Last : Playback of the latest(last) image in the time Line

Note

During the play(Play/RevPlay/FF/FB), disconnection or change to the both monitoring mode and local mode is not permitted. Click the Stop button first before the change.

● Time Line
- Displays the time information of video in SHR-2160/2162/2080/2082 selected on the calendar window.
- The normal mode indicates the time information of 24 hours while the Extension mode indicates the time information every 2 hours.

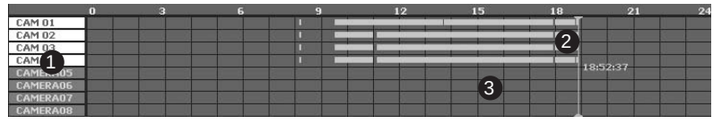

[Normal mode]
① The channels being displayed in the playback screen will be activated in the white background.
② Time Line : The time information of video recorded in SHR-2160/2162/2080/2082P.
③ Time Bar : Displays the current time of video being displayed in the playback screen.

Note

Double click the area closed by the time bar to change to the zoom in mode.
One column of time line represents an hour.
Time Line turns Green(Normal), Red(Panic), Orange(Alarm), Blue(Motion), Yellow(Schedule), or Purple(Video Loss) depending on the recording condition.

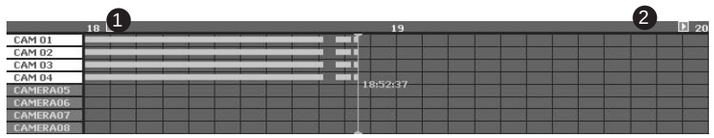

[Zoom In Mode]
① Displays the time line one hour ago.
② Displays the time line one hour later.

Note

Double click again the area closed by the time bar to change to the normal mode.
One column of time line represents 5 minutes.
Time Line turns Green(Normal), Red(Panic), Orange(Alarm), Blue(Motion), Yellow(Schedule), or Purple(Video Loss) depending on the recording condition.

- Next Button

  - Changes the channel as the Next button does in the monitoring mode.

Note

You may not change the channel while playing an image (Play/Reverse Play/Fast Forward/Fast Backward).

- Reload Button

  - Updates the record time information in the calendar window and time line.

- Local Mode
  - Plays *.dvr file saved in the directory of your PC by the Record function.
  - You can search and play only one channel.
  - You are allowed to access it regardless of connecting with SHR-2160/2162/2080/2082.
  - Other functions than the calendar display function are as same as those of the remote mode.
  - The time information of LocalFile will be displayed at the first channel position in the time line together with the file name.

  : Selects a file to be played in the file selection window and changes to the local mode.

Note

Only the *.dvr file saved by the audio activation can be played in the local mode.

Appendix

1 Product Specification

Specs		Details	Notes
CPU		32bit RISC CPU	
Memory		SDRAM : 128MByte Flash : 16 MByte	
Operating System		Embedded OS	
Broadcasting		NTSC System	
Input Voltage		2040-DC 12V, AC 110-220(NTSC), AC 110-230(PAL) 2041/2042 - AC 110-220(NTSC) AC 100-230(PAL)	
Power Usage		2160/2080 : 56W, 2162/2082 : 60W	
Video	Video Input	Composite 16(8) Channel - 1.0Vp-p - 75Ω Hi Z Termination BNC Type Loop Through Out 16(8) Channel - Auto Termination	
	Video Output	Composite 2 Channel - Normal Video Output 1 Channel - Spot Output 1 Channel - BNC Type S-Video 1 Channel - 1.0Vp-p VGA 1 Channel	
Audio	Audio Input	Mono 4 Channel - -5dBm, 600Ω RCA Type	
	Audio Output	Mono 1 Channel - -6dBm RCA Type	
Live Screen	Resolution & Frame Speed	Resolution: 720X480 / 720X576 Frame Rate: 480ips/(240ips) / 400ips/(200ips)	
	Display Mode	Single Split Mode : 4, 6, 7, 8, 9, 16 split Mode sequence Freeze 2 X Zoom	

Specs		Details	Notes
Recording	Compression Method	Video : MPEG4 Audio : ADPCM	
	Resolution & Recording Specs	Resolution: CIF(C) 352X240(NTSC) /352X288(PAL); Half D1(N) 720X288(NTSC) /720X288(PAL) Recording Specs (Picture quality): Very High / High / Standard / Low Highest Image Recording Speed: 30ips(NTSC)/ 25ips(PAL)	When using all 16CH, Max 7.5/6.25 (15/12.5) ips per CH
	Recording Mode	Normal Record → REC Key Programmed Recording → Schedule Table Event Recording -Alarm Detection -Motion Detection -Video Loss -Pre & Post Recording	
	Recording ips	NTSC : 0.9 / 1.9 / 3.8 / 7.5 / 15 / 30ips (True Recording ips: 0.938/1.875/3.75/7.5/15/30ips) PAL : 0.8 / 1.6 / 3.1 / 6.3 / 12.5 / 25ips (True Recording ips: 0.781/1.563/3.125/6.25/12.5/25ips)	
Save	Internal	SHR-2162/2082 : ATA HDD x 3(MAX) MAX HDD Size : 250GB x 3 = 750GB SHR-2160/2080 : ATA HDD x 4(MAX) MAX HDD Size : 250GB x 4 = 1TB	
	External	USB HDD -MAX 1 (Not support USB hub) -MAX HDD Size : 250GB	

Specs		Details	Notes
Play Back	Search Mode	Calendar search Event search - Alarm, Motion, Video Loss Date/time search Initial search Latest search Backup search	
	Resolution & Recording Specs	Resolution / Recording Specs: 4Ch / 16Ch CIF: 30ips(NTSC)/25ips(PAL) / 7.5ips(NTSC)/6.3ips(PAL) Half D1(N): 15ips(NTSC)/12.5ips(PAL) / 3.8ips(NTSC)/3.1ips(PAL)	Total 120/100ips(CIF) 60/50ips (Half D1)
	Display Mode	Single → 1Channel Decoding 16 split (played cameras10-16) 9 split (played cameras 5-9) 4 split (played cameras 2-4) PIP → 1 Channel Decoding + 1Channel Live Triplex 9 split → 8 Channel Live + 1Channel PB Triplex 16 split → 15 Channel Live +1Channel PB	
	Play Mode	Play, Pause, Stop, 2x Digital Zoom Fast Forward/Fast Reverse - 2x, 4x, 8x, 16x, 32x, 64x	
Backup		USB External HDD USV CD/DVD Writer(does not support SHR-2162/2082) USB memory	
Alarm		Input : 16(8) input(N.C, N.O) - 5mA Output 4 Relay Output - 2A/30VDC, 0.5A/125VAC Reset : 1 Input - 5mA	
Network		Ethernet : 10/100 Base T, ADSL(PPPoE), DHCP	
Serial Communication		RS-485 → PTZ Device Control, Remote Control Device	
Other		Infrared Remote Control	
Remote Viewer	PC Detailed Specs	CPU : Pentium III, 1GHz or higher RAM : SDRAM 256MB or higher Graphic Accelerator : Graphic Memory 32MB or higher	
	Supported Operating Systems	DirectX : 8.1 or higher, Win2000, WinXP	
	Function	Live Image Monitoring Mode Local File Search & Play Back Mode Remote File Search & Play Back Mode	
Operating Temperature		0ºC ~ 40ºC	
Storage Temperature		0ºC ~ 40ºC	
Operating Humidity		20% ~ 85% RH	
Storage Humidity		20% ~ 85% RH	
Size		430(W) x 88(H) x 400(D)	
Weight		~6.5kg(2160/2080) / ~7.3kg(2162/2082)	

2 HDD & Peripheral Device Specs

- Internal ATA HDD & I/F External HDD & USB I/F External HDD

Maker	RPM	Capactity	Interface	Buffer	Series Name	Model No	Remark
Samsung	5,400	120 GB	Ultra ATA-133	2MB	SpinPoint V80	SV12.03N	Attached model in shipment
		160 GB				SV1604N	
Maxtor	7,200	120 GB	Ultra ATA-133	2MB	DiamondMax Plus 9	6Y120LO	
	7,200	160 GB				6Y160LO	
	5,400	250 GB			MaxLine II	5A250JO	
Western Digital	7,200	120 GB	EIDE	2MB	WD Prpte 'ge'	WD1200LB	
		160 GB				WD1600LB	

- USB I/F CD-RW, DVD-RW Drive

Maker	RPM	Disk	Remark
Plextor	PX-W5232TU	CD-R CD-RW	
	PX-708UF	CD-R CD-RW DVD+R DVD-R DVD+RW	※ DVD-RW is not supported.
SONY	DRX-700UL		
Liteon	SHOW-1633SX		

- Internal ATA HDD/IEEE1394/USB HDD I/F External HDD

Maker	Model	Remark
P & C	FDISK V2	
IOCELL	ActiveDrive	
	CellDisk	
Stormblue	MICRO X	
ALTech	AnyDrive	
Bayon	Extreme USB Flash disk	
SanDisk	cruzer mini	
PNY	Attache	
GeekSquad		
Lexar	Jump Drive	

3 Outline Drawings

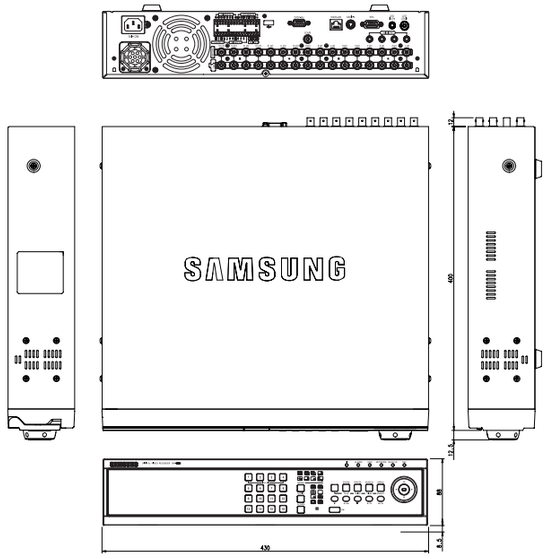

[SHR-2160]

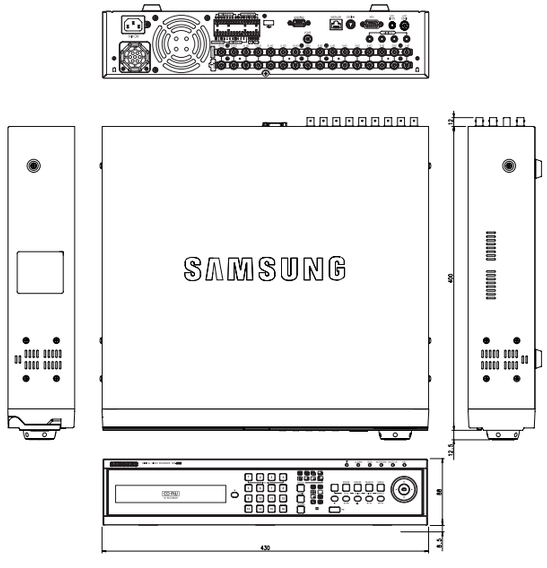

[SHR-2162]

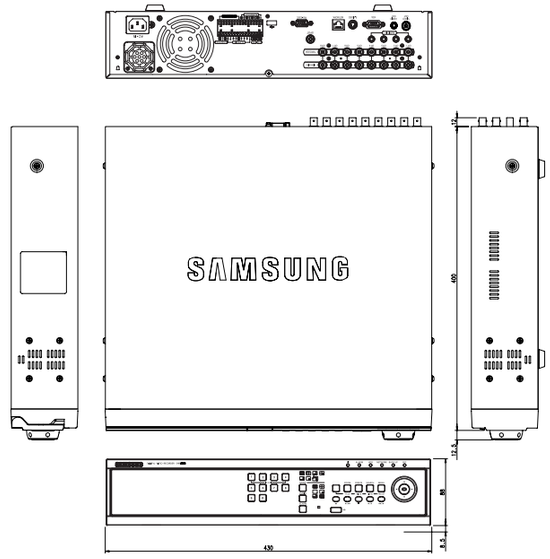

[SHR-2080]

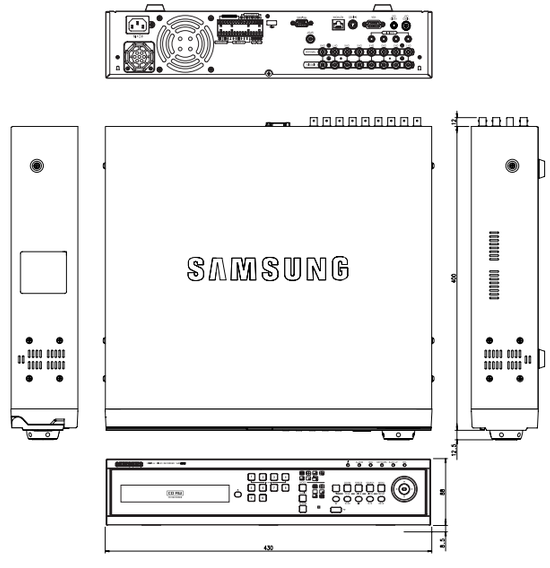

[SHR-2082]

4 Factory Default

This restores the Network information and preset values in SHR-2160/2162/2080/2082 to the original state at the time of factory shipment.

Factory Default will be done as follows;

- Use System / Load Factory Default in MENU or,

- If you hold on to the Mode button in Live Mode and keep pressing the CH5 button for 5 seconds, the system will return to the Factory default condition. The front button repeats the flickering.

Classification	Detailed Items		Factory Setup
System Setup	Time/Date/Language	Date Format	YYYY-MM-DD
		Time Format	24 Hours
		Language	English
		Summer Time	Off
	Password	Password	4321
		Password Lock	On
	HDD Mode	Disk End Mode	Stop
		Disk End Beep	Off
Camera Setup	Camera Config	Video	On
		Audio	On
		Title	CAM_01 ~ CAM_16 (SHR-2160/2162) CAM_01 ~ CAM_8 (SHR-2080/2082)
		Auto Seq.	5 sec
	PTZ Device	ID	Camera No.
		Protocol	None
		Baudrate	9600
		Parity	None
		Data	8
		Stop	1
	Screen Setup	Serial Mode	Half Duplex
		Brightness	50
		Contrast	50
		Color	50

Classification	Detailed Items		Factory Setup
Monitoring	Event Monitoring OSD Display	Duration	Off
		Date	On
		Time	On
		Title	On
		Status	On
	Spot Out Channel		CH1
	Spot Out Event Monitor		Off
	Monitor Out		Composite Out
	Play channel location		Lower right-hand corner
	Multi-channel change		5 seconds
Record Mode Setup	Mode		On
	Video Size		CIF
	Quality		Normal
	Rate		7.5ips(NTSC)/6.3ips(PAL)
Record Schedule	Continuous Recording		Off
	Event Recording		On
Event Record Setup	Event Record Mode	Video Size	CIF
		Video Size	Normal
		Rate	7.5ips(NTSC)/6.3ips(PAL)
		PreEvent	Off
		PostEvent	Off
	Alarm Detection Setup	Sensor State	Off
		Camera	Camera No.
		Alarm-Out	None
		Duration	10 sec
	Motion Detection Setup	M.D State	Off
		Area	All Area
		Sensitivity	High
		Alarm-Out	None
		Duration	10 sec
	Video Loss Detection Setup	Video Loss Detection Setup	Off
		Alarm-Out	None
		Duration	10 sec

5

SHR-2160/2162/2080/2082 Smart Viewer Frame Specification for the Playback

NTSC

FRAME RATE	Viewer Screen Split Mode	VIDEO SIZE	
7.5		Half D1(N)	CIF (C)
	16-split		0.5 frame/sec
	9-split		2.5 frame/sec
	4-split		7.5 frame/sec
	Single		7.5 frame/sec
3.8		Half D1(N)	CIF (C)
	16-split	0.25 frame/sec	1.27 frame/sec
	9-splitt	1.27 frame/sec	3.8 frame/sec
	4-split	3.8 frame/sec	3.8 frame/sec
	Single	3.8 frame/sec	3.8 frame/sec
1.9		Half D1(N)	CIF (C)
	16-split	0.63 frame/sec	1.9 frame/sec
	9-splitt	1.9 frame/sec	1.9 frame/sec
	4-split	1.9 frame/sec	1.9 frame/sec
	Single	1.9 frame/sec	1.9 frame/sec
0.9		Half D1(N)	CIF (C)
	16-split	0.9 frame/sec	0.9 frame/sec
	9-splitt	0.9 frame/sec	0.9 frame/sec
	4-split	0.9 frame/sec	0.9 frame/sec
	Single	0.9 frame/sec	0.9 frame/sec

PAL

FRAME RATE	Viewer Screen Split Mode	VIDEO SIZE	
6.3		Half D1(N)	CIF (C)
	16-split		0.42 frame/sec
	9-split		6.3 frame/sec
	4-split		6.3 frame/sec
	Single		6.3 frame/sec
3.1		Half D1(N)	CIF (C)
	16-split	0.21 frame/sec	3.1 frame/sec
	9-splitt	3.1 frame/sec	3.1 frame/sec
	4-split	3.1 frame/sec	3.1 frame/sec
	Single	3.1 frame/sec	3.1 frame/sec
1.6		Half D1(N)	CIF (C)
	16-split	1.6 frame/sec	1.6 frame/sec
	9-splitt	1.6 frame/sec	1.6 frame/sec
	4-split	1.6 frame/sec	1.6 frame/sec
	Single	1.6 frame/sec	1.6 frame/sec
0.8		Half D1(N)	CIF (C)
	16-split	0.8 frame/sec	0.8 frame/sec
	9-splitt	0.8 frame/sec	0.8 frame/sec
	4-split	0.8 frame/sec	0.8 frame/sec
	Single	0.8 frame/sec	0.8 frame/sec

Note

The play frame specification of Smart Viewer varies on the setup of SHR-2160/2162/2080/2082 Recording Rate and Video Size or the screen split mode of Smart Viewer. The above specification is applicable only when the main body of SHR-2160/2162/2080/2082 is connected with a fast network like LAN. When the main body of SHR-2160/2162/2080/2082 is connected with a slow network like ADSL, the play speed will be 0.5 Frame/sec. In addition, the above specification has been defined to the recommended specification of your PC. If your PC specification is lower than the recommended, the number of frame to played may diminish.

6 Troubleshooting(FAQ)

1. The system power is dead and LED in front of the system does not operate at all.
   - Please check the power connection.
   - Check the power voltage.
   - If all your efforts like above end up with nothing, check or exchange the power supply.

2. Video data remains in the system but some channels displays no video data but turns all blue.
   - Check the image of the camera connected to the system. Improper input of camera input may cause this symptom.
   - Check the camera power supply.
   - Sometimes, you see this symptom when the video data is connected with multisystems and the video signal from the video data distributor in use feels weak. If it's the case, you shall connect the camera images with SHR-2160/2162/2080/2082 DVR directly to check or improve such a symptom.

3. The REC button in front has no effect on turning on REC LED or recording process.
   - Please check the HDD space.
   - Please check the Record Mode setup in MENU. It should be Off.

4. All the front LEDs are in operation but the monitor remains black.
   - Video out may come out differently with the connected monitor. In short, Video Out is set to Composite Output but connected to VGA Input Monitor or vice versa. Then, keep pressing both the "MODE" button and the "0" button on the left for 5 seconds until LED lights on in the order of 1.2.3.4.5 to change the Video Out mode.

5. The front LED blinks and the logo screen repeatedly appears.
   - This symptom may be resulted from failure of HDD connection inside SHR-2160/2162/2080/2082 DVR. Take off the cover and check HDD connection status. If HDD connection has no problem, please consult with the shop where you bought SHR-2160/2162/2080/2082 DVR.

6. You cannot enter MENU by forgotten password.
   - If you forget the password, you shall reset SHR-2160/2162/2080/2082 DVR to the values set at the factory. Keep pressing both the "MODE" button and the "5" button on the left for 5 seconds until LED lights on in the order of 1→2→3→4→5 The password default is "4321".

7. The channel button does not operate in Live.
   - If the current screen is Event Monitoring, the channel button does not operate. Then, press the Alarm button to terminate the current screen and select a channel.

8. The cursor cannot reach Start during Calendar Search.
   - Please check both the channel and the date for play are left checked. Both shall be checked for play with Start. The cursor cannot reach the unrecorded date.

9. Alarm, once issued, keeps being issued though you press the front Alarm button for cancellation.
   - Press the front Menu button to cancel Alarm as follows.
     1) To cancel Event Monitoring Screen : Monitoring- Event Monitoring Duration Off
     2) To cancel Buzzer : Event Record-Alarm (Motion Detection/Video Loss). Alarm-Out.
     3) To cancel Event : Event Record-Alarm (Motion Detection/Video Loss). State Off.

10. Pressing the PTZ button in Live receives no response.
    - Check the Protocol and other setup values through Menu→Camera→PTZ Device match with the PTZ camera.

11. When you connect several IEEE1394 armored HDDs to SHR-2160/2162/2080/2082 DVR through Menu, SHR-2160/2162/2080/2082 DVR cannot recognize all the HDDs.
    - It requires time to recognize several armored HDDs. Please try again in a few minutes. If retrial makes no improvement, HDD could be abnormal. Please exchange the HDD.

12. You cannot connect to SHR-2160/2162/2080/2082 DVR through Smart View.
    - Check if 3 Smart Viewer users are in connection with SHR-2160/2162/2080/2082 DVR. SHR-2160/2162/2080/2082 DVR allows no more than 3 users' connection with Smart Viewer at a time.
    - Check the Network setup of SHR-2160/2162/2080/2082 DVR.
    - Check Network cable connection.
    - When you use DHCP/ADSL(PPPoE) for connection, please check if you get the right SHR-2160/2162/2080/2082 DVR MAC Address.
    - If SHR-2160/2162/2080/2082 DVR is connected to the ADSL network, please check if Bandwidth is set below 600 Kbps. If the Bandwidth for ADSL is set to high, the connection with Smart Viewer may be instable due to the heavy network load as the ADSL speed is low.

13. Smart Viewer in operation is disconnected.
    - If you change time, network setup, HDD format, Default Setup, or HDD attachment or detachment for SHR-2160/2162/2080/2082 DVR, the current Smart Viewer will be automatically disconnected.
    - Check network connection. Smart Viewer, if disconnected from Network, will try reconnection up to 5 times. If it remains unconnected after 5 time trial, it will automatically give up connection.
    - As far as SHR-2160/2162/2080/2082 DVR is connected to the ADSL network, you may be disconnected from Smart Viewer when the network conditions goes bad.

14. The Audio icon of Smart Viewer is left inactivated in the Live mode. Setting Audio to On in the Camera menu of SHR-2160/2162/2080/2082 DVR will make no difference.
    - If your PC has no Audio driver or has some problem with Audio play of an Audio driver, the Audio icon will be inactivated. Please check Audio driver installation status.

15. When selecting the channel which PTZ Camera is connected to in the Live mode of Smart Viewer, click the "Menu Control" button among PTZ setup buttons to enter the Function Menu mode in PTZ Camera, and return from the other channel, the PTZ related buttons have been initialized.
    - PTZ control is available in both Smart Viewer and SHR-2160/2162/2080/2082 DVR. Other user might control PTZ for SHR-2160/2162/2080/2082 DVR to terminate the PTZ Camera Menu or Auto Pan/Scan/Pattern motions while you select the other channel. This may cause the initialization.

16. No Time Bar in the Search
    - Time Line can be converted into 2 modes, General(24 Hour Display) and Extension(2 Hour Display). In the Extension mode, Time Bar may not be seen in the current time. Please enter the General mode or click the LEFT or RIGHT button to search Time Bar.

SAMSUNG

Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

AB68-00517B